Technical Information **Proline Promass E 500**

Coriolis flowmeter



The flowmeter with minimized total cost of ownership, as remote version with up to $4\ \text{I/Os}$

Application

- Measuring principle operates independently of physical fluid properties such as viscosity or density
- Accurate measurement of liquids and gases for a wide range of standard applications

Device properties

- Compact dual-tube sensor
- Medium temperature up to +150 °C (+302 °F)
- Process pressure: up to 100 bar (1450 psi)
- Remote version with up to 4 I/Os
- Backlit display with touch control and WLAN access
- Standard cable between sensor and transmitter

Your benefits

- Cost-effective multi-purpose device; an alternative to conventional volumetric flowmeters
- Fewer process measuring points multivariable measurement (flow, density, temperature)
- Space-saving installation no inlet/outlet run needs
- Full access to process and diagnostic information numerous, freely combinable I/Os and fieldbuses
- Reduced complexity and variety freely configurable I/O functionality
- Integrated verification Heartbeat Technology



Table of contents

About this document	4	Storage temperature	58
Symbols used	4	Climate class	58
		Degree of protection	58
Function and system design	5	Vibration resistance	58
Function and system design		Shock resistance	58
Measuring principle		Shock resistance	58
Measuring system		Interior cleaning	58
Equipment architecture		Electromagnetic compatibility (EMC)	58
Safety	9		
·		Process	59
Input		Medium temperature range	
Measured variable		Density	
Measuring range		Pressure-temperature curves	
Operable flow range		Sensor housing	
Input signal	12	Rupture disk	
		Flow limit	
Output	14	Pressure loss	
Output and input variants	14	System pressure	
Output signal	15	Thermal insulation	64
Signal on alarm	19	Heating	
Ex connection data	21	Vibrations	
Low flow cut off	22		
Galvanic isolation	22	Machanical construction	6 E
Protocol-specific data	23	Mechanical construction	65
•			
Down gunnly	27	Dimensions in US units	
Power supply		Weight	
Terminal assignment		Materials	
Device plugs available		Process connections	
Pin assignment, device plug		Surface roughness	93
Supply voltage	31		
Power consumption		Operability	93
Current consumption		Operating concept	
Power supply failure	31 32	Languages	93
Electrical connection	42	Local operation	94
terminals		Remote operation	94
Cable entries	43		100
Cable specification		Network integration	101
Cable specification	4)	Supported operating tools	102
		HistoROM data management	103
	48		
Reference operating conditions	48	Certificates and approvals	105
Maximum measured error	48	CE mark	105
Repeatability	50	C-Tick symbol	105
Response time	50	Ex approval	105
Influence of ambient temperature	50	Sanitary compatibility	108
Influence of medium temperature			108
Influence of medium pressure	51	Functional safety	108
Design fundamentals	51	HART certification	108
		FOUNDATION Fieldbus certification	108
Installation	52	Certification PROFIBUS	108
Mounting location	52	EtherNet/IP certification	109
Orientation	53	Certification PROFINET	109
Inlet and outlet runs	54		109
Mounting the transmitter housing	55		109
Special mounting instructions	56	Additional certification	109
-		Other standards and guidelines	109
Environment	58		
Ambient temperature range	58	Ordering information	110
-	- 1	-	

Application packages	110
Diagnostics functions	110
Heartbeat Technology	11
Concentration	11
Petroleum	11
OPC-UA server	11
Accessories	11:
Device-specific accessories	112
Communication-specific accessories	
Service-specific accessories	114
System components	114
Supplementary documentation	11!
Standard documentation	
Device-dependent additional documentation	116
Registered trademarks	116

About this document

$Symbols\ used$

Electrical symbols

Symbol	Meaning	
	Direct current	
~	Alternating current	
$\overline{}$	Direct current and alternating current	
±	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.	
	Protective Earth (PE) A terminal which must be connected to ground prior to establishing any other connections.	
	The ground terminals are situated inside and outside the device: Inner ground terminal: Connects the protectiv earth to the mains supply. Outer ground terminal: Connects the device to the plant grounding system.	

Communication symbols

Symbol	Meaning
	Wireless Local Area Network (WLAN) Communication via a wireless, local network.
•	LED Light emitting diode is off.
<u> </u>	LED Light emitting diode is on.
	LED Light emitting diode is flashing.

Symbols for certain types of information

Symbol	Meaning
✓	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
Ţ <u>i</u>	Reference to documentation.
A=	Reference to page.
	Reference to graphic.
	Visual inspection.

Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area
×	Safe area (non-hazardous area)
≋➡	Flow direction

Function and system design

Measuring principle

The measuring principle is based on the controlled generation of Coriolis forces. These forces are always present in a system when both translational and rotational movements are superimposed.

 $F_c = 2 \cdot \Delta m (v \cdot \omega)$

 F_c = Coriolis force

 $\Delta m = moving mass$


 ω = rotational velocity

 $v = radial \ velocity \ in \ rotating \ or \ oscillating \ system$

The amplitude of the Coriolis force depends on the moving mass Δm , its velocity v in the system and thus on the mass flow. Instead of a constant rotational velocity ω , the sensor uses oscillation.

In the sensor, two parallel measuring tubes containing flowing fluid oscillate in antiphase, acting like a tuning fork. The Coriolis forces produced at the measuring tubes cause a phase shift in the tube oscillations (see illustration):

- At zero flow (when the fluid is at a standstill) the two tubes oscillate in phase (1).
- Mass flow causes deceleration of the oscillation at the inlet of the tubes (2) and acceleration at the outlet (3).

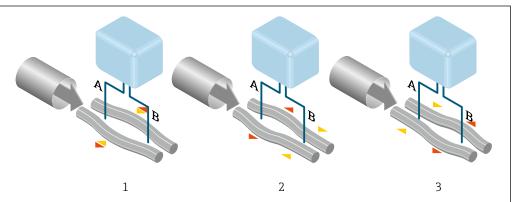

A002885

The phase difference (A-B) increases with increasing mass flow. Electrodynamic sensors register the tube oscillations at the inlet and outlet. System balance is ensured by the antiphase oscillation of the two measuring tubes. The measuring principle operates independently of temperature, pressure, viscosity, conductivity and flow profile.

Density measurement

The measuring tube is continuously excited at its resonance frequency. A change in the mass and thus the density of the oscillating system (comprising measuring tube and fluid) results in a corresponding, automatic adjustment in the oscillation frequency. Resonance frequency is thus a function of medium density. The microprocessor utilizes this relationship to obtain a density signal.

Volume measurement

Together with the measured mass flow, this is used to calculate the volume flow.

Temperature measurement


The temperature of the measuring tube is determined in order to calculate the compensation factor due to temperature effects. This signal corresponds to the process temperature and is also available as an output signal.

Measuring system

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.

Transmitter

Two versions of the transmitter are available.

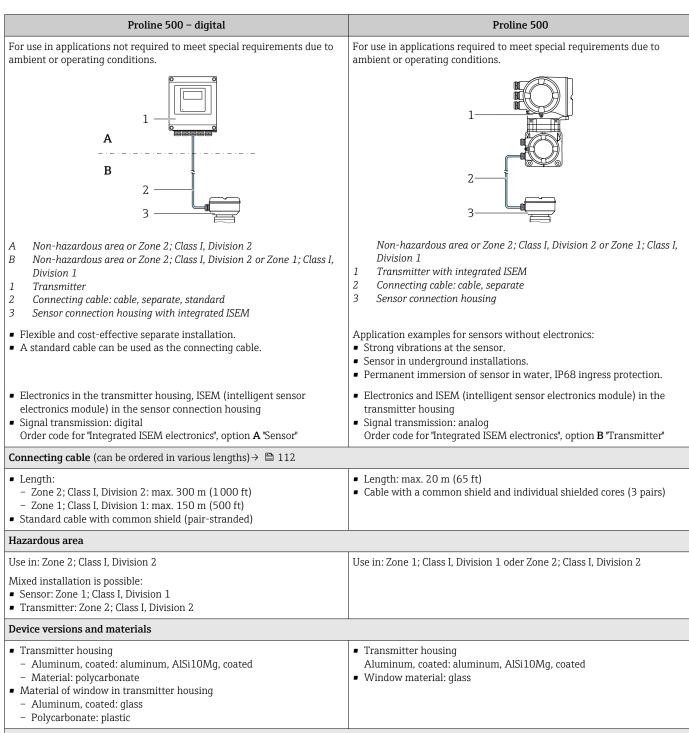


Configuration


- External operation via 4-line, backlit, graphic local display with touch control and guided menus ("Make-it-run" wizards) for application-specific
 commissioning.
- Via service interface or WLAN interface:
 - Operating tools (e.g. FieldCare, DeviceCare, SmartBlue app)
 - Web server (access via Web browser, e.g. Microsoft Internet Explorer, Microsoft Edge)

Sensor connection housing


Different versions of the connection housing are available.

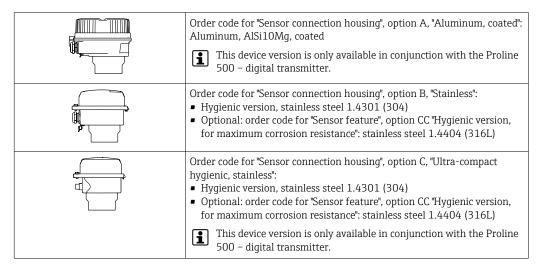

Sensor

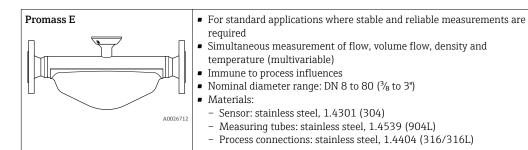

Equipment architecture

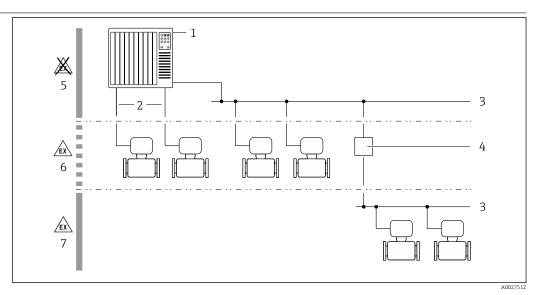

■ 1 Possibilities for integrating measuring devices into a system

- 1 Control system (e.g. PLC)
- 2 Connecting cable (0/4 to 20 mA HART etc.)
- 3 Fieldbus
- 4 Segment coupler
- 5 Non-hazardous area
- 6 Hazardous area: Zone 2; Class I, Division 2
- 7 Hazardous area: Zone 1; Class I, Division 1

8

Safety

IT security

Our warranty is valid only if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the device and associated data transfer, must be implemented by the operators themselves in line with their security standards.

Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section.

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\rightarrow \stackrel{\text{\tiny le}}{=} 9$	Not enabled.	On an individual basis following risk assessment.
Access code (also applies for Web server login or FieldCare connection) → 🖺 9	Not enabled (0000).	Assign a customized access code during commissioning.
WLAN (order option in display module)	Enabled.	On an individual basis following risk assessment.
WLAN security mode	Enabled (WPA2- PSK)	Do not change.
WLAN passphrase (password) → 🖺 10	Serial number	Assign a customized access code during commissioning.
WLAN mode	Access Point	On an individual basis following risk assessment.
Web server→ 🖺 10	Enabled.	On an individual basis following risk assessment.
CDI-RJ45 service interface → 🖺 10	-	On an individual basis following risk assessment.

Protecting access via hardware write protection

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the motherboard). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered.

Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

User-specific access code

Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.

■ WLAN passphrase

The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.

Infrastructure mode

When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.

User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code.

WLAN passphrase: Operation as WLAN access point

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface, which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter.

Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network kev.
- The user is responsible for the management and careful handling of the access code and network key.

Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server. The connection is via the service interface (CDI-RJ45) or the WLAN interface. For device versions with the EtherNet/IP and PROFINET communication protocols, the connection can also be established via the terminal connection for signal transmission with EtherNet/IP or PROFINET (RJ45 connector).

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.



Access via OPC-UA



The device can communicate with OPC UA clients using the "OPC UA Server" application package.

The OPC UA server integrated in the device can be accessed via the WLAN access point using the WLAN interface - which can be ordered as an optional extra - or the service interface (CDI- RJ45) via Ethernet network. Access rights and authorization as per separate configuration.

The following Security Modes are supported as per the OPC UA Specification (IEC 62541):

- None
- Basic128Rsa15 signed
- Basic128Rsa15 signed and encrypted

Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Device-specific functions guarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.



Input

Measured variable

Direct measured variables

- Mass flow
- Density
- Temperature

Calculated measured variables

- Volume flow
- Corrected volume flow
- Reference density

Measuring range

Measuring ranges for liquids

DN		Measuring range full scale values $\dot{m}_{min(F)}$ to $\dot{m}_{max(F)}$	
[mm]	[in]	[kg/h]	[lb/min]
8	3/8	0 to 2 000	0 to 73.50
15	1/2	0 to 6 500	0 to 238.9
25	1	0 to 18000	0 to 661.5
40	11/2	0 to 45 000	0 to 1654
50	2	0 to 70 000	0 to 2 573
80	3	0 to 180 000	0 to 6615

Measuring range for gases

The full scale value depends on the density and the sound velocity of the gas used and can be calculated with the formula below:

 $\dot{m}_{max(G)} = minimum (\dot{m}_{max(F)} \cdot \rho_G : x ; \rho_G \cdot c_G \cdot \pi/2 \cdot (d_i)^2 \cdot 3600)$

m _{max(G)}	Maximum full scale value for gas [kg/h]	
m _{max(F)}	Maximum full scale value for liquid [kg/h]	
$\dot{m}_{\max(G)} < \dot{m}_{\max(F)}$	$\dot{m}_{\mathrm{max}(G)}$ can never be greater than $\dot{m}_{\mathrm{max}(F)}$	
$ ho_{G}$	Gas density in [kg/m³] at operating conditions	
х	Constant dependent on nominal diameter	
c_{G}	Sound velocity (gas) [m/s]	
d _i	Measuring tube internal diameter [m]	

DN		х
[mm]	[in]	[kg/m³]
8	3/8	85
15	1/2	110
25	1	125
40	1½	125
50	2	125
80	3	155

To calculate the measuring range, use the *Applicator* sizing tool $\rightarrow~\cong~114$

Calculation example for gas

- Sensor: Promass E, DN 50
- Gas: Air with a density of 60.3 kg/m^3 (at $20 \,^{\circ}\text{C}$ and $50 \,^{\circ}\text{bar}$)
- Measuring range (liquid): 70 000 kg/h
- $x = 125 \text{ kg/m}^3 \text{ (for Promass E, DN 50)}$

Maximum possible full scale value:

 $\dot{m}_{max(G)} = \dot{m}_{max(F)} \cdot \rho_G : x = 70\,000 \text{ kg/h} \cdot 60.3 \text{ kg/m}^3 : 125 \text{ kg/m}^3 = 33\,800 \text{ kg/h}$

Recommended measuring range

"Flow limit" section $\rightarrow \triangleq 63$

Operable flow range

Over 1000:1.

Flow rates above the preset full scale value do not override the electronics unit, with the result that the totalizer values are registered correctly.

Input signal

Input and output versions

→ 🗎 14

External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow for gases, the automation system can continuously write different measured values to the measuring device:

- Operating pressure to increase accuracy (Endress+Hauser recommends the use of a pressure measuring device for absolute pressure, e.g. Cerabar M or Cerabar S)
- Medium temperature to increase accuracy (e.g. iTEMP)
- Reference density for calculating the corrected volume flow for gases

It is recommended to read in external measured values to calculate the corrected volume flow.

HART protocol

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

Current input

The measured values are written from the automation system to the measuring device via the current input $\rightarrow \blacksquare 12$.

Digital communication

The measured values can be written from the automation system to the measuring via:

- FOUNDATION Fieldbus
- PROFIBUS DP
- PROFIBUS PA
- Modbus RS485
- EtherNet/IP
- PROFINET

Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)	
Current span	 4 to 20 mA (active) 0/4 to 20 mA (passive) 	
Resolution	1 μA	
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)	
Maximum input voltage	≤ 30 V (passive)	

Open-circuit voltage	≤ 28.8 V (active)
Possible input variables	PressureTemperatureDensity

Status input

Maximum input values	■ DC -3 to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$
Response time	Adjustable: 5 to 200 ms
Input signal level	 Low signal: DC -3 to +5 V High signal: DC 12 to 30 V
Assignable functions	 Off Reset the individual totalizers separately Reset all totalizers Flow override

Output

Output and input variants

Depending on the option selected for output/input 1, different options are available for the other outputs and inputs. Only one option can be selected for each output/input 1 to 4. The table must be read vertically (\downarrow) .

Example: If the option BA "4-20 mA HART" was selected for output/input 1, one of the options A, B, D, E, F, H, I or J is available for output 2, and one of the options A, B, D, E, F, H, I or J is available for output 3 and 4.

Order code for "Output; input 1" (020) →		Possible options								
Current output 4 to 20 mA HART	BA									
Current output 4 to 20 mA HART Ex i	4	CA								
FOUNDATION Fieldbus		4	SA							
FOUNDATION Fieldbus Ex i			4	TA						
PROFIBUS DP				4	LA					
PROFIBUS PA					+	GA				
PROFIBUS PA Ex i						4	НА			
Modbus RS485							\	MA		
EtherNet/IP 2-port switch integrated								\	NA	
PROFINET 2-port switch integrated									4	RA
Order code for "Output; input 2" (021) →	\	\	\	\	\	\	\	\	4	\
Not assigned	A	Α	Α	Α	Α	Α	Α	Α	Α	Α
Current output 0/4 to 20 mA	В		В		В	В		В	В	В
Current output 0/4 to 20 mA (Ex i)		С		С			С			
User configurable input/output 1)	D		D		D	D		D	D	D
Pulse/frequency/switch output	Е		Е		Е	Е		Е	Е	E
Double pulse output ²⁾	F							F		
Pulse/frequency/switch output (Ex i)		G		G			G			
Relay output	Н		Н		Н	Н		Н	Н	Н
Current input 0/4 to 20 mA	I		I		I	I		I	I	I
Status input	J		J		J	J		J	J	J
Order code for "Output; input 3" (022), "Output; input 4" (023) $^{3)} \rightarrow$	\	\	+	\	\	\	\	\	4	\
Not assigned	A	Α	Α	Α	Α	Α	Α	A	Α	Α
Current output 0/4 to 20 mA	В				В			В	В	В
Current output 0/4 to 20 mA (Ex i)		С								
User configurable input/output	D				D			D	D	D
Pulse/frequency/switch output	Е				Е			Е	Е	Е
Double pulse output (slave) 4)	F							F		
Pulse/frequency/switch output (Ex i)		G								
Relay output	Н				Н			н	Н	Н
Current input 0/4 to 20 mA	I				I			I	I	I
Status input	J				J			J	J	J

- 2) If double pulse output (F) is selected for output/input 2 (021), only the double pulse output (F) option is available for selection for output/input 3 (022).
- 3) The order code for "Output; input 4" (023) is only available for the Proline 500 digital transmitter.
- 4) The double pulse output (F) option is not available for input/output 4.

Output signal

HART current output

) mA (active/passive)
999 s
flow ature acy 0 ag 0 otions increases if the measuring device has one or more

PROFIBUS PA

PROFIBUS PA	In accordance with EN 50170 Volume 2, IEC 61158-2 (MBP), galvanically isolated
Data transmission	31.25 kbit/s
Current consumption	10 mA 16 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

PROFIBUS DP

Signal encoding	NRZ code
Data transfer	9.6 kBaud12 MBaud

EtherNet/IP

Standards	In accordance with IEEE 802.3
-----------	-------------------------------

PROFINET

Standards	In accordance with IEEE 802.3
-----------	-------------------------------

FOUNDATION Fieldbus

FOUNDATION Fieldbus	H1, IEC 61158-2, galvanically isolated
Data transfer	31.25 kbit/s

Current consumption	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

Modbus RS485

Physical interface	RS485 in accordance with EIA/TIA-485 standard
Terminating resistor	Integrated, can be activated via DIP switches

Current output 0/4 to 20 mA

Current output	0/4 to 20 mA
Maximum output values	22.5 mA
Current span	Can be set to: 4 to 20 mA (active) 0/4 to 20 mA (passive) Ex-i, passive
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700Ω
Resolution	0.38 μΑ
Damping	Adjustable: 0.07 to 999 s
Assignable measured variables	 Mass flow Volume flow Corrected volume flow Density Reference density Temperature Electronic temperature Oscillation frequency 0 Oscillation damping 0 Signal asymmetry Exciter current 0 The range of options increases if the measuring device has one or more application packages.

Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Open collector
	Can be set to: Active
	Passive
	Ex-i, passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)

Open-circuit voltage	DC 28.8 V (active)
Pulse width	Adjustable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Adjustable
Assignable measured variables	 Mass flow Volume flow Corrected volume flow
Frequency output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Adjustable: end value frequency 2 to $10000Hz$ (f $_{max}$ = $12500Hz$)
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	 Mass flow Volume flow Corrected volume flow Density Reference density Temperature Electronic temperature Oscillation frequency 0 Oscillation damping 0 Signal asymmetry Exciter current 0 The range of options increases if the measuring device has one or more application packages.
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	 Off On Diagnostic behavior Limit value Mass flow Volume flow Corrected volume flow Density Reference density Temperature Totalizer 1-3 Flow direction monitoring Status Partially filled pipe detection Low flow The range of options increases if the measuring device has one or more application packages.

Double pulse output

Function	Double pulse
Version	Open collector
	Can be set to: • Active
	Passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Output frequency	Adjustable: 0 to 1000 Hz
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	 Mass flow Volume flow Corrected volume flow Density Reference density Temperature The range of options increases if the measuring device has one or more application packages.

Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: NO (normally open), factory setting NC (normally closed)
Maximum switching capacity (passive)	 DC 30 V, 0.1 A AC 30 V, 0.5 A
Assignable functions	■ Off ■ On ■ Diagnostic behavior ■ Limit value ■ Mass flow ■ Volume flow ■ Corrected volume flow ■ Density ■ Reference density ■ Temperature ■ Totalizer 1-3 ■ Flow direction monitoring ■ Status ■ Partially filled pipe detection ■ Low flow The range of options increases if the measuring device has one or more application packages.

User configurable input/output

 $\textbf{One} \ specific input or output is assigned to a user-configurable input/output (configurable I/O) during device commissioning.$

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

Signal on alarm

Depending on the interface, failure information is displayed as follows:

HART current output

Device diagnostics	Device condition can be read out via HART Command 48
--------------------	--

PROFIBUS PA

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
Error current FDE (Fault Disconnection Electronic)	0 mA

PROFIBUS DP

Status and alarm	Diagnostics in accordance with PROFIBUS PA Profile 3.02
messages	

EtherNet/IP

Device diagnostics	Device condition can be read out in Input Assembly
--------------------	--

PROFINET

Device diagnostics	According to "Application Layer protocol for decentralized periphery", Version 2.3
--------------------	--

FOUNDATION Fieldbus

Status and alarm messages	Diagnostics in accordance with FF-891
Error current FDE (Fault Disconnection Electronic)	0 mA

Modbus RS485

Failure mode	Choose from:
	■ NaN value instead of current value
	■ Last valid value

Current output 0/4 to 20 mA

4 to 20 mA

Failure mode	Choose from: 4 to 20 mA in accordance with NAMUR recommendation NE 43 4 to 20 mA in accordance with US Min. value: 3.59 mA Max. value: 22.5 mA Freely definable value between: 3.59 to 22.5 mA Actual value Last valid value
--------------	---

0 to 20 mA

Failure mode	Choose from:
	■ Maximum alarm: 22 mA
	■ Freely definable value between: 0 to 20.5 mA

Pulse/frequency/switch output

Pulse output	
Failure mode	Choose from: Actual value No pulses
Frequency output	
Failure mode	Choose from: Actual value O Hz Defined value (f max 2 to 12 500 Hz)
Switch output	
Failure mode	Choose from: Current status Open Closed

Relay output

Failure mode	Choose from: Current status
	OpenClosed

Local display

Plain text display	With information on cause and remedial measures	
Backlight	Red backlighting indicates a device error.	



Status signal as per NAMUR recommendation NE 107

Interface/protocol

- Via digital communication:
 - HART protocol
 - FOUNDATION Fieldbus
 - PROFIBUS PA
 - PROFIBUS DP
 - Modbus RS485
 - EtherNet/IP
 - PROFINET
- Via service interface
 - CDI-RJ45 service interface
 - WLAN interface

Plain text display	With information on cause and remedial measures
--------------------	---

Web server

Plain text display	With information on cause and remedial measures
--------------------	---

Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes
	The following information is displayed depending on the device version: Supply voltage active Data transmission active Device alarm/error has occurred EtherNet/IP network available EtherNet/IP connection established PROFINET network available PROFINET connection established PROFINET blinking feature

Ex connection data

Safety-related values

Order code for "Output; input 1"	Output type	Safety-related values "Output; input 1"		
		26 (+)	27 (-)	
Option BA	Current output 4 to 20 mA HART	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option GA	PROFIBUS PA	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option LA	PROFIBUS DP	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option MA	Modbus RS485	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$		
Option SA	FOUNDATION Fieldbus	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option NA	EtherNet/IP	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option RA	PROFINET	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		

Order code for	Output type	Output type Safety-related values					
"Output; input 2"; "Output; input 3" "Output; input 4"		Output; input 2		2 Output; input 3		Output; input	
		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Option B	Current output 4 to 20 mA	$\begin{array}{c} U_{N} = 30 \ V_{DC} \\ U_{M} = 250 \ V_{AC} \end{array}$					
Option D	User configurable input/output	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$					
Option E	Pulse/frequency/switch output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$					
Option F	Double pulse output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$					
Option H	Relay output	$U_{N} = 30 V_{DC}$ $I_{N} = 100 \text{ mA}_{DC} / 500 \text{ mA}_{AC}$ $U_{M} = 250 V_{AC}$					

Order code for	Output type	Safety-related values			s		
"Output; input 2"; "Output; input 3" "Output; input 4"		Output; input 2		out; input 2 Output; input 3		Output; input 4 1)	
1 / 1		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Option I	Current input 4 to 20 mA	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$					
Option J	Status input	$U_{\rm N} = 30$ $V_{\rm M} = 250$	V _{DC}) V _{AC}				

1) The order code "Output; input 4" is only available for the Proline 500 – digital transmitter.

Intrinsically safe values

Order code for "Output; input 1"	Output type	Intrinsically safe values "Output; input 1"			
		26 (+)	27 (-)		
Option CA	Current output 4 to 20 mA HART Ex i	$\begin{split} &U_{i} = 30 \text{ V} \\ &l_{i} = 100 \text{ mA} \\ &P_{i} = 1.25 \text{ W} \\ &L_{i} = 0 \\ &C_{i} = 0 \end{split}$			
Option HA	PROFIBUS PA Ex i	Ex ia $^{1)}$ $U_i = 30 \text{ V}$ $l_i = 570 \text{ mA}$ $P_i = 8.5 \text{ W}$ $L_i = 10 \mu\text{H}$ $C_i = 5 \text{ nF}$	Ex ic $^{2)}$ $U_i = 32 \text{ V}$ $l_i = 570 \text{ mA}$ $P_i = 8.5 \text{ W}$ $L_i = 10 \mu\text{H}$ $C_i = 5 \text{ nF}$		
Option TA	FOUNDATION Fieldbus Ex i	Ex ia $^{1)}$ $U_i = 30 \text{ V}$ $l_i = 570 \text{ mA}$ $P_i = 8.5 \text{ W}$ $L_i = 10 \mu\text{H}$ $C_i = 5 \text{ nF}$	Ex ic $^{2)}$ $U_i = 32 \text{ V}$ $l_i = 570 \text{ mA}$ $P_i = 8.5 \text{ W}$ $L_i = 10 \mu\text{H}$ $C_i = 5 \text{ nF}$		

- 1) Only available for the Zone 1; Class I, Division 1 version
- Only available for the Zone 2; Class I, Division 2 version and only for the Proline 500 digital transmitter

Order code for	Output type Intrinsically safe values or NIFW val				FW value	s	
"Output; input 2"; "Output; input 3"		Output; input 2 Output		Output; input 2 Output; input 3		Output; input 4 1)	
"Output; input 4"		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Option C	Current output 4 to 20 mA Ex i	$\begin{aligned} &U_i = 30 \text{ V} \\ &l_i = 100 \text{ r} \\ &P_i = 1.25 \\ &L_i = 0 \\ &C_i = 0 \end{aligned}$	nA				
Option G	Pulse/frequency/switch output Ex i	$\begin{split} &U_{i} = 30 \text{ V} \\ &I_{i} = 100 \text{ mA} \\ &P_{i} = 1.25 \text{ W} \\ &L_{i} = 0 \\ &C_{i} = 0 \end{split}$					

1) The order code "Output; input 4" is only available for the Proline 500 – digital transmitter.

Low flow cut off

The switch points for low flow cut off are user-selectable.

Galvanic isolation

The outputs are galvanically isolated from one another and from earth (PE).

Protocol-specific data

HART

Manufacturer ID	0x11
Device type ID	0x3B
HART protocol revision	7
Device description files (DTM, DD)	Information and files under: www.endress.com
HART load	Min. 250 Ω
System integration	Information on system integration: Operating Instructions → 🗎 115. • Measured variables via HART protocol • Burst Mode functionality

PROFIBUS PA

Manufacturer ID	0x11					
Ident number	0x156D					
Profile version	3.02					
Device description files (GSD, DTM, DD)	Information and files under: www.endress.com www.profibus.org					
Supported functions	Identification & Maintenance Simplest device identification on the part of the control system and nameplate PROFIBUS upload/download Reading and writing parameters is up to ten times faster with PROFIBUS upload/download Condensed status Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur					
Configuration of the device address	 DIP switches on the I/O electronics module Local display Via operating tools (e.g. FieldCare) 					
Compatibility with earlier model	If the device is replaced, the measuring device Promass 500 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promass 500 GSD file.					
	Earlier models: Promass 80 PROFIBUS PA ID No.: 1528 (hex) Extended GSD file: EH3x1528.gsd Standard GSD file: EH3_1528.gsd Promass 83 PROFIBUS PA ID No.: 152A (hex) Extended GSD file: EH3x152A.gsd Standard GSD file: EH3_152A.gsd					
	Description of the function scope of compatibility: Operating Instructions $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $					
System integration	Information regarding system integration: Operating Instructions $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $					
	 Cyclic data transmission Block model Description of the modules 					

PROFIBUS DP

Manufacturer ID	0x11
Ident number	0x156F

Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under: ■ www.endress.com On the product page for the device: Documents/Software → Device drivers ■ www.profibus.org
Supported functions	Identification & Maintenance Simplest device identification on the part of the control system and nameplate PROFIBUS upload/download Reading and writing parameters is up to ten times faster with PROFIBUS upload/download Condensed status Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	 DIP switches on the I/O electronics module Via operating tools (e.g. FieldCare)
System integration	Information regarding system integration: Operating Instructions → 🖺 115. Cyclic data transmission Block model Description of the modules

EtherNet/IP

Protocol	 The CIP Networks Library Volume 1: Common Industrial Protocol The CIP Networks Library Volume 2: EtherNet/IP Adaptation of CIP 					
Communication type	■ 10Base-T ■ 100Base-TX					
Device profile	Generic device (product type: 0x2B)					
Manufacturer ID	0x11					
Device type ID	0x103B					
Baud rates	Automatic ¹⁰ / ₁₀₀ Mbit with half-duplex and full-duplex detection					
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs					
Supported CIP connections	Max. 3 connections					
Explicit connections	Max. 6 connections					
I/O connections	Max. 6 connections (scanner)					
Configuration options for measuring device	 DIP switches on the electronics module for IP addressing Manufacturer-specific software (FieldCare) Add-on Profile Level 3 for Rockwell Automation control systems Web browser Electronic Data Sheet (EDS) integrated in the measuring device 					
Configuration of the EtherNet interface	 Speed: 10 MBit, 100 MBit, auto (factory setting) Duplex: half-duplex, full-duplex, auto (factory setting) 					
Configuration of the device address	 DIP switches on the electronics module for IP addressing (last octet) DHCP Manufacturer-specific software (FieldCare) Add-on Profile Level 3 for Rockwell Automation control systems Web browser EtherNet/IP tools, e.g. RSLinx (Rockwell Automation) 					
Device Level Ring (DLR)	Yes					
System integration	Information regarding system integration: Operating Instructions $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $					
	Cyclic data transmissionBlock modelInput and output groups					

PROFINET

Protocol	"Application layer protocol for decentral device periphery and distributed					
	automation", version 2.3					
Communication type	100 MBit/s					
Conformity class	Conformance Class B					
Netload Class	Netload Class II					
Baud rates	Automatic 100 Mbit/s with full-duplex detection					
Cycle times	From 8 ms					
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs					
Media Redundancy Protocol (MRP)	Yes					
Device profile	Application interface identifier 0xF600 Generic device					
Manufacturer ID	0x11					
Device type ID	0x843B					
Device description files (GSD, DTM, DD)	Information and files under: ■ www.endress.com On the product page for the device: Documents/Software → Device drivers ■ www.profibus.org					
Supported connections	 1 x AR (IO Controller AR) 1 x AR (IO-Supervisor Device AR connection allowed) 1 x Input CR (Communication Relation) 1 x Output CR (Communication Relation) 1 x Alarm CR (Communication Relation) 					
Configuration options for measuring device	 DIP switches on the electronics module, for device name assignment (last part) Manufacturer-specific software (FieldCare, DeviceCare) Web browser Device master file (GSD), can be read out via the integrated Web server of the measuring device 					
Configuration of the device name	 DIP switches on the electronics module, for device name assignment (last part) DCP protocol Process Device Manager (PDM) Integrated Web server 					
Supported functions	 Identification & Maintenance Simple device identification via: Control system Nameplate Measured value status The process variables are communicated with a measured value status Blinking feature via the onsite display for simple device identification and assignment Device operation via operating tools (e.g. FieldCare, DeviceCare, SIMATIC PDM) 					
System integration	Information regarding system integration: Operating Instructions → 🗎 115. Cyclic data transmission Overview and description of the modules Status coding Startup configuration Factory setting:					

FOUNDATION Fieldbus

Manufacturer ID	0x452B48 (hex)
Ident number	0x103B (hex)

Device revision	1
DD revision	Information and files under:
CFF revision	www.endress.comwww.fieldbus.org
Interoperability Test Kit (ITK)	Version 6.2.0
ITK Test Campaign Number	Information: www.endress.com www.fieldbus.org
Link Master capability (LAS)	Yes
Choice of "Link Master" and "Basic Device"	Yes Factory setting: Basic Device
Node address	Factory setting: 247 (0xF7)
Supported functions	The following methods are supported: Restart ENP Restart Diagnostic Set to OOS Set to AUTO Read trend data Read event logbook
Virtual Communication Relation	onships (VCRs)
Number of VCRs	44
Number of link objects in VFD	50
Permanent entries	1
Client VCRs	0
Server VCRs	10
Source VCRs	43
Sink VCRs	0
Subscriber VCRs	43
Publisher VCRs	43
Device Link Capabilities	
Slot time	4
Min. delay between PDU	8
Max. response delay	16
System integration	Information regarding system integration: Operating Instructions → 🗎 115. Cyclic data transmission Description of the modules Execution times Methods

Modbus RS485

Protocol	Modbus Applications Protocol Specification V1.1
Response times	 Direct data access: typically 25 to 50 ms Auto-scan buffer (data range): typically 3 to 5 ms
Device type	Slave
Slave address range	1 to 247
Broadcast address range	0

26

Function codes	 03: Read holding register 04: Read input register 06: Write single registers 08: Diagnostics 16: Write multiple registers 23: Read/write multiple registers
Broadcast messages	Supported by the following function codes: O6: Write single registers 16: Write multiple registers 23: Read/write multiple registers
Supported baud rate	 1200 BAUD 2400 BAUD 4800 BAUD 9600 BAUD 19200 BAUD 38400 BAUD 57600 BAUD 115200 BAUD
Data transfer mode	• ASCII • RTU
Data access	Each device parameter can be accessed via Modbus RS485. For Modbus register information
Compatibility with earlier model	If the device is replaced, the measuring device Promass 500 supports the compatibility of the Modbus registers for the process variables and the diagnostic information with the previous model Promass 83. It is not necessary to change the engineering parameters in the automation system. □ Description of the function scope of compatibility: Operating Instructions → ■ 115.
System integration	Information on system integration: Operating Instructions → 🗎 115. ■ Modbus RS485 information ■ Function codes ■ Register information ■ Response time ■ Modbus data map

Power supply

Terminal assignment

Transmitter: supply voltage, input/outputs

HART

Supply	Supply voltage Input/output 1		Input/output 2		Input/output 3		Input/output 4		
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $							

FOUNDATION Fieldbus

Supply voltage		Input/	output l	Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (A)	27 (B)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $							

PROFIBUS PA

Supply	Supply voltage Input/output 1		Input/output 2		Input/output 3		Input/output 4		
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $							

PROFIBUS DP

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4			
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)		
		The t	The terminal assignment depends on the specific device version ordered → 🖺 14.								

Modbus RS485

Supply voltage		Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (B)	26 (B) 27 (A)		25 (-)	22 (+) 23 (-)		20 (+)	21 (-)
		The t	ordered → 🏻	14.					

PROFINET

Supply voltage		Input/output 1	Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	PROFINET	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		(RJ45 connector)	The terr	ninal assign	nment depends on the specific device versi ordered → 🖺 14.			

EtherNet/IP

Supply voltage		Input/output 1	Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	EtherNet/IP	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		(RJ45 connector)	The terr	ninal assign	iment depends on the specific device ordered $\Rightarrow \triangleq 14$.			version

Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable:

- Proline 500 digital → 🖺 32
- Proline 500 → 🖺 32

Device plugs available



Device plugs may not be used in hazardous areas!

Device plugs for fieldbus systems:

Order code for "Input; output 1"

- Option GA "PROFIBUS PA" →

 ② 29
- Option **RA** "PROFINET" → 🖺 29
- Option **NA** "EtherNet/IP" → 🖺 29

Device plug for connecting to the service interface:

Order code for "Accessory mounted"

option NB, adapter RJ45 M12 (service interface) $\rightarrow \implies$ 30

Order code for "Input; output 1", option SA "FOUNDATION Fieldbus"

Order code for	Cable entry/connection → 🖺 33				
"Electrical connection"	2	3			
M, 3, 4, 5	7/8" connector	-			

Order code for "Input; output 1", option GA "PROFIBUS PA"

	Order code for	Cable entry/connection → 🗎 33			
•	"Electrical connection"	2	3		
	L, N, P, U	Connector M12 × 1	_		

Order code for "Input; output 1", option RA "PROFINET"

Order code for	Cable entry/connection → 🖺 33				
"Electrical connection"	2	3			
L, N, P, U	Connector M12 × 1	-			
R ^{1) 2)} , S ^{1) 2)} , T ^{1) 2)} , V ^{1) 2)}	Connector M12 × 1	Connector M12 × 1			

- Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001.
- 2) Suitable for integrating the device in a ring topology.

Order code for "Input; output 1", option NA "EtherNet/IP"

Order code for	Cable entry/connection → 🗎 33				
"Electrical connection"	2	3			
L, N, P, U	Connector M12 × 1	_			
R ^{1) 2)} , S ^{1) 2)} , T ^{1) 2)} , V ^{1) 2)}	Connector M12 × 1	Connector M12 × 1			


- Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001
- 2) Suitable for integrating the device in a ring topology.

Order code for "Accessory mounted", option NB "Adapter RJ45 M12 (service interface)"

Order code	Cable entry/coupling → 🗎 33				
"Accessory mounted"	Cable entry 2	Cable entry 3			
NB	Plug M12 × 1	-			

Pin assignment, device plug

FOUNDATION Fieldbus

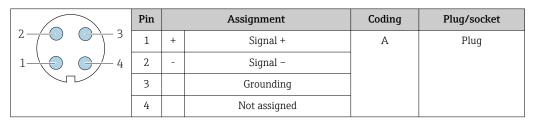

PROFIBUS PA

	Pin		Assignment	Coding	Plug/socket
2 3	1	+	PROFIBUS PA +	A	Plug
1 4	2	Grounding			
\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	3	-	PROFIBUS PA -		
	4		Not assigned		


PROFINET

2	Pin		Assignment	
	1	+	TD +	
1 3	2	+	RD +	
	3	-	TD -	
	4	-	RD -	
4 A0032047	Cod	ing	Plug/socket	
	Ι)	Socket	

Recommended plug:

- Binder, series 763, part no. 99 3729 810 04
 Phoenix, part no. 1543223 SACC-M12MSD-4Q
- When using the device in a hazardous location, use a suitably certified plug.


EtherNet/IP

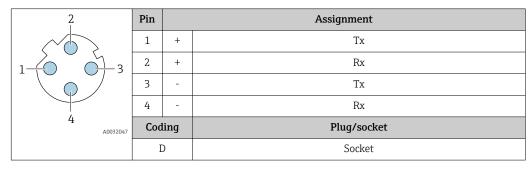

- Recommended plug:
 Binder, series 763, part no. 99 3729 810 04
 - Phoenix, part no. 1543223 SACC-M12MSD-4Q
 - When using the device in a hazardous location, use a suitably certified plug.

Service interface

Order code for "Accessories mounted", option NB: Adapter RJ45 M12 (service interface)

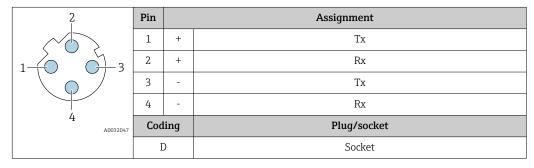

- Recommended plug:
 Binder, series 763, part no. 99 3729 810 04
 - Phoenix, part no. 1543223 SACC-M12MSD-4Q
 - When using the device in a hazardous location, use a suitably certified plug.

Supply voltage	Order code for "Power supply"	terminal voltage		Frequency range
	Option D	DC24 V	±20%	-
	Option E	AC100 to 240 V	-15+10%	50/60 Hz
	0.11	DC24 V	±20%	-
	Option I	AC100 to 240 V	-15+10%	50/60 Hz

Power consumption Transmitter

Max. 10 W (active power)

Current consumption Transmitter

• Max. 400 mA (24 V)


• Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

Power supply failure

Depending on the device version, the configuration is retained in the device memoryor in the pluggable data memory (Histor $OM\ DAT$).

Electrical connection

Connection of connecting cable: Proline 500 - digital

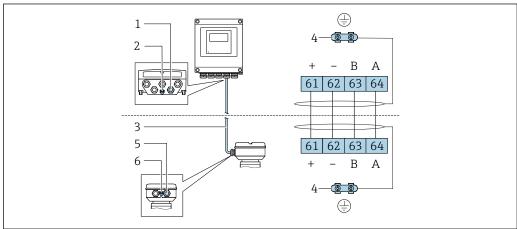

A002819

- 1 Cable entry for cable on transmitter housing
- 2 Protective ground (PE)
- 3 Connecting cable ISEM communication
- 4 Grounding via ground connection; on device plug versions grounding is through the plug itself
- 5 Cable entry for cable or connection of device plug on sensor connection housing
- *6 Protective ground (PE)*

Depending on the device version of the sensor connection housing, the connecting cable is connected via terminals or device plugs.

Sensor connection housing Order code for "Housing"	Connection to sensor connection housing via	Connection to transmitter housing via	
Option A : aluminum coated	Terminals	Terminals	
Option B : stainless	Terminals	Terminals	
Option C ultra-compact, hygienic, stainless	Device plug	Terminals	

Pin assignment, device plug

Device plugs are only available for device version, order code for "Housing":

Option **C** ultra-compact, hygienic, stainless

For connection to sensor connection housing.

3 0 0 1	Pin	Color 1)	Assignment		Connection to terminal
	1	Brown	+	Supply voltage	61
	2	White	А	ISEM communication	64
	3	Blue	В	1 ISEM Communication 64	
	4	Black	-	Supply voltage	63
	5	-		-	62
Coding A			Plug/socket		
		Plug			


1) Cable colors of connecting cable

•

A connecting cable with a device plug is optionally available.

Connection of the connecting cable: Proline 500

The connecting cable is connected via terminals.

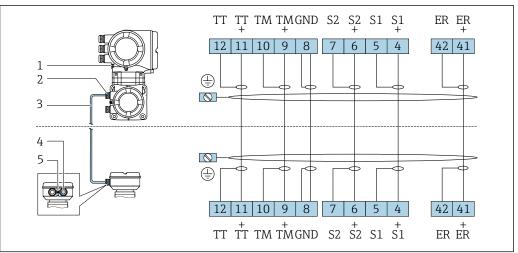


- Protective ground (PE)
- 2 Cable entry for connecting cable on transmitter connection housing
- 3 Connecting cable
- Cable entry for connecting cable on sensor connection housing
- Protective ground (PE)

Connecting the transmitter



- Terminal assignment → 🖺 27
- Device plug pin assignment → 🖺 29

Connecting the Proline 500 - digital transmitter

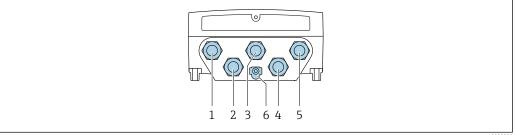


- Terminal connection for supply voltage
- Terminal connection for signal transmission, input/output
- Terminal connection for signal transmission, input/output
- Terminal connection for connecting cable between sensor and transmitter
- Terminal connection for signal transmission, input/output or terminal for network connection (DHCP client) via service interface (CDI-RJ45); optional: terminal connection for external WLAN antenna
- Protective ground (PE)
- An adapter for RJ45 and the M12 plug is optionally available: Order code for "Accessories", option NB: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12connector without opening the device.

Network connection (DHCP client) via service interface (CDI-RJ45) → 🖺 100

Connecting the Proline 500 transmitter

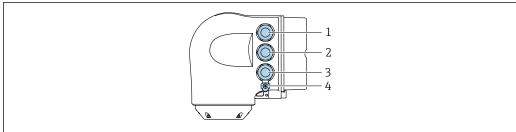

A0026781

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal for network connection (DHCP client) via service interface (CDI-RJ45); optional: terminal connection for external WLAN antenna
- 4 Protective ground (PE)
- An adapter for RJ45 and the M12 plug is optionally available:
 Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 connector without opening the device.


Network connection (DHCP client) via service interface (CDI-RJ45) \rightarrow $\stackrel{ riangle}{=}$ 100

Connecting in a ring topology

Device versions with EtherNet/IP and PROFINET communication protocols can be integrated into a ring topology. The device is integrated via the terminal connection for signal transmission (output 1) and the connection to the service interface (CDI-RJ45).

- Integrating the transmitter into a ring topology:
 - EtherNet/IP \rightarrow \triangleq 98


Transmitter: Proline 500 - digital

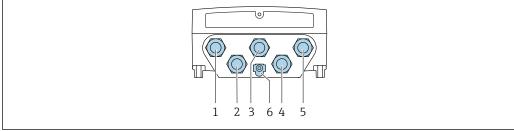

A0028200

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 2 Terminal connection for signal transmission: PROFINET or EtherNet/IP (RJ45 connector)
- $4\qquad \textit{Terminal connection for connecting cable between sensor and transmitter}$
- 5 Terminal connection to service interface (CDI-RJ45)
- 6 Protective ground (PE)

Transmitter: Proline 500

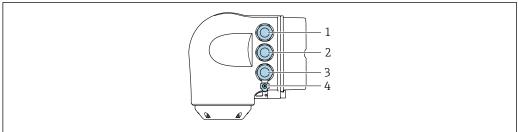


A0026791

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission: PROFINET or EtherNet/IP (RJ45 connector)
- 3 Terminal connection to service interface (CDI-RJ45)
- 4 Protective ground (PE)
- If the device has additional inputs/outputs, these are routed in parallel via the cable entry for connection to the service interface (CDI-RJ45).


Connection examples

Current output 4 to 20 mA HART

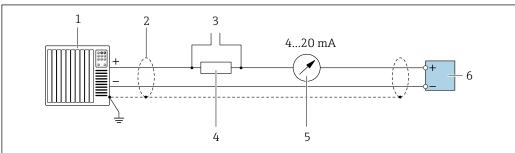

A0029055

- 2 Connection example for 4 to 20 mA HART current output (active)
- 1 Automation system with current input (e.g. PLC)
- 3 Connection for HART operating devices $\Rightarrow \triangleq 94$
- 4 Resistor for HART communication ($\geq 250 \Omega$): observe maximum load $\Rightarrow \implies 15$
- 5 Analog display unit: observe maximum load $\rightarrow = 15$
- 6 Transmitter

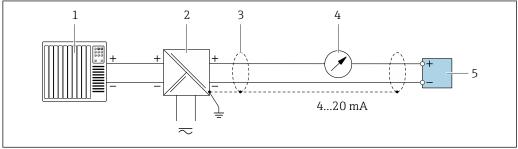


A002876

- 3 Connection example for 4 to 20 mA HART current output (passive)
- 1 Automation system with current input (e.g. PLC)
- 2 Power supply

- 5 Transmitter


HART input

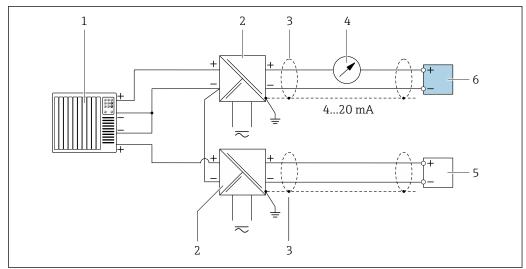

A002876

- 4 Connection example for HART input with a common negative (passive)
- 1 Automation system with HART output (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 Analog display unit: observe maximum load
- 5 Pressure transmitter (e.g. Cerabar M, Cerabar S): see requirements
- 6 Transmitter

PROFIBUS PA

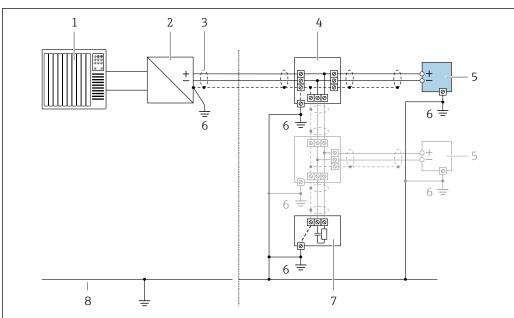


A002876

■ 5 Connection example for PROFIBUS PA


- 1 Control system (e.g. PLC)
- 2 PROFIBUS PA segment coupler
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

PROFIBUS DP

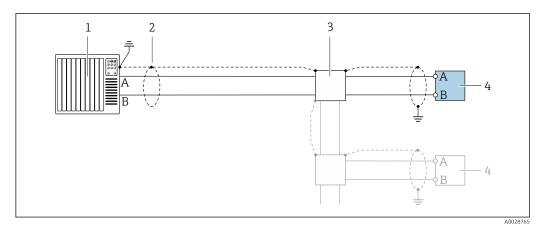

- \blacksquare 6 Connection example for PROFIBUS DP, non-hazardous area and Zone 2/Div. 2
- 1 Control system (e.g. PLC)
- 2 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter
- If baud rates > 1.5 MBaud an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.


EtherNet/IP

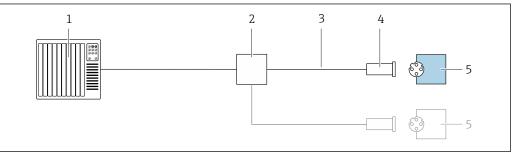

A002876


- 7 Connection example for EtherNet/IP
- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter

EtherNet/IP: DLR (Device Level Ring)

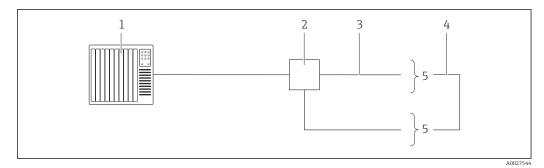

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- *3 Observe cable specifications* \rightarrow $\stackrel{\triangle}{=}$ 43
- 4 Connecting cable between the two transmitters
- 5 Transmitter


PROFINET

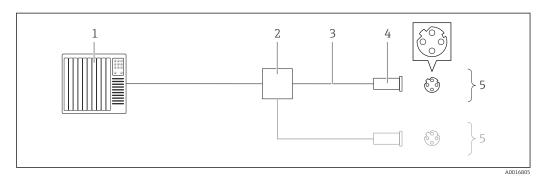

■ 8 Connection example for PROFINET

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- 5 Transmitter


PROFINET: MRP (Media Redundancy Protocol)

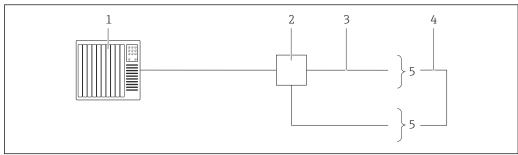

A002754


- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 4 Connecting cable between the two transmitters
- 5 Transmitter

FOUNDATION Fieldbus

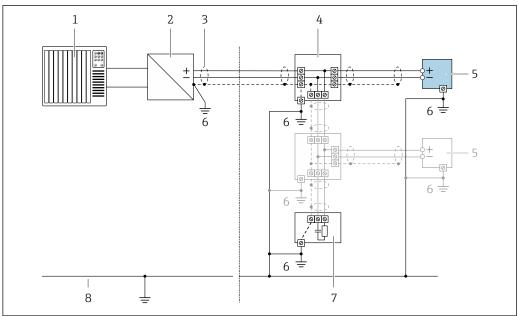

- **₽** 9 Connection example for FOUNDATION Fieldbus
- 1
- Control system (e.g. PLC) Power Conditioner (FOUNDATION Fieldbus)
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- T-box
- 5
- Measuring device Local grounding 6
- Bus terminator
- Potential matching line


Modbus RS485

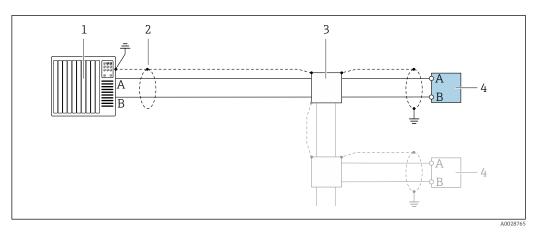

■ 10 Connection example for Modbus RS485, non-hazardous area and Zone 2; Class I, Division 2


- Control system (e.g. PLC)
- Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- Distribution box
- Transmitter

Current output 4-20 mA

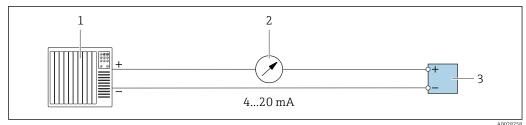

■ 11 Connection example for 4-20 mA current output (active)


- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

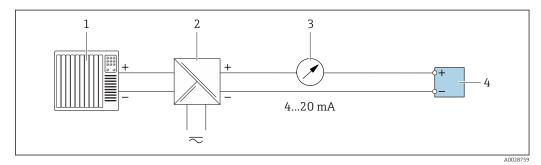

■ 12 Connection example for 4-20 mA current output (passive)

- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter

Pulse/frequency output

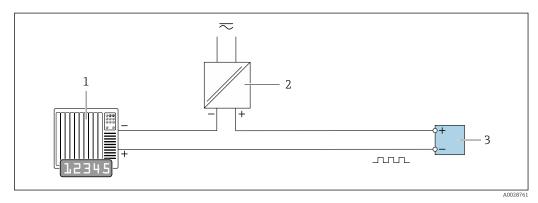


■ 13 Connection example for pulse/frequency output (passive)

- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values $\rightarrow \blacksquare 16$

40 Endress+Hauser

A002073


Switch output

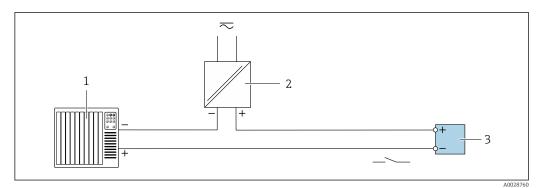

Connection example for switch output (passive)


- Automation system with switch input (e.g. PLC)
- Power supply
- *Transmitter: Observe input values* $\rightarrow \blacksquare 16$

Double pulse output

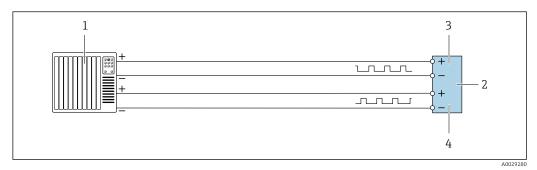

■ 15 Connection example for double pulse output (active)


- Automation system with double pulse input (e.g. PLC)
- 2
- 3 Double pulse output
- Double pulse output (slave), phase-shifted

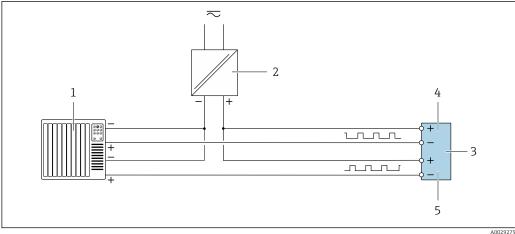

■ 16 Connection example for double pulse output (passive)

- Automation system with double pulse input (e.g. PLC)
- 2 Power supply
- 3 *Transmitter: Observe input values →* 🖺 18
- Double pulse output
- Double pulse output (slave), phase-shifted


Relay output

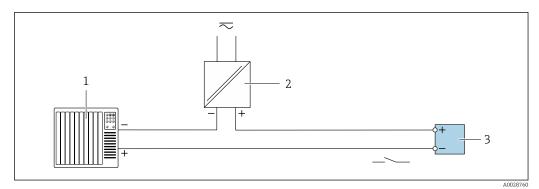

■ 17 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply
- *3* Transmitter: Observe input values → 🖺 18


Current input

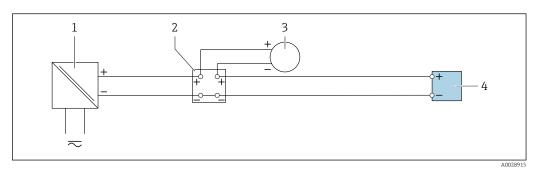

■ 18 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 Terminal box
- 3 External measuring device (for reading in pressure or temperature, for instance)
- 4 Transmitter

Status input

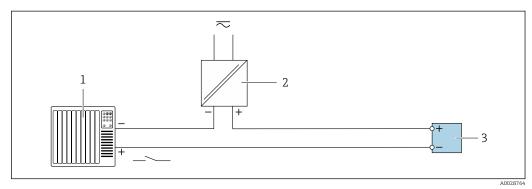

■ 19 Connection example for status input

- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter

Potential equalization

Requirements

No special measures for potential equalization are required.

42

Please consider the following to ensure correct measurement:

- Same electrical potential for the fluid and sensor
- Company-internal grounding concepts

terminals

Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 mm 2 (24 to 12 AWG).

Cable entries

- Cable gland: M20 \times 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
- Thread for cable entry:
 - NPT ½"
 - G ½"
 - M20
- Device plug for digital communication: M12
 Only available for certain device versions → \(\begin{align*}
 = 28. \end{align*}
- Device plug for connecting cable: M12
 A device plug is always used for the device version with the order code for "Sensor connection housing", option C "Ultra-compact, hygienic, stainless".

Cable specification

Permitted temperature range

- The installation guidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

Power supply cable

Standard installation cable is sufficient.

Protective ground cable

Cable \geq 2.08 mm² (14 AWG)

The grounding impedance must be less than 1 Ω .

Signal cable

Current output 4 to 20 mA HART

A shielded cable is recommended. Observe grounding concept of the plant.

PROFIBUS PA

Twisted, shielded two-wire cable. Cable type A is recommended .



For further information on planning and installing PROFIBUS networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

PROFIBUS DP

The IEC 61158 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A			
Characteristic impedance	135 to 165 Ω at a measuring frequency of 3 to 20 MHz			
Cable capacitance	< 30 pF/m			
Wire cross-section	> 0.34 mm ² (22 AWG)			
Cable type	Twisted pairs			
Loop resistance	≤110 Ω/km			

Signal damping	Max. 9 dB over the entire length of the cable cross-section			
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.			



For further information on planning and installing PROFIBUS networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

EtherNet/IP

The standard ANSI/TIA/EIA-568-B.2 Annex specifies CAT 5 as the minimum category for a cable used for EtherNet/IP. CAT 5e and CAT 6 are recommended.



For more information on planning and installing EtherNet/IP networks, please refer to the "Media Planning and Installation Manual. EtherNet/IP" of ODVA Organization

PROFINET

Standard IEC 61156-6 specifies CAT 5 as the minimum category for a cable used for PROFINET. CAT 5e and CAT 6 are recommended.



For more information on planning and installing PROFINET networks, see: "PROFINET Cabling and Interconnection Technology" (2011) in a Cartesian Technology (2011) in and Interconnection Technology", Guideline for PROFINET

FOUNDATION Fieldbus

Twisted, shielded two-wire cable.



For further information on planning and installing FOUNDATION Fieldbus networks see:

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

Modbus RS485

The EIA/TIA-485 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A			
Characteristic impedance	135 to 165 Ω at a measuring frequency of 3 to 20 MHz			
Cable capacitance	< 30 pF/m			
Wire cross-section	> 0.34 mm ² (22 AWG)			
Cable type	Twisted pairs			
Loop resistance	≤110 Ω/km			
Signal damping	Max. 9 dB over the entire length of the cable cross-section			
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.			

Current output 0/4 to 20 mA

Standard installation cable is sufficient.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Double pulse output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA


Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

Choice of connecting cable between the transmitter and sensor

Depends on the type of transmitter and the installation zones

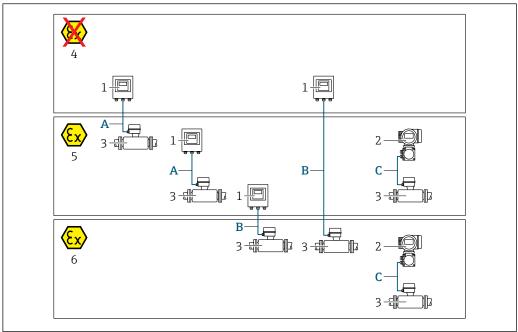

A0032476

- 1 Proline 500 digital transmitter
- 2 Proline 500 transmitter
- 3 Sensor Promass
- 4 Non-hazardous area
- 5 Hazardous area: Zone 2; Class I, Division 2
- 6 Hazardous area: Zone 1; Class I, Division 1
- A Standard cable to 500 digital transmitter → 🖺 45

 Transmitter installed in the non-hazardous area or hazardous area: Zone 2; Class I, Division 2 / sensor installed in the hazardous area: Zone 2; Class I, Division 2
- B Standard cable to 500 digital transmitter → 🖺 46
 Transmitter installed in the hazardous area: Zone 2; Class I, Division 2 / sensor installed in the hazardous area: Zone 1; Class I, Division 1
- C Signal cable to 500 transmitter $\rightarrow Barrow Barrow$

A: Connecting cable between sensor and transmitter: Proline 500 – digital

Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4 cores (2 pairs); uninsulated stranded CU wires; pair-stranded with common shield			
Shielding	Fin-plated copper-braid, optical cover ≥ 85 %			
Loop resistance	Power supply line (+, –): maximum $10~\Omega$			
Cable length	Maximum 300 m (1000 ft), see the following table.			

Cross-section	Cable length [max.]		
0.34 mm ² (AWG 22)	80 m (270 ft)		
0.50 mm ² (AWG 20)	120 m (400 ft)		
0.75 mm ² (AWG 18)	180 m (600 ft)		
1.00 mm ² (AWG 17)	240 m (800 ft)		
1.50 mm ² (AWG 15)	300 m (1000 ft)		

Optionally available connecting cable

Design	$2 \times 2 \times 0.34 \text{ mm}^2$ (AWG 22) PVC cable ¹⁾ with common shield (2 pairs, uninsulated stranded CU wires; pair-stranded)			
Flame resistance	According to DIN EN 60332-1-2			
Oil-resistance	According to DIN EN 60811-2-1			
Shielding	Tin-plated copper-braid, optical cover \geq 85 %			
Operating temperature	When mounted in a fixed position: -50 to $+105$ °C (-58 to $+221$ °F); when cable can move freely: -25 to $+105$ °C (-13 to $+221$ °F)			
Available cable length	Fixed: 20 m (65 ft); variable: up to maximum 50 m (165 ft)			


1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

B: Connecting cable between sensor and transmitter: Proline 500 - digital

Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4, 6, 8 cores (2, 3, 4 pairs); uninsulated stranded CU wires; pair-stranded with common shield					
Shielding	in-plated copper-braid, optical cover ≥ 85 %					
Capacitance C	laximum 760 nF IIC, maximum 4.2 μF IIB					
Inductance L	Maximum 26 μH IIC, maximum 104 μH IIB					
Inductance/resistance ratio (L/R)	Maximum 8.9 $\mu H/\Omega$ IIC, maximum 35.6 $\mu H/\Omega$ IIB (e.g. in accordance with IEC 60079-25)					
Loop resistance	Power supply line (+, $-$): maximum 5 Ω					
Cable length	Maximum 150 m (500 ft), see the following table.					

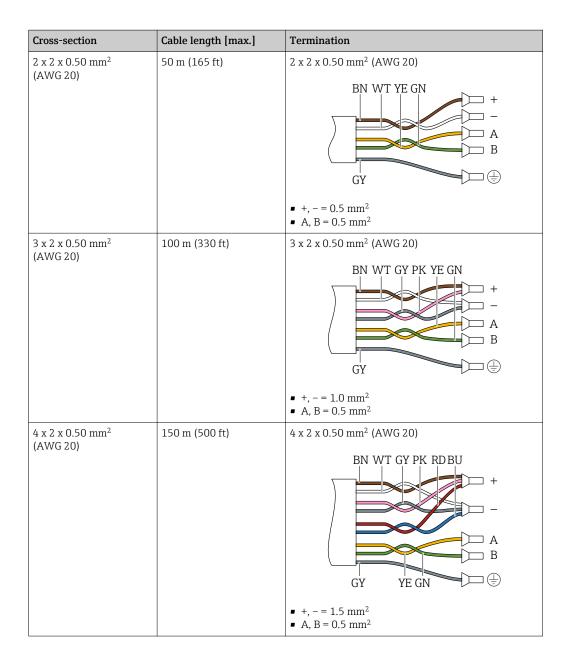

Optionally available connecting cable

Connecting cable for	Zone 1; Class I, Division 1			
Standard cable	$2\times2\times0.5~\text{mm}^2$ (AWG 20) PVC cable $^{1)}$ with common shield (2 pairs, pairstranded)			
Flame resistance	According to DIN EN 60332-1-2			
Oil-resistance	According to DIN EN 60811-2-1			
Shielding	Tin-plated copper-braid, optical cover ≥ 85 %			
Operating temperature	When mounted in a fixed position: -50 to $+105$ °C (-58 to $+221$ °F); when cable can move freely: -25 to $+105$ °C (-13 to $+221$ °F)			
Available cable length	Fixed: 20 m (65 ft); variable: up to maximum 50 m (165 ft)			

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

C: Connecting cable between sensor and transmitter: Proline 500

Standard cable	$6\times0.38\ mm^2$ PVC cable $^{1)}$ with common shield and individually shielded cores			
Conductor resistance	≤50 Ω/km (0.015 Ω/ft)			
Capacitance: core/shield	<420 pF/m (128 pF/ft)			
Cable length (max.)	20 m (65 ft)			
Cable lengths (available for order)	5 m (15 ft), 10 m (32 ft), 20 m (65 ft)			
Operating temperature	max. 105 °C (221 °F)			

1) UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.

Performance characteristics

Reference operating conditions

- Error limits based on ISO 11631
- Water with +15 to +45 °C (+59 to +113 °F) at2 to 6 bar (29 to 87 psi)
- Specifications as per calibration protocol
- Accuracy based on accredited calibration rigs that are traced to ISO 17025.

Maximum measured error

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Base accuracy



Design fundamentals $\rightarrow \implies 51$

Mass flow and volume flow (liquids)

±0.15 % o.r.

 ± 0.10 % o.r. (order code for "Calibration flow", option A, B, C, for mass flow)

Mass flow (gases)

±0.75 % o.r.

Density (liquids)

Under reference operating conditions	Standard density calibration ¹⁾	
[g/cm³]	[g/cm³]	
±0.0005	±0.02	

1) Valid over the entire temperature and density range

Temperature

 $\pm 0.5 \,^{\circ}\text{C} \pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.9 \,^{\circ}\text{F} \pm 0.003 \cdot (\text{T} - 32) \,^{\circ}\text{F})$

Zero point stability

DN		Zero point stability		
[mm]	[in]	[kg/h]	[lb/min]	
8	3/8	0.20 0.007		
15	1/2	0.65 0.024		
25	1	1.80 0.066		
40	1½	4.50 0.165		
50	2	7.0	0.257	
80	3	18.0	0.6615	

Flow values

Flow values as turndown parameter depending on nominal diameter.

SI units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[mm]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]	[kg/h]
8	2 000	200	100	40	20	4
15	6500	650	325	130	65	13
25	18 000	1800	900	360	180	36
40	45 000	4500	2 250	900	450	90
50	70 000	7 000	3 500	1400	700	140
80	180 000	18 000	9 000	3 600	1800	360

US units

DN	1:1	1:10	1:20	1:50	1:100	1:500
[inch]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]	[lb/min]
3/8	73.50	7.350	3.675	1.470	0.735	0.147
1/2	238.9	23.89	11.95	4.778	2.389	0.478
1	661.5	66.15	33.08	13.23	6.615	1.323
11/2	1654	165.4	82.70	33.08	16.54	3.308
2	2 5 7 3	257.3	128.7	51.46	25.73	5.146
3	6615	661.5	330.8	132.3	66.15	13.23

Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	±5 μA
----------	-------

Pulse/frequency output

o.r. = of reading

Accuracy Max. ±50 ppm o.r. (over the entire ambient temperature range)	
--	--

Repeatability

o.r. = of reading; $1 \text{ g/cm}^3 = 1 \text{ kg/l}$; T = medium temperature

Base repeatability



Design fundamentals $\rightarrow \triangleq 51$

Mass flow and volume flow (liquids)

±0.075 % o.r.

±0.05 % o.r. (calibration option, for mass flow)

Mass flow (gases)

±0.35 % o.r.

Density (liquids)

 $\pm 0.00025 \text{ g/cm}^3$

Temperature

 $\pm 0.25 \,^{\circ}\text{C} \pm 0.0025 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.45 \,^{\circ}\text{F} \pm 0.0015 \cdot (\text{T}-32) \,^{\circ}\text{F})$

Response time

The response time depends on the configuration (damping).

Influence of ambient temperature

Current output

Temperature coefficient	Max. 1 μA/°C
-------------------------	--------------

Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
-------------------------	---

Influence of medium temperature

Mass flow and volume flow


o.f.s. = of full scale value

When there is a difference between the temperature for zero point adjustment and the process temperature, the additional measured error of the sensor is typically ± 0.0002 % o.f.s./°C (± 0.0001 % o.f.s./°F).

The effect is reduced if zero point adjustment is performed at process temperature.

Density

When there is a difference between the density calibration temperature and the process temperature, the typical measured error of the sensor is ± 0.0001 g/cm³ /°C (± 0.00005 g/cm³ /°F). Field density calibration is possible.

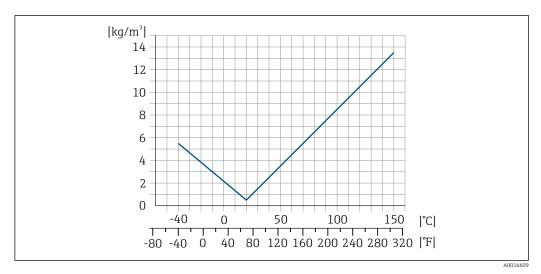

lacksquare 20 Field density calibration, for example at +20 $^\circ$ C (+68 $^\circ$ F)

Temperature

 $\pm 0.005 \cdot \text{T} \,^{\circ}\text{C} \, (\pm 0.005 \cdot (\text{T} - 32) \,^{\circ}\text{F})$

Influence of medium pressure

The table below shows the effect on accuracy of mass flow due to a difference between calibration pressure and process pressure.

o.r. = of reading



It is possible to compensate for the effect by:

- Reading in the current pressure measured value via the current input.
- Specifying a fixed value for the pressure in the device parameters.



Operating Instructions \rightarrow \blacksquare 115.

DN		[% o.r./bar]	[% o.r./psi]	
[mm]	[in]			
8	3/8	no influence		
15	1/2	no influence		
25	1	no influence		
40	1½	no influence		
50	2	-0.009	-0.0006	
80	3	-0.020 -0.0014		

Design fundamentals

o.r. = of reading, o.f.s. = of full scale value

BaseAccu = base accuracy in % o.r., BaseRepeat = base repeatability in % o.r.

MeasValue = measured value; ZeroPoint = zero point stability


Calculation of the maximum measured error as a function of the flow rate

Flow rate	Maximum measured error in % o.r.
≥ ZeroPoint BaseAccu · 100	± BaseAccu
A0021332	10002555
< ZeroPoint · 100	$\pm \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021333	A0021334

Calculation	of the	maximum	repeatabilit	v as a	function	of the flow rate

Flow rate	Maximum repeatability in % o.r.
$\geq \frac{\frac{1}{2} \cdot ZeroPoint}{BaseRepeat} \cdot 100$	± BaseRepeat
A0021335	100119.0
$<\frac{\frac{1}{2} \cdot ZeroPoint}{BaseRepeat} \cdot 100$	$\pm \frac{1}{2} \cdot \frac{\text{ZeroPoint}}{\text{MeasValue}} \cdot 100$
A0021336	A0021337

Example for maximum measured error

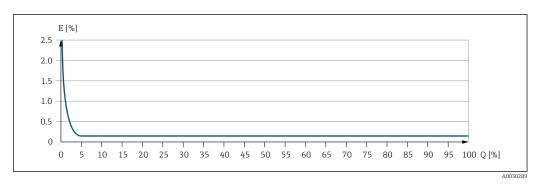


- Е Maximum measured error in % o.r. (example)
- Flow rate in % of maximum full scale value

Installation

No special measures such as supports etc. are necessary. External forces are absorbed by the construction of the device.

Mounting location

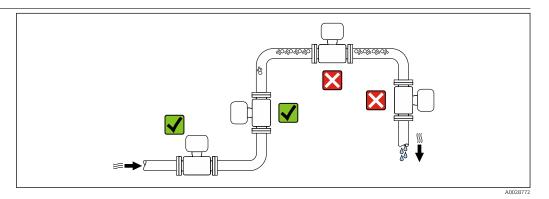


To prevent measuring errors arising from accumulation of gas bubbles in the measuring tube, avoid the following mounting locations in the pipe:

- Highest point of a pipeline.
- Directly upstream of a free pipe outlet in a down pipe.

Installation in down pipes

However, the following installation suggestion allows for installation in an open vertical pipeline. Pipe restrictions or the use of an orifice with a smaller cross-section than the nominal diameter prevent the sensor running empty while measurement is in progress.

52

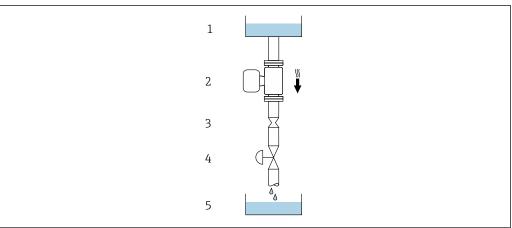

A002877

 \blacksquare 21 Installation in a down pipe (e.g. for batching applications)

- 1 Supply tank
- 2 Sensor
- *3 Orifice plate, pipe restriction*
- 4 Valve
- 5 Batching tank

D	N	Ø orifice plate, pipe restriction		
[mm]	[in]	[mm]	[in]	
8	3/8	6	0.24	
15	1/2	10	0.40	
25	1	14	0.55	
40	1½	22	0.87	
50	2	28	1.10	
80	3	50	1.97	


Orientation

The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

	Recommendation		
A	Vertical orientation	A0015591	 ✓
В	Horizontal orientation, transmitter at top	A0015589	✓ ✓ ¹⁾ Exceptions: → 🖸 22, 🖺 54
С	Horizontal orientation, transmitter at bottom	A0015590	
D	Horizontal orientation, transmitter at side	A0015592	×

- 1) Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.

If a sensor is installed horizontally with a curved measuring tube, match the position of the sensor to the fluid properties.

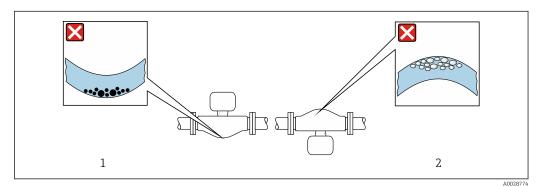

 \blacksquare 22 Orientation of sensor with curved measuring tube


- 1 Avoid this orientation for fluids with entrained solids: Risk of solids accumulating.
- 2 Avoid this orientation for outgassing fluids: Risk of gas accumulating.

Inlet and outlet runs

Mounting the transmitter housing


Proline 500 - digital transmitter

Post mounting

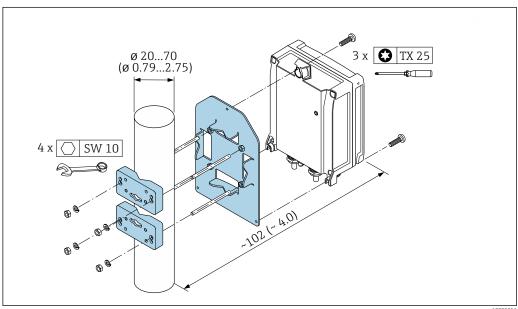

■ 23 Engineering unit mm (in)

Wall mounting

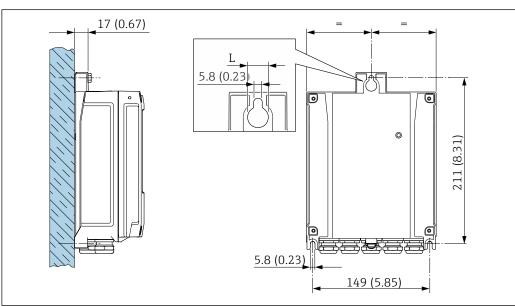

■ 24 Engineering unit mm (in)

L Depends on order code for "Transmitter housing"

Order code for "Transmitter housing"

- Option **A**, aluminum coated: L = 14 mm (0.55 in)
- Option **D**, polycarbonate: L = 13 mm (0.51 in)


Endress+Hauser 55

A002905

A0029054


Proline 500 transmitter

Post mounting

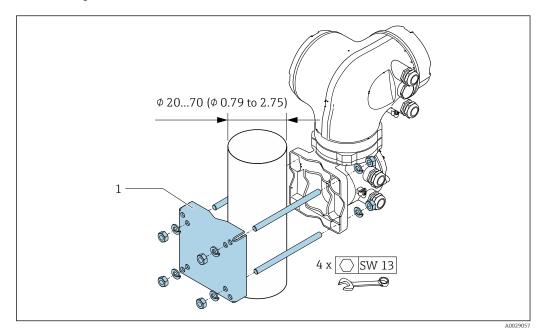

🖸 25 Engineering unit mm (in)

Wall mounting

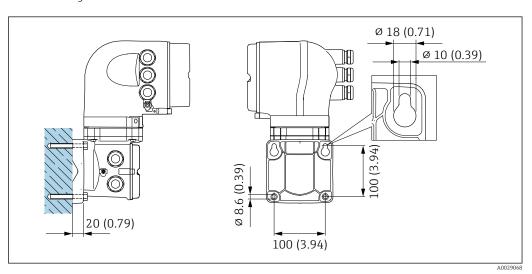

🔁 26 Engineering unit mm (in)

Special mounting instructions

Rupture disk

A WARNING


Danger from medium escaping!

Medium escaping under pressure can cause injury or material damage.

- ► Take precautions to prevent danger to persons and damage if the rupture disk is actuated.
- ► Observe information on the rupture disk sticker.
- ► Make sure that the function and operation of the rupture disk is not impeded through the installation of the device.
- ► Do not use a heating jacket.
- ▶ Do not remove or damage the rupture disk.

56

The position of the rupture disk is indicated on a sticker applied over it. If the rupture disk is triggered, the sticker is destroyed. The disk can therefore be visually monitored.

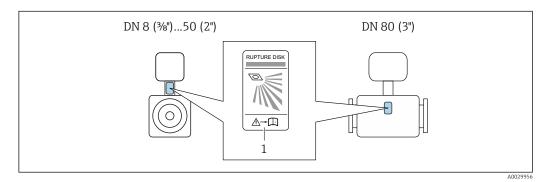


Rupture disk label

Zero point adjustment


Experience shows that zero point adjustment is advisable only in special cases:

- To achieve maximum measuring accuracy even with low flow rates.
- Under extreme process or operating conditions (e.g. very high process temperatures or very high-viscosity fluids).

Protective cover

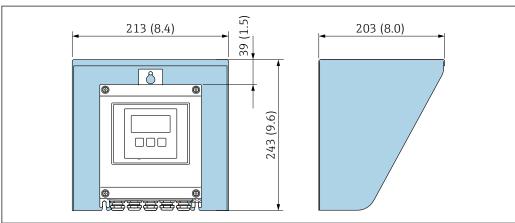

■ 27 Weather protection cover for Proline 500 – digital

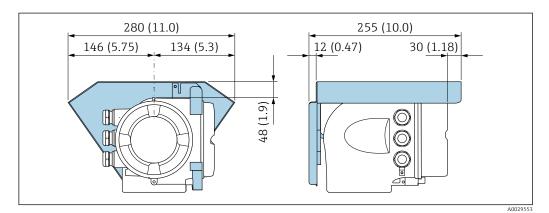

■ 28 Weather protection cover for Proline 500


Endress+Hauser 57

A0029552


Environment

Ambient temperature range

Measuring device	 -40 to +60 °C (-40 to +140 °F) Order code for "Test, certificate", option JP: -50 to +60 °C (-58 to +140 °F)
Readability of the local display	-20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.



If operating outdoors:
 Avoid direct sunlight, particularly in warm climatic regions.



-50 to +80 °C (-58 to +176 °F)

Climate class

DIN EN 60068-2-38 (test Z/AD)

Degree of protection

Transmitter

- As standard: IP66/67, type 4X enclosure
- When housing is open: IP20, type 1 enclosure
- Display module: IP20, type 1 enclosure

Sensor

- As standard: IP66/67, type 4X enclosure
- With the order code for "Sensor options", option **CM**: IP69 can also be ordered

External WLAN antenna

IP67

Vibration resistance

- Oscillation, sinusoidal, following IEC 60068-2-6 2 to 8.4 Hz, 3.5 mm peak
- Oscillation, broadband noise following IEC 60068-2-64
 - -10 to 200 Hz, 0.003 q^2/Hz
 - $-200 \text{ to } 2000 \text{ Hz}, 0.001 \text{ g}^2/\text{Hz}$
 - Total: 1.54 g rms

Shock resistance

Shock, half-sine according to IEC 60068-2-27 6 ms 50 g

Shock resistance

Shock due to rough handling following IEC 60068-2-31

Interior cleaning


- Cleaning in place (CIP)
- Sterilization in place (SIP)

Options

Oil- and grease-free version for wetted parts, without declaration Order code for "Service", option HA

Electromagnetic compatibility (EMC)

- As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)
- Device version with PROFIBUS DP: Complies with emission limits for industry as per EN 50170
 Volume 2, IEC 61784



Deta


Details are provided in the Declaration of Conformity.

Process

Medium temperature range

-40 to +150 °C (-40 to +302 °F)

Dependency of ambient temperature on medium temperature

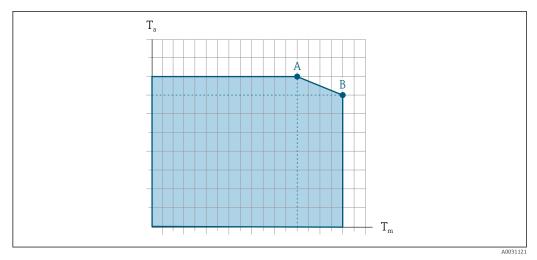

29 Exemplary representation, values in the table below.

T_a Ambient temperature

T_m Medium temperature

- A Maximum permitted medium temperature T_m at $T_{a max}$ = 60 °C (140 °F); higher medium temperatures T_m require a reduced ambient temperature T_a
- B Maximum permitted ambient temperature T_a for the maximum specified medium temperature T_m of the sensor

	Not insulated		Insulated					
	A				A		В	
Version	Ta	T_{m}	Ta	T _m	Ta	T_{m}	Ta	T _m
Promass E 500 – digital	60 °C (140 °F)	150 ℃ (302 ℉)	-	-	60 °C (140 °F)	150 ℃ (302 ℉)	-	-
Promass E 500								


Density

0 to $5\,000\,\text{kg/m}^3$ (0 to $3\,12\,\text{lb/cf}$)

Pressure-temperature curves


The following pressure/temperature diagrams apply to all pressure-bearing parts of the device and not just the process connection. The diagrams show the maximum permissible medium pressure depending on the specific medium temperature.

Flange according to EN 1092-1 (DIN 2501)

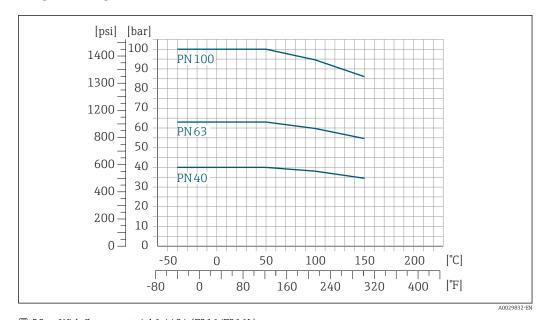


■ 30 With flange material 1.4404 (F316/F316L)

Flange according to ASME B16.5

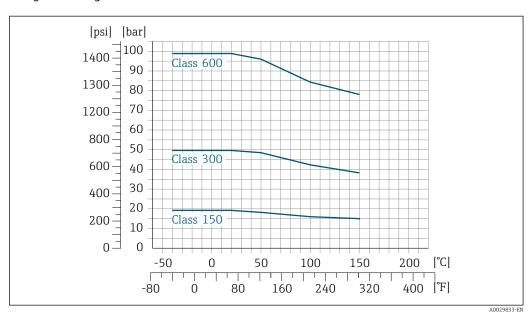


■ 31 With flange material 1.4404 (F316/F316L)

Flange JIS B2220

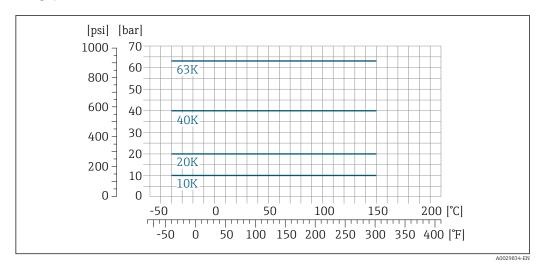


32 € With flange material 1.4404 (F316/F316L)

Flange DIN 11864-2 Form A

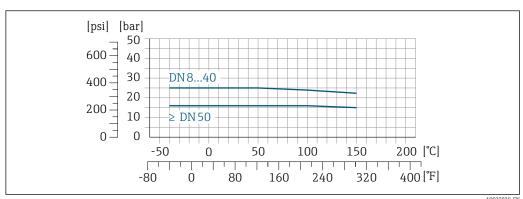

■ 33 With flange material 1.4404 (316/316L)


Thread DIN 11851

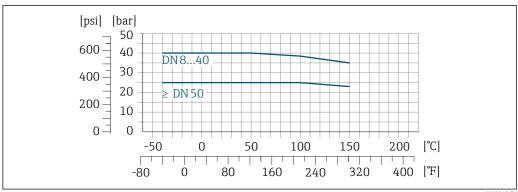

₹ 34 With connection material 1.4404 (316/316L)


DIN 11851 allows for applications up to $+140\,^{\circ}\text{C}$ ($+284\,^{\circ}\text{F}$) if suitable sealing materials are used. Please take this into account when selecting seals and counterparts, as these components can limit the pressure and temperature range.

Thread DIN 11864-1 Form A

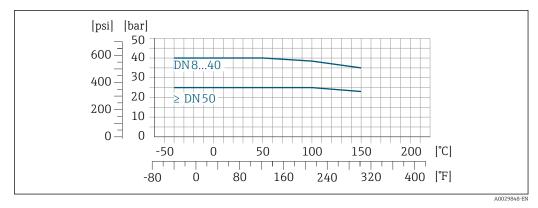


With connection material 1.4404 (316/316L)

Thread ISO 2853

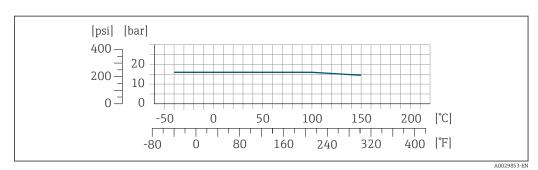


₹ 36 With connection material 1.4404 (316/316L)

Thread SMS 1145

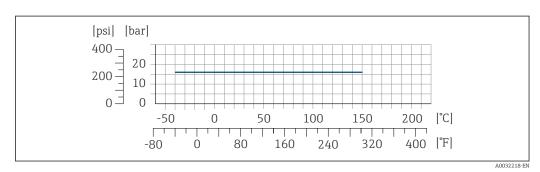

■ 37 With connection material 1.4404 (316/316L)

VCO

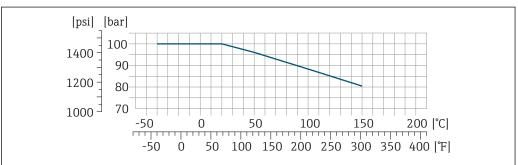


№ 38 With connection material 1.4404 (316/316L)

62 Endress+Hauser

A0029863-EN

Tri-Clamp

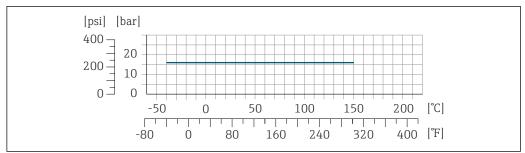

A0032218-EN

The clamp connections are suitable up to a maximum pressure of 16 bar (232 psi). Please observe the operating limits of the clamp and seal used as they can be over 16 bar (232 psi). The clamp and seal are not included in the scope of supply.

Sensor housing

The sensor housing is filled with dry nitrogen gas and protects the electronics and mechanics inside.



If a measuring tube fails (e.g. due to process characteristics like corrosive or abrasive fluids), the fluid will initially be contained by the sensor housing.

Sensor housing nominal pressure rating and burst pressure

The secondary containment does not have a pressure rating classification.

Reference value for the pressure loading capacity of the sensor housing: 16 bar (232 psi)

If the device is fitted with a rupture disk (order code for "Sensor option", option CA "Rupture disk"), the rupture disk trigger pressure is decisive for the maximum nominal pressure.

Rupture disk

To increase the level of safety, a device version with a rupture disk with a trigger pressure of 10 to 15 bar (145 to 217.5 psi)can be used (order code for "Sensor option", option CA "rupture disk").

The use of rupture disks cannot be combined with the separately available heating jacket.

Flow limit

Select the nominal diameter by optimizing between the required flow range and permissible pressure loss.



For an overview of the full scale values for the measuring range, see the "Measuring range" section $\rightarrow \ \ \cong \ \ 11$

- The minimum recommended full scale value is approx. 1/20 of the maximum full scale value
- In most applications, 20 to 50 % of the maximum full scale value can be considered ideal
- A low full scale value must be selected for abrasive media (such as liquids with entrained solids): flow velocity < 1 m/s (< 3 ft/s).
- For gas measurement the following rules apply:
 - The flow velocity in the measuring tubes should not exceed half the sound velocity (0.5 Mach).
- The maximum mass flow depends on the density of the gas: formula $\rightarrow \implies 11$



To calculate the flow limit, use the *Applicator* sizing tool $\rightarrow \implies 114$

Pressure loss




System pressure

It is important that cavitation does not occur, or that gases entrained in the liquids do not outgas. This is prevented by means of a sufficiently high system pressure.

For this reason, the following mounting locations are recommended:

- At the lowest point in a vertical pipe
- Downstream from pumps (no danger of vacuum)



A002877


Thermal insulation

In the case of some fluids, it is important to keep the heat radiated from the sensor to the transmitter to a low level. A wide range of materials can be used for the required insulation.

NOTICE

Electronics overheating on account of thermal insulation!

- Recommended orientation: horizontal orientation, sensor connection housing pointing downwards.
- ▶ Do not insulate the sensor connection housing.
- Maximum permissible temperature at the lower end of the sensor connection housing: $80 \,^{\circ}\text{C} \, (176 \,^{\circ}\text{F})$
- ► Thermal insulation with extended neck free: We recommend that you do not insulate the extended neck in order to ensure optimum dissipation of heat.

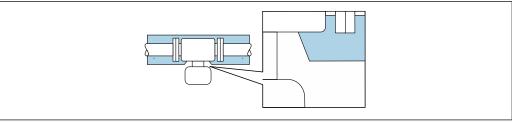

■ 39 Thermal insulation with extended neck free


A0034391

Heating

Some fluids require suitable measures to avoid loss of heat at the sensor.

Heating options

- Electrical heating, e.g. with electric band heaters
- Via pipes carrying hot water or steam
- Via heating jackets



NOTICE

Danger of overheating when heating

- ► Ensure that the temperature at the lower end of the transmitter housing does not exceed 80 °C (176 °F).
- ► Ensure that sufficient convection takes place at the transmitter neck.
- ► Ensure that a sufficiently large area of the transmitted neck remains exposed. The uncovered part serves as a radiator and protects the electronics from overheating and excessive cooling.
- ▶ If using in potentially explosive atmospheres, observe the information in the device-specific Ex documentation. For detailed information on the temperature tables, see the separate document entitled "Safety Instructions" (XA) for the device.

Vibrations


The high oscillation frequency of the measuring tubes ensures that the correct operation of the measuring system is not influenced by plant vibrations.

Mechanical construction

Dimensions in SI units

Housing of Proline 500 - digital transmitter

Non-hazardous area or hazardous area: Zone 2; Class I, Division 2

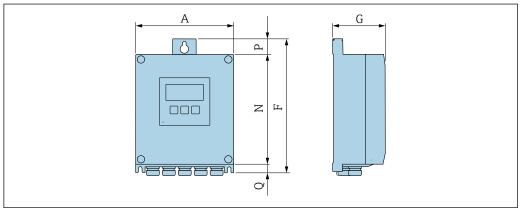

A0033789

Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Sensor"


A	F	G	N	P	Q
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
167	232	80	187	24	

 $\label{lem:code} \textit{Order code for "Transmitter housing", option D "Polycarbonate" and order code for "Integrated ISEM electronics", option A "Sensor"$

A	F	G	N	P	Q
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
177	234	90	197	17	

Housing of Proline 500 transmitter

Hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1

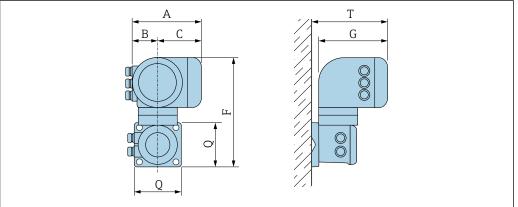


A0033788

Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Transmitter"

A	B	C	F	G	Q	T
[mm]						
188	85	103	318	217	130	239

Sensor connection housing

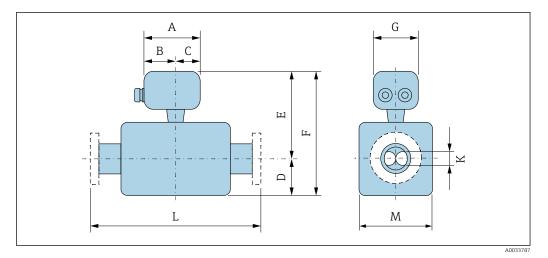

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN	A 1)	В	С	D	E	F	G	К	L	М
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	148	94	54	89	177	266	136	5.35	2)	45
15	148	94	54	100	177	277	136	8.30	2)	45
25	148	94	54	102	174	276	136	12.0	2)	51
40	148	94	54	121	180	301	136	17.6	2)	65
50	148	94	54	175.5	194.5	370	136	26.0	2)	95
80	148	94	54	205	213.5	418.5	136	40.5	2)	127

- 1) Depending on the cable gland used: values up to + 30 mm
- 2) Dependent on the respective process connection

Order code for "Sensor connection housing", option B "Stainless"

DN	A 1)	В	С	D	E	F	G	K	L	М
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	137	78	59	89	172.5	261.5	134	5.35	2)	45
15	137	78	59	100	172.5	272.5	134	8.30	2)	45
25	137	78	59	102	169.5	271.5	134	12.0	2)	51
40	137	78	59	121	175.5	295.5	134	17.6	2)	65
50	137	78	59	175.5	190	265.5	134	26.0	2)	95
80	137	78	59	205	208.5	413.5	134	40.5	2)	127

- Depending on the cable gland used: values up to \pm 30 mm
- 1) 2) Dependent on the respective process connection

Order code for "Sensor connection housing", option C "Ultra-compact hygienic, stainless"


DN	A 1)	В	С	D	E	F	G	К	L	М
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
8	124	68	56	89	172.5	261.5	112	5.35	2)	45
15	124	68	56	100	172.5	272.5	112	8.30	2)	45
25	124	68	56	102	169.5	271.5	112	12.0	2)	51

DN	A 1)	В	С	D	E	F	G	К	L	М
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
40	124	68	56	121	175.5	295.5	112	17.6	2)	65
50	124	68	56	175.5	190	265.5	112	26.0	2)	95
80	124	68	56	205	208.5	413.5	112	40.5	2)	127

- Depending on the cable gland used: values up to + 30 mm Dependent on the respective process connection $\,$
- 1) 2)

Flange connections

Fixed flange EN 1092-1, ASME B16.5, JIS B2220

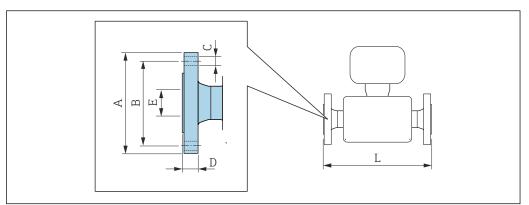

A0015621

i

Length tolerance for dimension L in mm: +1.5 / -2.0

Flange according to EN 1092-1 (DIN 2501 / DIN 2512N), PN 40

1.4404 (F316/F316L): order code for "Process connection", option D2S

Flange with groove according to EN 1092-1 Form D (DIN 2512N), PN 40 1.4404 (F316/F316L): order code for "Process connection", option D6S

	·		•			
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8 ¹⁾	95	65	4 × Ø14	16	17.3	232/510 ²⁾
15	95	65	4 × Ø14	16	17.3	279/510 ²⁾
25	115	85	4 × Ø14	18	28.5	329/600 ²⁾
40	150	110	4 × Ø18	18	43.1	445
50	165	125	4 × Ø18	20	54.5	556/715 ²⁾
80	200	160	8 × Ø18	24	82.5	611/915 ²⁾
1				_, _, _		

Surface roughness (flange): EN 1092-1 Form B1 (DIN 2526 Form C), Ra 3.2 to 12.5 μ m

- 1) DN 8 with DN 15 flanges as standard
- 2) Installation length in accordance with NAMUR recommendation NE 132 optionally available (order code for "Process connection", option D2N or D6N (with groove))

Flange according to EN 1092-1 (DIN 2501), PN 40 (with DN 25 flanges) 1.4404 (F316/F316L) Order code for "Process connection", option R2S									
DN A B C D E L [mm] [mm] [mm] [mm] [mm]									
8	115	85	4 × Ø14	18	28.5	302			
15 115 85 4 × Ø14 18 28.5 315									
Surface roughn	ness (flange): FN	1092-1 Form F	R1 (DIN 2526 Form	C) Ra 3 2 to 1	2.5.um	•			

Flange according to EN 1092-1 (DIN 2501 / DIN 2512N), PN 63

1.4404 (F316/F316L): order code for "Process connection", option D3S

Flange with groove according to EN 1092-1 Form D (DIN 2512N), PN 63

1.4404 (F316/F316L): order code for "Process connection", option D7S

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
50	180	135	4 × Ø22	26	54.5	565
80	215	170	8 × Ø22	28	81.7	646

Surface roughness (flange): EN 1092-1 Form B2 (DIN 2526 Form E), Ra 0.8 to 3.2 μm

Flange according to EN 1092-1 (DIN 2501 / DIN 2512N), PN 100 1.4404 (F316/F316L)

Order code for "Process connection", option D4S

Flange with groove according to EN 1092-1 Form D (DIN 2512N) available, PN 100 1.4404 (F316/F316L)

Order code for "Process connection", option D8S

DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8 1)	105	75	4 × Ø14	20	17.3	261
15	105	75	4 × Ø14	20	17.3	295
25	140	100	4 × Ø18	24	28.5	360
40	170	125	4 × Ø22	26	42.5	486
50	195	145	4 × Ø26	28	53.9	581
80	230	180	8 × Ø26	32	80.9	656

Surface roughness (flange): EN 1092-1 Form B2 (DIN 2526 Form E), Ra 0.8 to 3.2 μm

1) DN 8 with DN 15 flanges as standard

Flange according to ASME B16.5, Class 150 1.4404 (F316/F316L)

Order code for "Process connection", option AAS

,		, ,					
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]	
8 ¹⁾	90	60.3	4 × Ø15.7	11.2	15.7	232	
15	90	60.3	4 × Ø15.7	11.2	15.7	279	
25	110	79.4	4 × Ø15.7	14.2	26.7	329	
40	125	98.4	4 × Ø15.7	17.5	40.9	445	
50	150	120.7	4 × Ø19.1	19.1	52.6	556	
80	190	152.4	4 × Ø19.1	23.9	78.0	611	
Surface rough	Surface roughness (flange): Ra 3.2 to 6.3 µm						

1) DN 8 with DN 15 flanges as standard

Flange according to ASME B16.5, Class 300 1.4404 (F316/F316L)

Order code for "Process connection", option ABS

Order code joi	Frocess connec	Litori, option A	J.S.			
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8 ¹⁾	95	66.7	4 × Ø15.7	14.2	15.7	232
15	95	66.7	4 × Ø15.7	14.2	15.7	279

Flange according to ASME B16.5, Class 300 1.4404 (F316/F316L) Order code for "Process connection", option ABS								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]		
25	125	88.9	4 × Ø19.0	17.5	26.7	329		
40	155	114.3	4 × Ø22.3	20.6	40.9	445		
50	165	127	8 × Ø19.0	22.3	52.6	556		
80 210 168.3 8 × Ø22.3 28.4 78.0 611								
Surface rough	Surface roughness (flange): Ra 3.2 to 6.3 μm							

1) DN 8 with DN 15 flanges as standard

Flange according to ASME B16.5, Class 600 1.4404 (F316/F316L) Order code for "Process connection", option ACS									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]			
8 ¹⁾	95	66.7	4 × Ø15.7	20.6	13.9	261			
15	95	66.7	4 × Ø15.7	20.6	13.9	295			
25	125	88.9	4 × Ø19.1	23.9	24.3	380			
40	155	114.3	4 × Ø22.4	28.7	38.1	496			
50	165	127	8 × Ø19.1	31.8	49.2	583			
80	210	168.3	8 × Ø22.4	38.2	73.7	671			
Surface rough	Surface roughness (flange): Ra 3.2 to 6.3 µm								

1) DN 8 with DN 15 flanges as standard

Flange JIS B2220, 10K 1.4404 (F316/F316L) Order code for "Process connection", option NDS							
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]	
50	155	120	4 × Ø19	16	50	556	
80 185 150 8ר19 18 80 603							
Surface roughness (flange): Ra 3.2 to 6.3 μm							

Flange JIS B2220, 20K 1.4404 (F316/F316L) Order code for "Process connection", option NES							
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]	
8 1)	95	70	4 × Ø15	14	15	232	
15	95	70	4 × Ø15	14	15	279	
25	125	90	4 × Ø19	16	25	329	
40	140	105	4 × Ø19	18	40	445	
50	155	120	8 × Ø19	18	50	556	

Flange JIS B2220, 20K 1.4404 (F316/F316L) Order code for "Process connection", option NES							
DN A B C D E L [mm] [mm] [mm] [mm] [mm]							
80 200 160 8 × Ø23 22 80 603							
Surface roughness (flange): Ra 3.2 to 6.3 μm							

1) DN 8 with DN 15 flanges as standard


Flange JIS B2220, 40K 1.4404 (F316/F316L) Order code for "Process connection", option NGS								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]		
8 ¹⁾	115	80	4 × Ø19	20	15	261		
15	115	80	4 × Ø19	20	15	300		
25	130	95	4 × Ø19	22	25	375		
40	160	120	4 × Ø23	24	38	496		
50	165	130	8 × Ø19	26	50	601		
80	210	170	8 × Ø23	32	75	661		
Surface roughr	ness (flange): Ra	3.2 to 6.3 µm						

1) DN 8 with DN 15 flanges as standard

Flange JIS B2220, 63K 1.4404 (F316/F316L) Order code for "Process connection", option NHS								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]		
8 1)	120	85	4 × Ø19	23	12	282		
15	120	85	4 × Ø19	23	12	315		
25	140	100	4 × Ø23	27	22	383		
40	175	130	4 × Ø25	32	35	515		
50	185	145	4 × Ø23	34	48	616		
80	230	185	4 × Ø25	40	73	686		
Surface roughr	Surface roughness (flange): Ra 3.2 to 6.3 μm							

1) DN 8 with DN 15 flanges as standard

Fixed flange DIN 11864-2

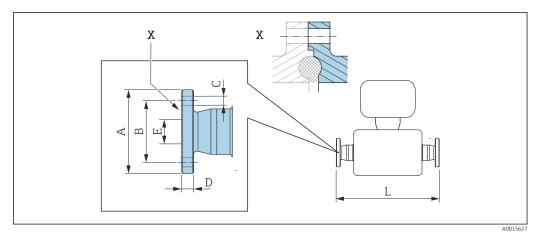

 \blacksquare 40 Detail X: Asymmetrical process connection; the part shown in blue is provided by the supplier.

Length tolerance for dimension L in mm: +1.5 / -2.0

Flange DIN11864-2 Form A, for pipe according to DIN11866 series A, flange with notch 1.4404 (316/316L)

Order code for "Process connection", option KCS

		,				
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L [mm]
8	54	37	4 × Ø9	10	10	249
15	59	42	4 × Ø9	10	16	293
25	70	53	4 × Ø9	10	26	344
40	82	65	4 × Ø9	10	38	456
50	94	77	4 × Ø9	10	50	562
80	133	112	8 × Ø11	12	81	671

 $\hbox{3-A version available: order code for "Additional approval", option LP in conjunction with}\\$


 $Ra \leq 0.8~\mu m$: Order code for "Measuring tube material", option SB

 $Ra \le 0.4 \ \mu m$: Order code for "Measuring tube material", option **SC**

72

Clamp connections

Tri-Clamp

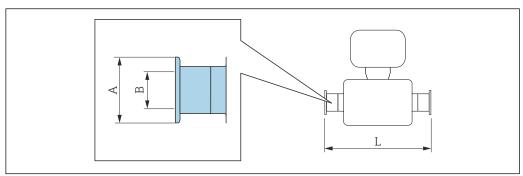

A0015625

Length tolerance for dimension L in mm: +1.5 / -2.0

Tri-Clamp (½") 1.4404 (316/316L) Order code for "Process connection", option FDW					
DN Clamp A B L [mm] [in] [mm] [mm] [mm]					
8	1/2	25.0	9.5	229	
15	1/2	25.0	9.5	273	

³⁻A version available: order code for "Additional approval", option LP in conjunction with

 $Ra \leq 0.8~\mu m$: Order code for "Measuring tube material", option \boldsymbol{SB}

 $Ra \leq 0.4~\mu m$: Order code for "Measuring tube material", option SC

Tri-Clamp (\geq 1") 1.4404 (316/316L) Order code for "Process connection", option FTS					
DN [mm]	Clamp [in]	A [mm]	B [mm]	L [mm]	
8	1	50.4	22.1	229	
15	1	50.4	22.1	273	
25	1	50.4	22.1	324	
40	1½	50.4	34.8	456	
50	2	63.9	47.5	562	
80	3	90.9	72.9	671	


 $^{3\}text{-}A$ version available: order code for "Additional approval", option LP in conjunction with

Ra $\leq 0.8 \ \mu m$: Order code for "Measuring tube material", option **SB**

 $Ra \leq 0.4~\mu m$: Order code for "Measuring tube material", option SC

Threaded couplings

Thread DIN 11851, DIN11864-1, SMS 1145

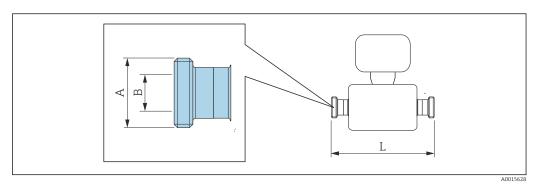

Length tolerance for dimension L in mm: +1.5 / -2.0

Thread DIN 11851, for pipe according to DIN11866, series A 1.4404 (316/316L) Order code for "Process connection", option FMW

DN [mm]	A [in]	B [mm]	L [mm]
8	Rd 34 × ⅓	16	229
15	Rd 34 × ½	16	273
25	Rd 52 × ½	26	324
40	Rd 65 × ½	38	456
50	Rd 78 × 1/ ₆	50	562
80	Rd 110 × 1/4	81	671

3-A version available: order code for "Additional approval", option LP in conjunction with

Ra \leq 0.8 μm : Order code for "Measuring tube material", option **SB**

Ra $\leq 0.4~\mu m$: Order code for "Measuring tube material", option **SC**

Thread DIN11864-1 Form A, for pipe according to DIN11866, series A
1.4404 (316/316L)

Order code for "Process connection", option FLW

order code for Trocess connection, option 12w					
DN A [in]		B [mm]	L [mm]		
8	Rd 28 × 1/8	10	229		
15	Rd 34 × ½	16	273		
25	Rd 52 × 1/ ₆	26	324		
40	Rd 65 × 1/ ₆	38	456		
50 Rd 78 × ½		50	562		
80	Rd 110 × 1/ ₄	81	671		

3-A version available: order code for "Additional approval", option LP in conjunction with

 $Ra \leq 0.8~\mu m$: Order code for "Measuring tube material", option \boldsymbol{SB}

 $Ra \leq 0.4~\mu m$: Order code for "Measuring tube material", option SC

74

Thread SMS 1145 1.4404 (316/316L)


Order code for "Process connection", option SCS

,	' *		
DN [mm]	A [in]	B [mm]	L [mm]
8	Rd 40 × 1/ ₆	22.5	229
15	Rd 40 × 1/ ₆	22.5	273
25	Rd 40 × 1/ ₆	22.5	324
40	Rd 60 × ½	35.5	456
50	Rd 70 × ¹ / ₆	48.5	562
80	Rd 98 × 1/ ₆	72.9	671

 $^{3\}text{-}A$ version available: order code for "Additional approval", option LP in conjunction with

Ra $\leq 0.8~\mu m$: Order code for "Measuring tube material", option SB Ra $\leq 0.4~\mu m$: Order code for "Measuring tube material", option SC

Thread ISO 2853

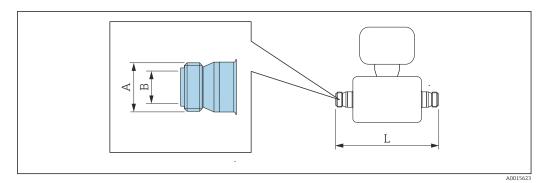

Length tolerance for dimension L in mm: +1.5 / -2.0


Thread ISO 2853, for pipe according to ISO 2037 1.4404 (316/316L) Order code for "Process connection", option JSF					
DN [mm]	L [mm]				
8	37.13	22.6	229		
15	37.13	22.6	273		
25	37.13	22.6	324		
40	50.68	35.6	456		
50	64.16	48.6	562		
80	91.19	72.9	671		

 $^{3\}text{-A}$ version available: order code for "Additional approval", option LP in conjunction with

Ra $\leq 0.8~\mu m$: Order code for "Measuring tube material", option SB Ra $\leq 0.4~\mu m$: Order code for "Measuring tube material", option SC

Max. thread diameter as per ISO 2853 annex A

VCO

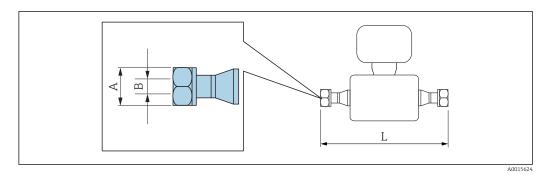


Length tolerance for dimension L in mm: +1.5 / -2.0

8-VCO-4 (½") 1.4404 (316/316L) Order code for "Process connection", option CVS			
DN [mm]	A [in]	B [mm]	L [mm]
8	AF 1	10.2	252


12-VCO-4 (¾") 1.4404 (316/316L) Order code for "Process connection", option CWS				
DN [mm]	A [in]	B [mm]	L [mm]	
15	AF 1½	15.7	305	

Accessories

Protective cover

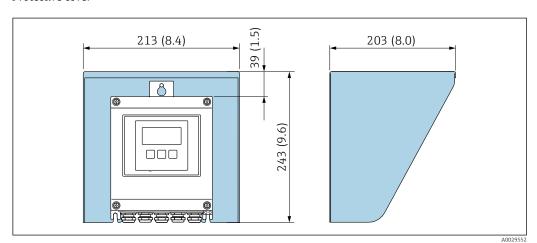

 \blacksquare 41 Weather protection cover for Proline 500 – digital

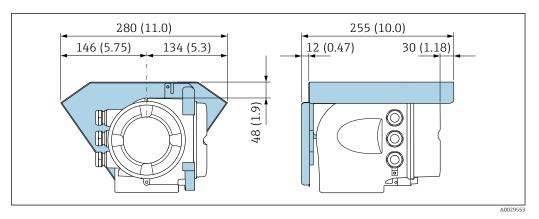


■ 42 Weather protection cover for Proline 500

External WLAN antenna

The external WLAN antenna is not suitable for use in hygienic applications.

Proline 500 – digital


External WLAN antenna mounted on device

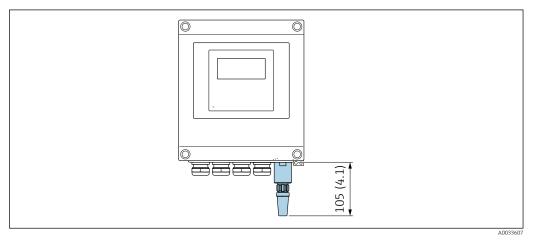

■ 43 Engineering unit mm (in)

External WLAN antenna mounted with cable


The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

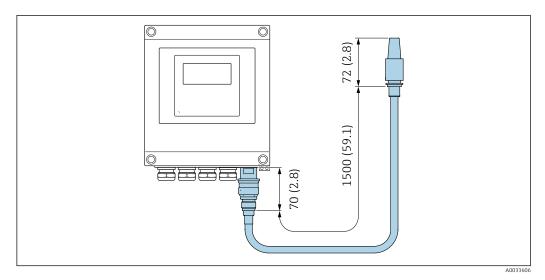

■ 44 Engineering unit mm (in)

Proline 500


External WLAN antenna mounted on device

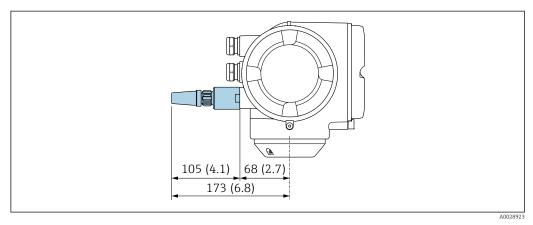

■ 45 Engineering unit mm (in)

External WLAN antenna mounted with cable

The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

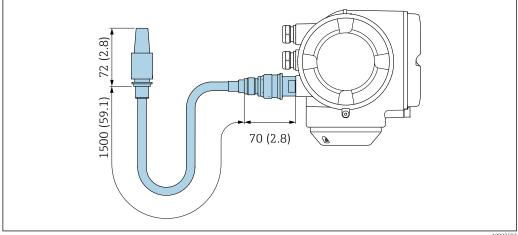

🖪 46 Engineering unit mm (in)


Endress+Hauser 79

A0033597

Dimensions in US units

Housing of Proline 500 - digital transmitter

Non-hazardous area or hazardous area: Zone 2; Class I, Division 2

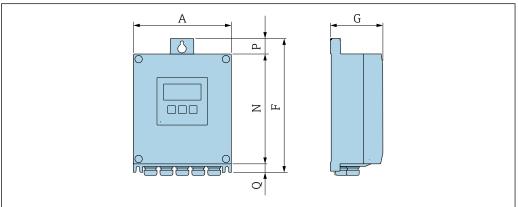

A0033789

 $\label{lem:code_for_problem} \textit{Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Sensor"$


A	F	G	N	P	Q
[in]	[in]	[in]	[in]	[in]	[in]
6.57	9.13	3.15	7.36	0.94	

Order code for "Transmitter housing", option D "Polycarbonate" and order code for "Integrated ISEM electronics", option A "Sensor" $^{\prime\prime}$

A	F	G	N	P	Q
[in]	[in]	[in]	[in]	[in]	[in]
6.97	9.21	3.54	7.76	0.67	

Housing of Proline 500 transmitter

Hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1

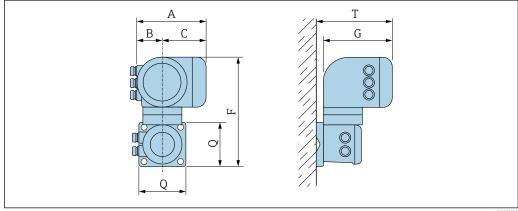


A003378

 $\label{lem:code} \textit{Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Transmitter" \\$

A	B	C	F	G	Q	T
[in]						
7.40	3.35	4.06	12.5	8.54	5.12	9.41

Sensor connection housing

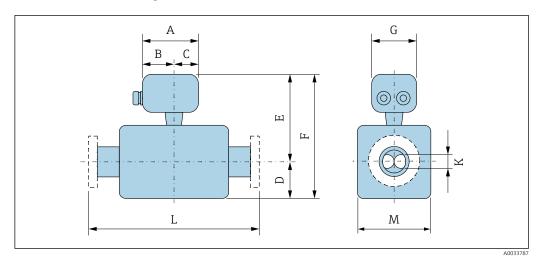

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN	A 1)	B 1)	С	D	Е	F	G	K	L	М
[in]	[in]	[in]	[in]	[in]						
3/8	5.83	3.70	2.13	3.5	6.97	10.47	5.35	0.211	2)	1.77
1/2	5.83	3.70	2.13	3.94	6.97	10.91	5.35	0.33	2)	1.77
1	5.83	3.70	2.13	4.02	6.85	10.87	5.35	0.47	2)	2.01
1½	5.83	3.70	2.13	4.76	7.09	11.85	5.35	0.69	2)	2.56
2	5.83	3.70	2.13	6.91	7.66	14.57	5.35	1.02	2)	3.74
3	5.83	3.70	2.13	8.07	8.41	16.48	5.35	1.59	2)	5.00

- Depending on the cable gland used: values up to +1.18 in
- 2) Dependent on the respective process connection

Order code for "Sensor connection housing", option B "Stainless"

DN	A 1)	В	С	D	E	F	G	K	L	М
[in]	[in]	[in]	[in]	[in]						
3/8	5.39	3.07	2.32	3.5	6.79	10.3	5.28	0.211	2)	1.77
1/2	5.39	3.07	2.32	3.94	6.79	10.73	5.28	0.33	2)	1.77
1	5.39	3.07	2.32	4.02	6.67	10.69	5.28	0.47	2)	2.01
11/2	5.39	3.07	2.32	4.76	6.91	11.63	5.28	0.69	2)	2.56
2	5.39	3.07	2.32	6.91	7.48	10.45	5.28	1.02	2)	3.74
3	5.39	3.07	2.32	8.07	8.21	16.28	5.28	1.59	2)	5.00

- 1) Depending on the cable gland used: values up to +1.18 in
- 2) Dependent on the respective process connection

Order code for "Sensor connection housing", option C "Ultra-compact hygienic, stainless"


DN	A 1)	В	С	D	E	F	G	K	L	M
[in]	[in]	[in]	[in]	[in]						
3/8	4.88	2.68	2.20	3.5	6.79	10.3	4.41	0.211	2)	1.77
1/2	4.88	2.68	2.20	3.94	6.79	10.73	4.41	0.33	2)	1.77
1	4.88	2.68	2.20	4.02	6.67	10.69	4.41	0.47	2)	2.01

DN	A 1)	В	С	D	Е	F	G	K	L	М
[in]	[in]	[in]	[in]	[in]						
11/2	4.88	2.68	2.20	4.76	6.91	11.63	4.41	0.69	2)	2.56
2	4.88	2.68	2.20	6.91	7.48	10.45	4.41	1.02	2)	3.74
3	4.88	2.68	2.20	8.07	8.21	16.28	4.41	1.59	2)	5.00

- Depending on the cable gland used: values up to ± 1.18 in Dependent on the respective process connection
- 1) 2)

Flange connections

Fixed flange ASME B16.5

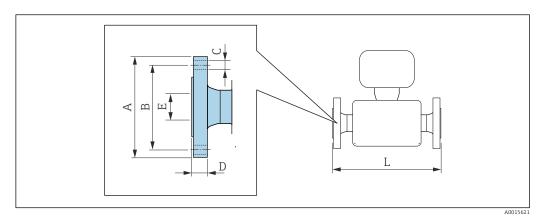

Length tolerance for dimension L in inch: +0.06 / -0.08

Flange according to ASME B16.5, Cl 150 1.4404 (F316/F316L) Order code for "Process connection", option AAS								
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]		
3/8 1)	3.54	2.37	4 × Ø0.62	0.44	0.62	9.13		
1/2	3.54	2.37	4 × Ø0.62	0.44	0.62	10.98		
1	4.33	3.13	4 × Ø0.62	0.56	1.05	12.95		
1½	4.92	3.87	4 × Ø0.62	0.69	1.61	17.52		
2	5.91	4.75	4 × Ø0.75	0.75	2.07	21.89		
3 7.48 6.00 4 × Ø0.75 0.94 3.07 24.06								
Surface roug	ghness (flange): Ra 32 to 248	3 µin					

1) DN $\frac{3}{8}$ " with DN $\frac{1}{2}$ " flanges as standard

Flange according to ASME B16.5, Class 300 1.4404 (F316/F316L) Order code for "Process connection", option ABS								
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]		
3/8 1)	3.74	2.63	4 × Ø0.62	0.56	0.62	9.13		
1/2	3.74	2.63	4 × Ø0.62	0.56	0.62	10.98		
1	4.92	3.50	4 × Ø0.75	0.69	1.05	12.95		
1½	6.10	4.50	4 × Ø0.88	0.81	1.61	17.52		
2	6.50	5.00	8 × Ø0.75	0.88	2.07	21.89		
3	3 8.27 6.63 8 × Ø0.88 1.12 3.07 24.06							
Surface roud	ghness (flange): Ra 32 to 248	β μin					


1) DN $\frac{3}{8}$ " with DN $\frac{1}{2}$ " flanges as standard

Flange according to ASME B16.5, Class 600 1.4404 (F316/F316L) Order code for "Process connection", option ACS								
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L [in]		
3/8 1)	3.74	2.63	4 × Ø0.62	0.81	0.55	10.28		
1/2	3.74	2.63	4 × Ø0.62	0.81	0.55	11.61		
1	4.92	3.50	4 × Ø0.75	0.94	0.96	14.96		
11/2	6.10	4.50	4 × Ø0.88	1.13	1.50	19.53		
2	6.50	5.00	8 × Ø0.75	1.25	1.94	22.95		
3 8.27 6.63 8 × Ø0.88 1.50 2.9 26.42								
Surface roug	ghness (flange): Ra 32 to 248	3 µin					

¹⁾ DN $^3\!/_8$ with DN $^1\!/_2$ flanges as standard

Clamp connections

Tri-Clamp

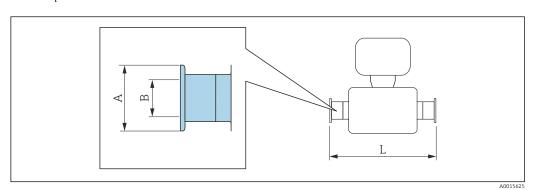

Length tolerance for dimension L in inch: $+0.06\ /\ -0.08$

Tri-Clamp (½") 1.4404 (316/316L) Order code for "Process connection", option FDW							
DN [in]	Clamp [in]	A [in]	B [in]	L [in]			
3/8	1/2	0.98	0.37	9.02			
1/2	1/2	0.98	0.37	10.75			

3-A version available: order code for "Additional approval", option LP in conjunction with Ra $\leq 32~\mu$ in: Order code for "Measuring tube material", option **SB** Ra $\leq 16~\mu$ in: Order code for "Measuring tube material", option **SC**

Tri-Clamp (≥ 1") 1.4404 (316/316L) Order code for "Process connection", option FTS							
DN [in]	Clamp [in]	A [in]	B [in]	L [in]			
3/8	1	1.98	0.87	9.02			
1/2	1	1.98	0.87	10.75			
1	1	1.98	0.87	12.76			
11/2	1½	1.98	1.37	17.95			
2	2	2.52	1.87	22.13			
3	3	3.58	2.87	26.42			


3-A version available: order code for "Additional approval", option LP in conjunction with

Ra \leq 32 µin: Order code for "Measuring tube material", option **SB**

 $Ra \le 16 \mu in$: Order code for "Measuring tube material", option **SC**

Threaded couplings

Thread SMS 1145

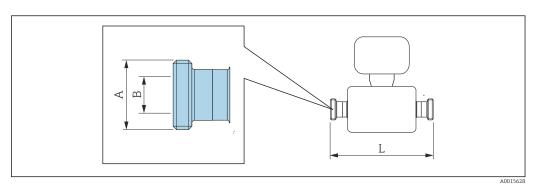


Length tolerance for dimension L in inch: +0.06 / -0.08

Thread SMS 1145 1.4404 (316/316L) Order code for "Process connection", option SCS								
DN [in]	A [in]	B [in]	L [in]					
3/8	Rd 40 × 1/ ₆	0.89	9.02					
1/2	Rd 40 × 1/ ₆	0.89	10.75					
1	Rd 40 × 1/ ₆	0.89	12.76					
1½	Rd 60 × 1/ ₆	1.40	17.95					
2	Rd 70 × 1/ ₆	1.91	22.13					
3	Rd 98 × 1/ ₆	2.87	26.42					

3-A version available: order code for "Additional approval", option LP in conjunction with Ra $\leq 32~\mu in$: Order code for "Measuring tube material", option SB Ra $\leq 16~\mu in$: Order code for "Measuring tube material", option SC

86

VCO

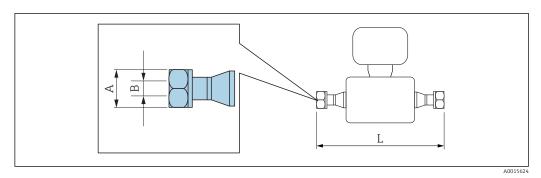


Length tolerance for dimension L in inch: +0.06 / -0.08

8-VCO-4 (½") 1.4404 (316/316L) Order code for "Process connection", option CVS						
DN [in]	A [in]	B [in]	L [in]			
3/8	AF 1	0.40	9.92			


12-VCO-4 (¾") 1.4404 (316/316L) Order code for "Process connection", option CWS						
DN [in]	A [in]	B [in]	L [in]			
1/2	AF 1½	0.62	12.01			

Accessories

Protective cover

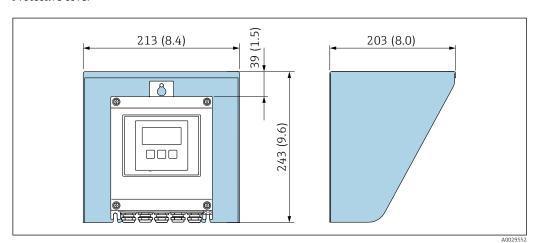

■ 47 Weather protection cover for Proline 500 – digital

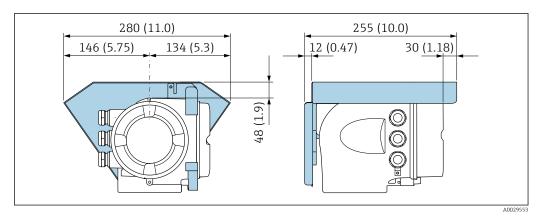


■ 48 Weather protection cover for Proline 500

External WLAN antenna

The external WLAN antenna is not suitable for use in hygienic applications.

Proline 500 – digital


External WLAN antenna mounted on device

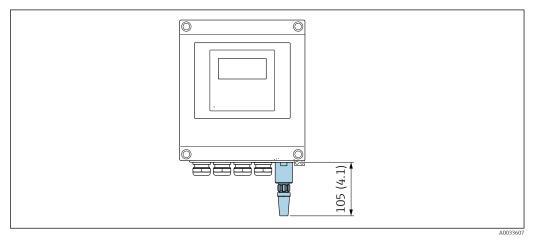

■ 49 Engineering unit mm (in)

External WLAN antenna mounted with cable


The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

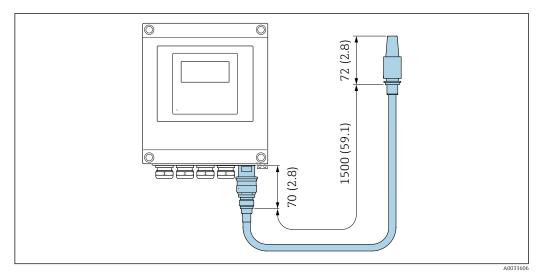

■ 50 Engineering unit mm (in)

Proline 500


External WLAN antenna mounted on device

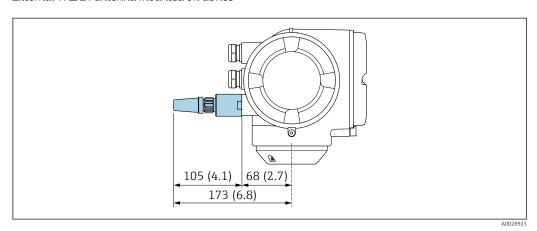

🗷 51 Engineering unit mm (in)

External WLAN antenna mounted with cable

The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

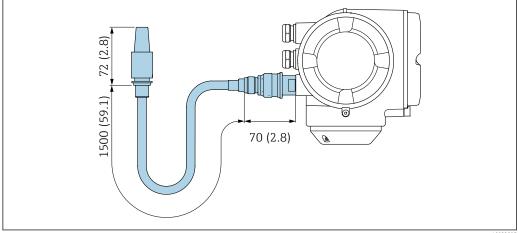

■ 52 Engineering unit mm (in)

Endress+Hauser 89

A0033597

Weight

All values (weight exclusive of packaging material) refer to devices with EN/DIN PN 40 flanges.

Transmitter

- Proline 500 digital polycarbonate: 1.4 kg (3.1 lbs)
- Proline 500 digital aluminum: 2.4 kg (5.3 lbs)
- Proline 500 aluminum: 6.5 kg (14.3 lbs)

Sensor

Sensor with aluminum connection housing version: see the information in the following table

Weight in SI units

DN [mm]	Weight [kg]
8	4
15	4
25	6
40	10
50	15
80	29

Weight in US units

DN [in]	Weight [lbs]
3/8	9
1/2	9
1	13
1 1/2	22
2	33
3	64

Materials

Transmitter housing

Housing of Proline 500 – digital transmitter

Order code for "Transmitter housing":

- Option A "Aluminum coated": aluminum, AlSi10Mq, coated
- Option **D** "Polycarbonate": polycarbonate

Housing of Proline 500 transmitter

Order code for "Transmitter housing":

Option A "Aluminum coated": aluminum, AlSi10Mg, coated

Window material

Order code for "Transmitter housing":


- Option **A** "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic

Sensor connection housing

Order code for "Sensor connection housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **B** "Stainless":
 - Stainless steel 1.4301 (304)
 - Optional: Order code for "Sensor feature", option CC "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)
- Option **C** "Ultra-compact, stainless":
 - Stainless steel 1.4301 (304)
 - Optional: Order code for "Sensor feature", option CC "Hygienic version, for maximum corrosion resistance": stainless steel, 1.4404 (316L)

Cable entries/cable glands

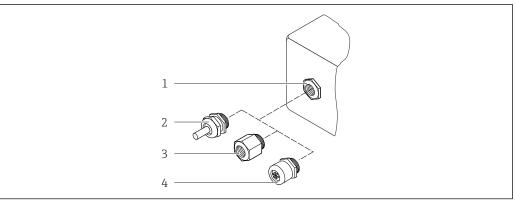

A0028352

■ 53 Possible cable entries/cable glands

- 1 Female thread $M20 \times 1.5$
- 2 Cable gland $M20 \times 1.5$
- 3 Adapter for cable entry with internal thread G $\frac{1}{2}$ " or NPT $\frac{1}{2}$ "
- 4 Device plugs

Cable entries and adapters	Material
Cable gland M20 × 1.5	Plastic
 Adapter for cable entry with internal thread G ½" Adapter for cable entry with internal thread NPT ½" 	Nickel-plated brass
Only available for certain device versions: Order code for "Transmitter housing": Option A "Aluminum, coated" Option D "Polycarbonate" Order code for "Sensor connection housing": Proline 500 – digital: Option A "Aluminum coated" Option B "Stainless" Proline 500: Option B "Stainless"	
Adapter for device plug	Stainless steel, 1.4404 (316L)
 Device plug for digital communication: Only available for certain device versions → ≅ 28. Device plug for connecting cable: A device plug is always used for the device version, order code for "Sensor connection housing", option C (ultracompact, hygienic, stainless). 	
Device plugs	Plug M12 × 1 Socket: Stainless steel, 1.4404 (316L) Contact housing: Polyamide Contacts: Gold-plated brass

Device plug

Electrical connection	Material
Plug M12x1	 Socket: Stainless steel, 1.4404 (316L) Contact housing: Polyamide Contacts: Gold-plated brass


Connecting cable

Connecting cable for sensor - Proline 500 - digital transmitter

PVC cable with copper shield

Connecting cable for sensor - Proline 500 transmitter

- Standard cable: PVC cable with copper shield
- Reinforced cable: PVC cable with copper shield and additional steel wire braided jacket



Sensor housing

- Acid and alkali-resistant outer surface
- Stainless steel 1.4301 (304)

Measuring tubes

Stainless steel, 1.4539 (904L); manifold: stainless steel, 1.4404 (316L)

Process connections

- Flanges according to EN 1092-1 (DIN2501) / according to ASME B 16.5 / as per JIS B2220: Stainless steel, 1.4404 (F316/F316L)
- All other process connections: Stainless steel, 1.4404 (316/316L)
 - Available process connections→ 🖺 93

Seals

Welded process connections without internal seals

Accessories

Protective cover

Stainless steel, 1.4404 (316L)

External WLAN antenna

- Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

Process connections

- Fixed flange connections:
 - EN 1092-1 (DIN 2501) flange
 - EN 1092-1 (DIN 2512N) flange
 - Namur lengths in accordance with NE 132
 - ASME B16.5 flange
 - JIS B2220 flange
 - DIN 11864-2 Form A flange, DIN 11866 series A, flange with notch
- Clamp connections:

Tri-Clamp (OD tubes), DIN 11866 series C

- Thread:
 - DIN 11851 thread, DIN 11866 series A
 - SMS 1145 thread
 - ISO 2853 thread, ISO 2037
 - DIN 11864-1 Form A thread, DIN 11866 series A
- VCO connections:
 - 8-VCO-4
 - 12-VCO-4



Process connection materials $\rightarrow \implies 92$

Surface roughness

All data relate to parts in contact with fluid. The following surface roughness quality can be ordered.

- Not polished
- $Ra_{max} = 0.8 \mu m (32 \mu in)$
- $Ra_{max} = 0.4 \mu m (16 \mu in)$

Operability

Operating concept

Operator-oriented menu structure for user-specific tasks

- Commissioning
- Operation
- Diagnostics
- Expert level

Fast and safe commissioning

- Guided menus ("Make-it-run" wizards) for applications
- Menu guidance with brief descriptions of the individual parameter functions
- Device access via Web server or SmartBlue app $\rightarrow \triangleq 114$
- WLAN access to the device via mobile handheld terminal, tablet or smart phone

Reliable operation

- Operation in local language \rightarrow $\stackrel{ riangle}{ riangle}$ 93
- Uniform operating philosophy applied to device and operating tools
- If replacing electronic modules, transfer the device configuration via the integrated memory (HistoROM backup) which contains the process and measuring device data and the event logbook. No need to reconfigure.

Efficient diagnostics increase measurement availability

- Troubleshooting measures can be called up via the device and in the operating tools
- Diverse simulation options, logbook for events that occur and optional line recorder functions

Languages

Can be operated in the following languages:

- Via local operation
 - English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish
- Via Web browser
 - English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese, Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese

Local operation

Via display module


Two display modules are available:

- Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + WLAN"



Information about WLAN interface →

100

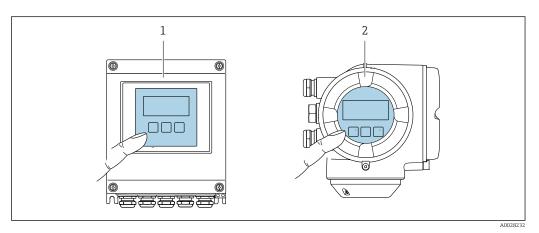

■ 54 Operation with touch control

- 1 Proline 500 digital
- 2 Proline 500

Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F) The readability of the display may be impaired at temperatures outside the temperature range.


Operating elements

- ullet External operation via touch control (3 optical keys) without opening the housing: ullet, ullet, ullet
- Operating elements also accessible in the various zones of the hazardous area

Remote operation


Via HART protocol

This communication interface is available in device versions with a HART output.

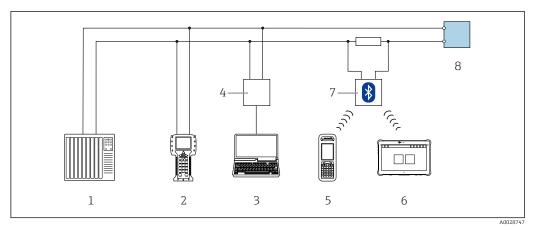

■ 55 Options for remote operation via HART protocol (active)

- 1 Control system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with Web browser (e.g. Internet Explorer) for access to the integrated device Web server or computer with an operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 4 Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- 6 Field Xpert SMT70
- 7 VIATOR Bluetooth modem with connecting cable
- 8 Transmitter

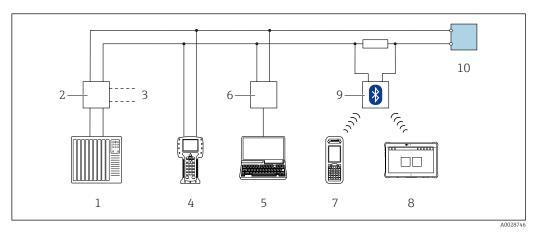


■ 56 Options for remote operation via HART protocol (passive)

- 1 Control system (e.g. PLC)
- 2 Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA195 and Field Communicator 475
- 4 Field Communicator 475
- 5 Computer with Web browser (e.g. Internet Explorer) for access to the integrated device Web server or computer with an operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 6 Commubox FXA195 (USB)
- 7 Field Xpert SFX350 or SFX370
- 8 Field Xpert SMT70
- 9 VIATOR Bluetooth modem with connecting cable
- 10 Transmitter

Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

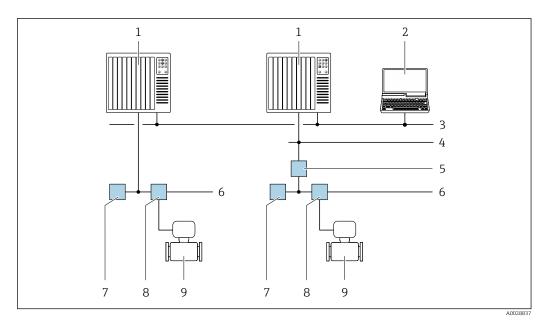


 \blacksquare 57 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- 4 High Speed Ethernet FF-HSE network
- 5 Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- 7 Power supply FF-H1 network
- 8 T-box
- 9 Measuring device

Via PROFIBUS DP network

This communication interface is available in device versions with PROFIBUS DP.

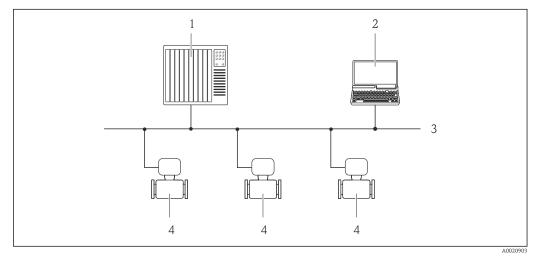


 \blacksquare 58 Options for remote operation via PROFIBUS DP network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Measuring device

Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

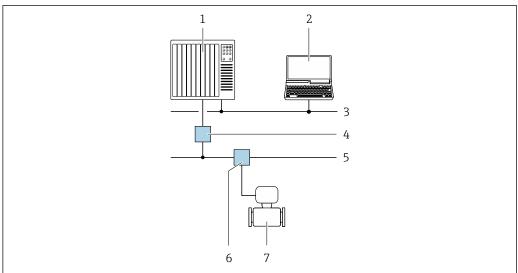


₹ 59 Options for remote operation via PROFIBUS PA network

- Automation system
- Computer with PROFIBUS network card 2
- PROFIBUS DP network
- 4 Segment coupler PROFIBUS DP/PA
- 5 PROFIBUS PA network
- 6 T-box
- Measuring device

Via Modbus RS485 protocol

This communication interface is available in device versions with a Modbus-RS485 output.

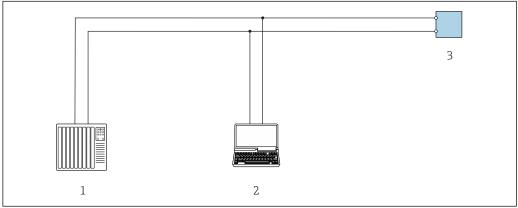


€ 60 Options for remote operation via Modbus-RS485 protocol (active)

- Control system (e.g. PLC)
- Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- Transmitter

Via EtherNet/IP network

This communication interface is available in device versions with EtherNet/IP.

Star topology

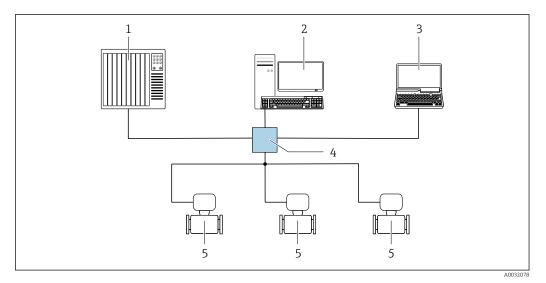


■ 61 Options for remote operation via EtherNet/IP network: star topology

- 1 Automation system, e.g. "RSLogix" (Rockwell Automation)
- 2 Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- 4 Ethernet switch
- 5 Measuring device

Ring topology

The device is integrated via the terminal connection for signal transmission (output 1) and the service interface (CDI-RJ45).

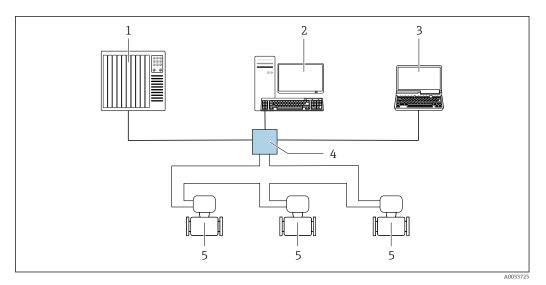

■ 62 Options for remote operation via EtherNet/IP network: ring topology


- 1 Automation system, e.g. "RSLogix" (Rockwell Automation)
- 2 Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- 4 Ethernet switch
- 5 Measuring device

Via PROFINET network

This communication interface is available in device versions with PROFINET.

98

Star topology

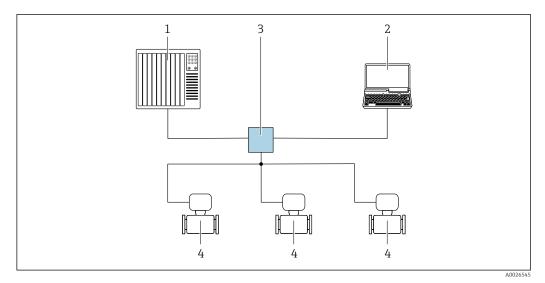


■ 63 Options for remote operation via PROFINET network: star topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

Ring topology

This communication interface is available in device versions with PROFINET.

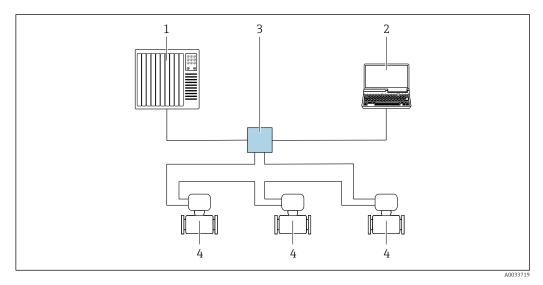

■ 64 Options for remote operation via PROFINET network: ring topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

Service interface


Via service interface (CDI-RJ45)

A point-to-point connection can be established to configure the device onsite. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.

An adapter for RJ45 and the M12 connector is optionally available: Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 connector without opening the device.


Proline 500 - digital transmitter

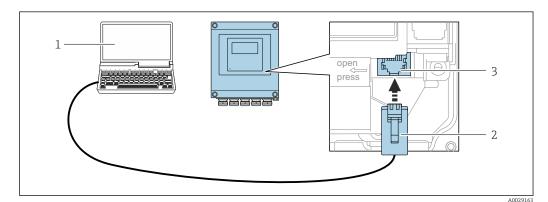

■ 65 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

Proline 500 transmitter

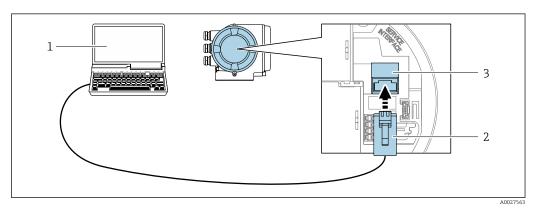


■ 66 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option $\bf G$ "4-line, illuminated, graphic display; touch control + WLAN"

100

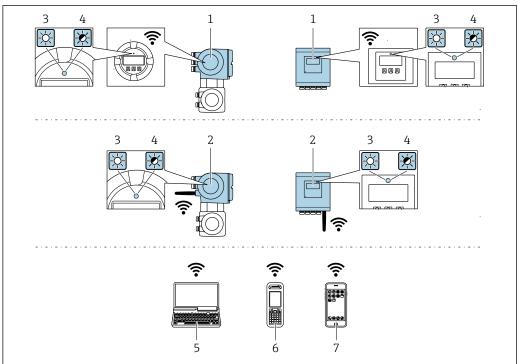

A0024560

- 1 Transmitter with integrated WLAN antenna
- 2 Transmitter with external WLAN antenna
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- 4 LED flashing: WLAN connection established between operating unit and measuring device
- 5 Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- 6 Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)
- 7 Smart phone or tablet (e.g. Field Xpert SMT70)


Function	WLAN: IEEE 802.11 b/g (2.4 GHz) • Access point with DHCP server (default setting) • Network
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)
Configurable WLAN channels	1 to 11
Degree of protection	IP67
Available antennas	 Internal antenna External antenna (optional) In the event of poor transmission/reception conditions at the place of installation. Available as an accessory → □ 112. Only one antenna active in each case!
Max. range	50 m (164 ft)
Materials: External WLAN antenna	 Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass Adapter: Stainless steel and nickel-plated brass Cable: Polyethylene Connector: Nickel-plated brass Angle bracket: Stainless steel

Network integration

With the optional OPC-UA-Server application package, the device can be integrated into an Ethernet network via the service interface (CDI-RJ45 and WLAN) and communicate with OPC-UA clients. If the device is used in this way, IT security must be considered.

For permanent access to device data and for device configuration via the Web server, the device is incorporated directly in a network via the service interface (CDI-RJ45). In this way, the device can be

accessed any time from the control station. The measured values are processed separately via the inputs and outputs through the automation system.

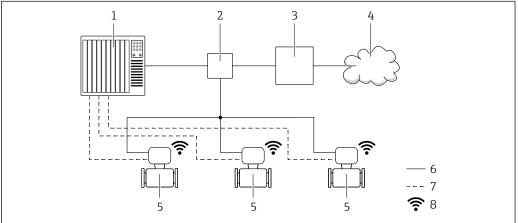

A0033618

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Ethernet switch
- 3 Edge Gateway
- 4 Cloud
- 5 Measuring device
- 6 Ethernet network
- 7 Measured values via inputs and outputs
- 8 Optional WLAN interface
- The optional WLAN interface is available on the following device version:
 Order code for "Display; operation", option **G** "4-line, illuminated, graphic display; touch control + WLAN"

Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	 CDI-RJ45 service interface WLAN interface Ethernet-based fieldbus (EtherNet/IP, PROFINET) 	Special Documentation for device → 🗎 116
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	CDI-RJ45 service interfaceWLAN interfaceFieldbus protocol	→ 🖺 114

Supported operating tools	Operating unit	Interface	Additional information
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	CDI-RJ45 service interfaceWLAN interfaceFieldbus protocol	→ 🖺 114
Device Xpert	Field Xpert SFX 100/350/370	HART and FOUNDATION Fieldbus fieldbus protocol	Operating Instructions BA01202S Device description files: Use update function of handheld terminal



Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:

- FactoryTalk AssetCentre (FTAC) by Rockwell Automation → www.rockwellautomation.com
- Process Device Manager (PDM) by Siemens → www.siemens.com
- Asset Management Solutions (AMS) by Emerson → www.emersonprocess.com
- FieldCommunicator 375/475 by Emerson → www.emersonprocess.com
- Field Device Manager (FDM) by Honeywell → www.honeywellprocess.com
- FieldMate by Yokogawa → www.yokogawa.com
- PACTWare → www.pactware.com

The associated device description files are available at: www.endress.com \rightarrow Downloads

Web server

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option \mathbf{G} "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring device:

- Upload the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)
- Flash firmware version for device firmware upgrade, for instance
- Download driver for system integration
- Visualize up to 1000 saved measured values (only available with the Extended HistoROM application package →

 110)



HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.



When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	Device memory	T-DAT	S-DAT
Available data	 Event logbook such as diagnostic events for example Parameter data record backup Device firmware package Driver for system integration for exporting via Web server, e.g: GSD for PROFIBUS DP GSD for PROFIBUS PA GSDML for PROFINET EDS for EtherNet/IP DD for FOUNDATION Fieldbus 	 Measured value logging ("Extended HistoROM" order option) Current parameter data record (used by firmware at run time) Peakhold indicator (min/max values) Totalizer values 	 Sensor data: nominal diameter etc. Serial number Calibration data Device configuration (e.g. SW options, fixed I/O or multi I/O)
Storage location	Fixed on the user interface board in the connection compartment	Attachable to the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

Data backup

Automatic

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

Manual

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function
 Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

Data transfer

Manual

- Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)
- Transmission of the drivers for system integration via Web server, e.g.:
 - GSD for PROFIBUS DP
 - GSD for PROFIBUS PA
 - GSDML for PROFINET
 - EDS for EtherNet/IP
 - DD for FOUNDATION Fieldbus

Event list

Automatic

- Chronological display of up to 20 event messages in the events list
- If the Extended HistoROM application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

Data logging

Manual

If the **Extended HistoROM** application package (order option) is enabled:

- Record up to 1000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

Certificates and approvals



Currently available certificates and approvals can be called up via the product configurator.

CE mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

C-Tick symbol

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

Ex approval

The measuring device is certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

The following devices have equipment protection level (EPL) Ga/Gb (Zone 0 in the measuring tube):

- Device versions with the order code for "Integrated ISEM electronics", option A and the order code for "Approval; transmitter; sensor", option BI, BJ, BM or BN.
- Device versions with the order code for "Integrated ISEM electronics", option B and the order code for "Approval; transmitter; sensor", option BA, BB, BC or BD.
- The separate Ex documentation (XA) containing all the relevant explosion protection data is available from your Endress+Hauser sales center.

Proline 500 - digital

ATEX/IECEx

Currently, the following versions for use in hazardous areas are available:

Ex ia

	Transmitter		Sensor
Category	Type of protection	Category	Type of protection
II(1)G	[Ex ia] IIC	II1/2G	Ex ia IIC T6T1 Ga/Gb Ex ia IIB T6T1 Ga/Gb
II(1)G	[Ex ia] IIC	II2G	Ex ia IIC T6T1 Gb Ex ia IIB T6T1 Gb
II3(1)G	Ex ec [ia Ga] IIC T5T4 Gc	II1/2G	Ex ia IIC T6T1 Ga/Gb Ex ia IIB T6T1 Ga/Gb
II3(1)G	Ex ec [ia Ga] IIC T5T4 Gc	II2G	Ex ia IIC T6T1 Gb Ex ia IIB T6T1 Gb

Ex tb

	Transmitter		Sensor
Category	Type of protection	Category	Type of protection
II(1)D	[Ex ia] IIIC	II2D	Ex ia tb IIIC T** °C Db

Non-Ex / Ex ec

	Transmitter		Sensor
Category	Type of protection	Category	Type of protection
Non - Ex	Non-Ex	II3G	Ex ec IIC T5T1 Gc
II3G	Ex ec IIC T5T4 Gc	II3G	Ex ec IIC T5T1 Gc

$_{C}CSA_{US}$

Currently, the following versions for use in hazardous areas are available:

IS (Ex nA, Ex i)

Transmitter	Sensor
Class I Division 2 Groups A - D	Class I, II, III Division 1 Groups A-G
Class I Division 2 Groups A - D	Class I, II, III Division 1 Groups C-G

NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Groups A - D	

Ex nA / Ex i

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA [ia Ga] IIC T5T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Ga/Gb Class I, Zone 1 AEx/ Ex ia IIB T6T1 Ga/Gb
Class I, Zone 2 AEx/ Ex nA [ia Ga] IIC T5T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb

Ex nA

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/ Ex nA IIC T5T1 Gc

Ex tb

Transmitter	Sensor
[AEx / Ex ia] IIIC	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

Proline 500

ATEX/IECEx

Currently, the following versions for use in hazardous areas are available:

Ex db eb

Transmitter			Sensor
Category	Type of protection	Category	Type of protection
II2G	Ex db eb ia IIC T6T4 Gb	II1/2G	Ex ia IIC T6T1 Ga/Gb
II2G	Ex db eb ia IIB T6T4 Gb	II1/2G	Ex ia IIB T6T1 Ga/Gb
II2G	Ex db eb ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb
II2G	Ex db eb ia IIB T6T4 Gb	II2G	Ex ia IIB T6T1 Gb

Ex db

Transmitter			Sensor
Category	Type of protection	Category	Type of protection
II2G	Ex db ia IIC T6T4 Gb	II1/2G	Ex ia IIC T6T1 Ga/Gb
II2G	Ex db ia IIB T6T4 Gb	II1/2G	Ex ia IIB T6T1 Ga/Gb
II2G	Ex db ia IIC T6T4 Gb	II2G	Ex ia IIC T6T1 Gb
II2G	Ex db ia IIB T6T4 Gb	II2G	Ex ia IIB T6T1 Gb

Ex tb

Category	Type of protection	
	Transmitter	Sensor
II2D	Ex tb IIIC T85°C Db	Ex ia tb IIIC T** °C Db

Ех ес

Category	Type of protection	
	Transmitter	Sensor
II3G	Ex ec IIC T5T4 Gc	Ex ec IIC T5T1 Gc

$_{C}CSA_{US}$

Currently, the following versions for use in hazardous areas are available:

IS (Ex i) and XP (Ex d)

Transmitter	Sensor
Class I, III, III Division 1 Gr	oups A-G
Class I, III, III Division 1 Groups C-G	

NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Groups	ABCD

Ex de

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex de ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Ga/Gb
Class I, Zone 1 AEx/ Ex de ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Ga/Gb
Class I, Zone 1 AEx/ Ex de ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb
Class I, Zone 1 AEx/ Ex de ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb

Ex d

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex d ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Ga/Gb
Class I, Zone 1 AEx/ Ex d ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Ga/Gb
Class I, Zone 1 AEx/ Ex d ia IIC T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIC T6T1 Gb
Class I, Zone 1 AEx/ Ex d ia IIB T6T4 Gb	Class I, Zone 1 AEx/ Ex ia IIB T6T1 Gb

Ex nA

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/ Ex nA IIC T5T1 Gc

Ex tb

Transmitter	Sensor
Zone 21 AEx/ Ex tb IIIC T85°C Db	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

Sanitary compatibility

■ 3-A approval

Only devices with the order code for "Additional approval", option LP "3A" have 3-A approval.

EHEDG-tested

Only devices with the order code for "Additional approval", option LT "EHEDG" have been tested and meet the requirements of the EHEDG.

To meet the requirements for EHEDG certification, the device must be used with process connections in accordance with the EHEDG position paper entitled "Easy Cleanable Pipe Couplings and Process Connections" (www.ehedq.orq).

- FDA
- Food Contact Materials Regulation (EC) 1935/2004

Pharmaceutical compatibility

- FDA
- USP Class VI
- TSE/BSE Certificate of Suitability

Functional safety

The measuring device can be used for flow monitoring systems (min., max., range) up to SIL 2 (single-channel architecture; order code for "Additional approval", option LA) and SIL 3 (multichannel architecture with homogeneous redundancy) and is independently evaluated and certified by the $T\ddot{U}V$ in accordance with IEC 61508.

The following types of monitoring in safety equipment are possible:

- Mass flow
- Volume flow
- Density



Functional Safety Manual with information on the SIL device $\rightarrow~\cong~116$

HART certification

HART interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified according to HART 7
- The device can also be operated with certified devices of other manufacturers (interoperability)

FOUNDATION Fieldbus certification

FOUNDATION Fieldbus interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified in accordance with FOUNDATION Fieldbus H1
- Interoperability Test Kit (ITK), revision version 6.2.0 (certificate available on request)
- Physical Layer Conformance Test
- The device can also be operated with certified devices of other manufacturers (interoperability)

Certification PROFIBUS

PROFIBUS interface

The measuring device is certified and registered by the PNO (PROFIBUS User Organization Organization). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with PROFIBUS PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

EtherNet/IP certification

The measuring device is certified and registered by the ODVA (Open Device Vendor Association). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with the ODVA Conformance Test
- EtherNet/IP Performance Test
- EtherNet/IP PlugFest compliance
- The device can also be operated with certified devices of other manufacturers (interoperability)

Certification PROFINET

PROFINET interface

The measuring device is certified and registered by the PNO (PROFIBUS User Organization Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to:
 - Test specification for PROFINET devices
 - PROFINET Security Level 2 Netload Class
- The device can also be operated with certified devices of other manufacturers (interoperability)

Pressure Equipment Directive

The devices can be ordered with or without a PED approval. If a device with a PED approval is required, this must be explicitly stated in the order. For devices with nominal diameters less than or equal to DN 25 (1"), this is neither possible nor necessary.

- With the identification PED/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms conformity with the "Essential Safety Requirements" specified in Appendix I of the Pressure Equipment Directive 2014/68/EU.
- Devices bearing this marking (PED) are suitable for the following types of medium:
 - Media in Group 1 and 2 with a vapor pressure greater than, or smaller and equal to 0.5 bar (7.3 psi)
 - Unstable gases
- Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Article 4 paragraph 3 of the Pressure Equipment Directive 2014/68/EU. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU.

Radio approval

The measuring device has radio approval.



For detailed information on the radio approval, see the Special Documentation $\rightarrow~ riangleq 116$

Additional certification

CRN approval

Some device versions have CRN approval. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device.

Tests and certificates

- Pressure test, internal procedure, inspection certificate
- EN10204-3.1 material certificate, wetted parts and sensor housing
- PMI test (XRF), internal procedure, wetted parts, test report
- EN10204-2.1 confirmation of compliance with the order and EN10204-2.2 test report

Other standards and guidelines

■ EN 60529

Degrees of protection provided by enclosures (IP code)

■ IEC/EN 60068-2-6

Environmental influences: Test procedure - Test Fc: vibrate (sinusoidal).

■ IEC/EN 60068-2-31

Environmental influences: Test procedure - Test Ec: shocks due to rough handling, primarily for devices.

■ EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use - general requirements

■ IEC/EN 61326

Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

■ NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

■ NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

■ NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

■ NAMUR NE 80

The application of the pressure equipment directive to process control devices

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

■ NAMUR NE 131

Requirements for field devices for standard applications

NAMUR NE 132
 Coriolis mass meter

Ordering information

Detailed ordering information is available from the following sources:

- In the Product Configurator on the Endress+Hauser website: www.endress.com -> Click "Corporate" -> Select your country -> Click "Products" -> Select the product using the filters and search field -> Open product page -> The "Configure" button to the right of the product image opens the Product Configurator.
- From your Endress+Hauser Sales Center: www.addresses.endress.com



Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- $\, \blacksquare \,$ Ability to order directly in the Endress+Hauser Online Shop

Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.



Diagnostics functions

Package	Description
Extended HistoROM	Comprises extended functions concerning the event log and the activation of the measured value memory.
	Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.
	Data logging (line recorder): Memory capacity for up to 1000 measured values is activated. 250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user. Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.

Heartbeat Technology	Package	Description
	Heartbeat Verification +Monitoring	Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment". Functional testing in the installed state without interrupting the process. Traceable verification results on request, including a report. Simple testing process via local operation or other operating interfaces. Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications. Extension of calibration intervals according to operator's risk assessment. Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to: Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time. Schedule servicing in time. Monitor the process or product quality, e.g. gas pockets.
Concentration	Package	Description
	Concentration	Calculation and outputting of fluid concentrations
	Concentration	The measured density is converted to the concentration of a substance of a binary mixture using the "Concentration" application package: Choice of predefined fluids (e.g. various sugar solutions, acids, alkalis, salts, ethanol etc.) Common or user-defined units ("Brix, "Plato, "M mass, "M volume, mol/l etc.) for standard applications. Concentration calculation from user-defined tables.
Petroleum	Package	Description
	Petroleum	The most important parameters for the Oil & Gas Industry can be calculated and displayed with this application package. Corrected volume flow and calculated reference density in accordance with the "API Manual of Petroleum Measurement Standards, Chapter 11.1" Water content, based on density measurement Weighted mean of the density and temperature
OPC-UA server	Package	Description
	OPC-UA-Server	The application package provides the user with an integrated OPC-UA server for comprehensive instrument services for IoT and SCADA applications.
		Special Documentation for the "OPC-UA-Server" application package → 🖺 116.

Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Device-specific accessories

For the transmitter

Accessories	Description
Transmitter Proline 500 – digital Proline 500	Transmitter for replacement or storage. Use the order code to define the following specifications: Approvals Output Input Display/operation Housing Software Proline 500 – digital transmitter: Order code: 8X5BXX-XXXXXXXXX
	 Proline 500 transmitter: Order code: 8X5BXX-XXXXXXXXXX Proline 500 transmitter for replacement: It is essential to specify the serial number of the current transmitter when ordering. Based on the serial number, the device-specific data (e.g.,
	calibration factors) of the replacement device can be used for the new transmitter. Proline 500 – digital transmitter: Installation Instructions EA01151 Proline 500 transmitter: Installation Instructions EA01152
External WLAN antenna	External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Enclosed accessories", option P8 "Wireless antenna wide area".
	 The external WLAN antenna is not suitable for use in hygienic applications. Further information on the WLAN interface → 100.
	Order number: 71351317 Installation Instructions EA01238D
Pipe mounting set	Pipe mounting set for transmitter.
	 Proline 500 – digital transmitter Order number: 71346427 Proline 500 transmitter Order number: 71346428
Protective cover	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.
Transmitter Proline 500 – digital Proline 500	Proline 500 – digital transmitter Order number: 71343504 Proline 500 transmitter Order number: 71343505 Installation Instructions EA01160
Diamless ground	
Display guard Proline 500 – digital	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.
	Order number: 71228792
	For details, see Installation Instructions EA01161

Connecting cable Proline 500 – digital Sensor – Transmitter	The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection) or as an accessory (order number DK8012). The following cable lengths are available: order code for "Cable, sensor connection" Option B: 20 m (65 ft) Option E: User configurable up to max. 50 m Option F: User configurable up to max. 165 ft Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1000 ft)
Connecting cable Proline 500 Sensor – Transmitter	The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection) or as an accessory (order number DK8012). The following cable lengths are available: order code for "Cable, sensor connection" Option 1: 5 m (16 ft) Option 2: 10 m (32 ft) Option 3: 20 m (65 ft) Possible cable length for a Proline 500 connecting cable: max. 20 m (65 ft)

For the sensor

Accessories	Description
Heating jacket	Is used to stabilize the temperature of the fluids in the sensor. Water, water vapor and other non-corrosive liquids are permitted for use as fluids.
	If using oil as a heating medium, please consult with Endress+Hauser.
	Heating jackets cannot be used with sensors fitted with a rupture disk.
	 If ordered together with the measuring device: order code for "Enclosed accessories" Option RB "heating jacket, G 1/2" internal thread" Option RC "heating jacket, G 3/4" internal thread" Option RD "Heating jacket, NPT 1/2" internal thread" Option RE "Heating jacket, NPT 3/4" internal thread" If ordered subsequently: Use the order code with the product root DK8003. Special Documentation SD02151D

Communication-specific accessories

Accessories	Description
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB interface. Technical Information TI00404F
HART Loop Converter HMX50	Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values. Technical Information TI00429F Operating Instructions BA00371F
Fieldgate FXA320	Gateway for the remote monitoring of connected 4-20 mA measuring devices via a Web browser. Technical Information TI00025S Operating Instructions BA00053S
Fieldgate FXA520	Gateway for the remote diagnostics and remote configuration of connected HART measuring devices via a Web browser. Technical Information TI00025S Operating Instructions BA00051S
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices and can be used in non-hazardous areas. Operating Instructions BA01202S

Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION Fieldbus devices and can be used in the non-hazardous area and in the hazardous area. Operating Instructions BA01202S
Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress. This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.
	 Technical Information TI01342S Operating Instructions BA01709S Product page: www.endress.com/smt70

Service-specific accessories

Accessories	Description
	•
Applicator	 Software for selecting and sizing Endress+Hauser measuring devices: Choice of measuring devices for industrial requirements Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy. Graphic illustration of the calculation results Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.
	Applicator is available: • Via the Internet: https://portal.endress.com/webapp/applicator • As a downloadable DVD for local PC installation.
W@M	W@M Life Cycle Management Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle. W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime. Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit www.endress.com/lifecyclemanagement
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition. Operating Instructions BA00027S and BA00059S
DeviceCare	Tool to connect and configure Endress+Hauser field devices. Innovation brochure IN01047S

System components

Accessories	Description
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.
	Technical Information TI00133ROperating Instructions BA00247R
Cerabar M	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.
	 Technical Information TI00426P and TI00436P Operating Instructions BA00200P and BA00382P

Accessories	Description	
Cerabar S	The pressure transmitter for measuring the absolute and gauge pressure of gases, steam and liquids. It can be used to read in the operating pressure value.	
	Technical Information TI00383POperating Instructions BA00271P	
iTEMP	The temperature transmitters can be used in all applications and are suitable for the measurement of gases, steam and liquids. They can be used to read in the medium temperature.	
	"Fields of Activity" document FA00006T	

Supplementary documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- *W@M Device Viewer* (www.endress.com/deviceviewer): Enter the serial number from
- Endress+Hauser Operations App: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

Standard documentation **Brief Operating Instructions**

Brief Operating Instructions for the sensor

Measuring device	Documentation code
Proline Promass E	KA01260D

Brief Operating Instructions for transmitter

	Documentation code						
Measuring device	HART	FOUNDATION Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Proline 500 – digital	KA01315D	KA01233D	KA01231D	KA01390D	KA01319D	KA01346D	KA01351D
Proline 500	KA01314D	KA01291D		KA01389D	KA01318D	KA01347D	KA01350D

Operating Instructions

Measuring device	Documentation code						
	HART	FOUNDATION Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Promass E 500	BA01528D	BA01561D	BA01550D	BA01872D	BA01539D	BA01749D	BA01760D

Description of Device Parameters

	Documentation code						
Measuring device	HART	FOUNDATION Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Promass 500	GP01060D	GP01096D	GP01061D	GP01137D	GP01062D	GP01120D	GP01121D

Device-dependent additional documentation

Safety instructions

Safety instructions for electrical equipment for hazardous areas.

Contents	Documentation code
	Measuring device
ATEX/IECEx Ex i	XA01473D
ATEX/IECEx Ex ec	XA01474D
cCSAus IS	XA01475D
cCSAus Ex i	XA01509D
cCSAus Ex nA	XA01510D
INMETRO Ex i	XA01476D
INMETRO Ex ec	XA01477D
NEPSI Ex i	XA01478D
NEPSI Ex nA	XA01479D

Special Documentation

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Functional Safety Manual	SD01729D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
OPC-UA Server 1)	SD02040D

1) This Special Documentation is only available for device versions with a HART output.

Contents	Documentation code						
	HART	FOUNDATION Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	PROFINET	EtherNet/IP
Web server	SD01666D	SD01669D	SD01668D	SD02232D	SD01667D	SD01971D	SD01970D
Heartbeat Technology	SD01643D	SD01608D	SD01705D	SD02203D	SD01704D	SD01989D	SD01983D
Concentration measurement	SD01645D	SD01709D	SD01711D	SD02213D	SD01710D	SD02007D	SD02006D
Petroleum	SD02013D	_	_	SD02217D	SD02014D	SD02015D	SD02012D

Installation Instructions

Contents	Comment
Installation instructions for spare part sets and accessories	Documentation code: specified for each individual accessory .

Registered trademarks

HART®

Registered trademark of the FieldComm Group, Austin, Texas, USA

PROFIBUS®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

FOUNDATION™ Fieldbus

Registration-pending trademark of the FieldComm Group, Austin, Texas, USA

116

Modbus[®]

Registered trademark of SCHNEIDER AUTOMATION, INC.

EtherNet/IP™

Trademark of ODVA, Inc.

PROFINET®

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

TRI-CLAMP®

Registered trademark of Ladish & Co., Inc., Kenosha, USA



