# Technical Information **Proline Promag P 500**

Electromagnetic flowmeter



## The flowmeter for highest medium temperatures, as remote version with up to 4 I/Os

#### **Application**

- The bidirectional measuring principle is virtually independent of pressure, density, temperature and viscosity
- Dedicated to chemical and process applications with corrosive liquids and high medium temperatures

#### Device properties

- Nominal diameter: max. DN 600 (24")
- All common Ex approvals
- Liner made of PTFE or PFA
- Remote version with up to 4 I/Os
- Backlit display with touch control and WLAN access
- Standard cable between sensor and transmitter

#### Your benefits

- Versatile applications wide variety of wetted materials
- Energy-saving flow measurement no pressure loss due to cross-section constriction
- Maintenance-free no moving parts
- Full access to process and diagnostic information numerous, freely combinable I/Os and fieldbuses
- Reduced complexity and variety freely configurable I/O functionality
- Integrated verification Heartbeat Technology



## Table of contents

About this document		Shock resistance	
Symbols used	4	Shock resistance	
		Mechanical load	
Function and system design	5	Electromagnetic compatibility (EMC)	56
Measuring principle			
Measuring system	6	Process	
Equipment architecture	7	Medium temperature range	
Safety	8	Conductivity	
		Pressure-temperature ratings	
Input	10	Pressure tightness	
Measured variable		Flow limit	60
Measuring range		Pressure loss	60
Operable flow range		System pressure	61
Input signal		Thermal insulation	62
1		Vibrations	62
Output	13	Machanianlaguaturation	63
Output and input variants	13	Mechanical construction	62
	14	Dimensions in SI units	
Signal on alarm	17	Dimensions in US units	
· ·	20	Weight	
Low flow cut off	21	Measuring tube specification	
Galvanic isolation	21	Materials	
Protocol-specific data	21	Process connections	
-		Surface roughness	
Power supply	26	Surface roughness	04
Terminal assignment			
Device plugs available		Operability	
Pin assignment, device pluq		Operating concept	
Supply voltage	29	Languages	
Power consumption		Local operation	
Current consumption		Remote operation	
Power supply failure	30	Service interface	
Electrical connection	31	Network integration	93
Potential equalization	41	Supported operating tools	
	43	HistoROM data management	95
Cable entries	43		
Cable specification	43	Certificates and approvals	
		CE mark	
Performance characteristics	47	C-Tick symbol	
	47	Ex approval	
Maximum measured error		Pharmaceutical compatibility	
Repeatability	48	Functional safety	
Influence of ambient temperature	48	HART certification	
made of amorem temperature vivivivivivivivi			100
To at all attack	, ,		100
	48		100
	49		100
Orientation	50	* *	100
Inlet and outlet runs	50	1 1	100
Adapters	51	5	100
3	51		100
Mounting the transmitter housing	53	Other standards and guidelines	101
Environment	55	Ordering information	101
	55	oracing information	.01
Storage temperature	55		
Degree of protection	55		101
		Diagnostics functions	102

2

Heartbeat Technology	102
Cleaning	102
OPC-UA server	102
Accessories	102
Device-specific accessories	103
Communication-specific accessories	104
Service-specific accessories	105
System components	105
Supplementary documentation	106
Standard documentation	106
Device-dependent additional documentation	106
Registered trademarks	107

#### About this document

#### Symbols used

#### **Electrical symbols**

Symbol	Meaning
===	Direct current
~	Alternating current
$\overline{}$	Direct current and alternating current
<u></u>	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective Earth (PE) A terminal which must be connected to ground prior to establishing any other connections.
	The ground terminals are situated inside and outside the device:  Inner ground terminal: Connects the protectiv earth to the mains supply.  Outer ground terminal: Connects the device to the plant grounding system.

#### Communication symbols

Symbol	Meaning	
<b>?</b>	Wireless Local Area Network (WLAN) Communication via a wireless, local network.	
•	LED Light emitting diode is off.	
<u> </u>	LED Light emitting diode is on.	
	LED Light emitting diode is flashing.	

#### Symbols for certain types of information

Symbol	Meaning
<b>✓</b>	Permitted Procedures, processes or actions that are permitted.
<b>✓ ✓</b>	Preferred Procedures, processes or actions that are preferred.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
Ţ <u>i</u>	Reference to documentation.
A=	Reference to page.
	Reference to graphic.
	Visual inspection.


#### Symbols in graphics

Symbol	Meaning
1, 2, 3,	Item numbers
1., 2., 3.,	Series of steps
A, B, C,	Views
A-A, B-B, C-C,	Sections
EX	Hazardous area
×	Safe area (non-hazardous area)
≋➡	Flow direction

#### Function and system design

#### Measuring principle

Following *Faraday's law of magnetic induction*, a voltage is induced in a conductor moving through a magnetic field.

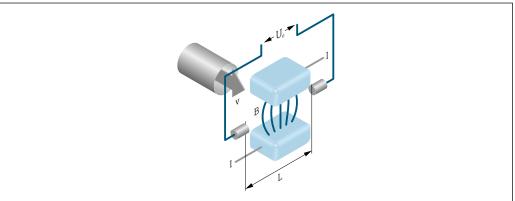

A002896

- Ue Induced voltage
- B Magnetic induction (magnetic field)
- L Electrode spacing
- I Current
- v Flow velocity

In the electromagnetic measuring principle, the flowing medium is the moving conductor. The voltage induced ( $U_e$ ) is proportional to the flow velocity (v) and is supplied to the amplifier by means of two measuring electrodes. The flow volume (Q) is calculated via the pipe cross-section (A). The DC magnetic field is created through a switched direct current of alternating polarity.

#### Formulae for calculation

- Induced voltage  $U_e = B \cdot L \cdot v$
- Volume flow  $Q = A \cdot v$

#### Measuring system

The measuring system consists of a transmitter and a sensor. The transmitter and sensor are mounted in physically separate locations. They are interconnected by connecting cables.

#### Transmitter

Two versions of the transmitter are available.


#### Proline 500 - digital Proline 500 For use in applications not required to meet special requirements due to For use in applications required to meet special requirements due to ambient or operating conditions. ambient or operating conditions. Α В Non-hazardous area or Zone 2; Class I, Division 2 or Zone 1; Class I, Non-hazardous area or Zone 2; Class I, Division 2 Non-hazardous area or Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1 В Transmitter with integrated ISEM Division 1 Transmitter 2 Coil current cable Signal cable 3 Connecting cable: cable, separate, standard 2 Sensor connection housing Sensor connection housing with integrated ISEM • Flexible and cost-effective separate installation. Application examples for sensors without electronics: • A standard cable can be used as the connecting cable. • Sensor in underground installations. • Permanent immersion of sensor in water, IP68 ingress protection. • Electronics in the transmitter housing, ISEM (intelligent sensor • Electronics and ISEM (intelligent sensor electronics module) in the electronics module) in the sensor connection housing transmitter housing • Signal transmission: digital • Signal transmission: analog Order code for "Integrated ISEM electronics", option A "Sensor" Order code for "Integrated ISEM electronics", option **B** "Transmitter" **Connecting cable** (can be ordered in various lengths) → 103 Length: max. 300 m (1000 ft) Length: max. 200 m (656 ft), depending on medium conductivity Standard cable with common shield (pair-stranded) Two connecting cables: Not sensitive to external EMC interference. One cable for coil current with a common shield (1 pair) One cable for signal transmission with a common shield and individual shielded cores (2 pairs) Hazardous area Use in: Zone 2; Class I, Division 2 Use in: Zone 1; Class I, Division 1 oder Zone 2; Class I, Division 2 Mixed installation is possible: • Sensor: Zone 1; Class I, Division 1 ■ Transmitter: Zone 2; Class I, Division 2 Device versions and materials Transmitter housing Transmitter housing Aluminum, coated: aluminum, AlSi10Mq, coated - Aluminum, coated: aluminum, AlSi10Mq, coated Material: polycarbonate Cast, stainless: cast, stainless steel, 1.4409 (CF3M) similar to 316L Material of window in transmitter housing Window material: glass Aluminum, coated: glass - Polycarbonate: plastic

#### Configuration


- External operation via 4-line, backlit, graphic local display with touch control and guided menus ("Make-it-run" wizards) for application-specific commissioning.
- Via service interface or WLAN interface:
- Operating tools (e.g. FieldCare, DeviceCare, SmartBlue app)
- Web server (access via Web browser, e.g. Microsoft Internet Explorer, Microsoft Edge)

#### Sensor connection housing

Different versions of the connection housing are available.

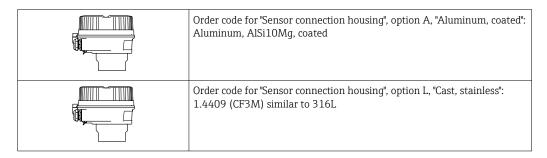


#### Sensor

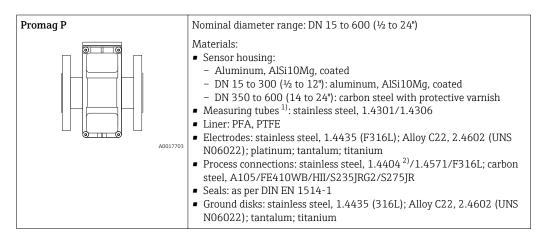

- 1) For flanges made of carbon steel with Al/Zn protective coating (DN 15 to 300 ( $\frac{1}{2}$  to 12")) or protective varnish (DN 350 to 600 (14 to 24"))
- 2) With Al/Zn protective coating (DN 15 to 300 (½ to 12")) or protective varnish (DN 350 to 600 (14 to 24"))

#### **Equipment architecture**

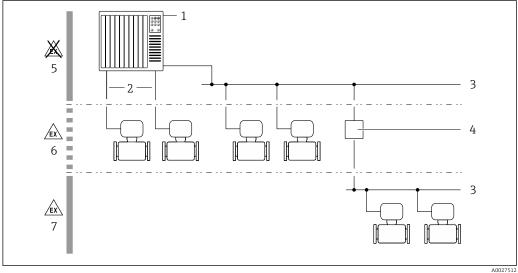

- **■** 1 Possibilities for integrating measuring devices into a system
- 1 Control system (e.g. PLC)
- 2 Connecting cable (0/4 to 20 mA HART etc.)
- 3 Fieldbus
- 4 Segment coupler
- Non-hazardous area
- Hazardous area: Zone 2; Class I, Division 2
- Hazardous area: Zone 1; Class I, Division 1

#### Safety

#### IT security

Our warranty is valid only if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the settings.

IT security measures, which provide additional protection for the device and associated data transfer, must be implemented by the operators themselves in line with their security standards.

#### Device-specific IT security

The device offers a range of specific functions to support protective measures on the operator's side. These functions can be configured by the user and guarantee greater in-operation safety if used correctly. An overview of the most important functions is provided in the following section.

Function/interface	Factory setting	Recommendation
Write protection via hardware write protection switch $\Rightarrow \triangleq 8$	Not enabled.	On an individual basis following risk assessment.
Access code (also applies for Web server login or FieldCare connection) → 🖺 8	Not enabled (0000).	Assign a customized access code during commissioning.
WLAN (order option in display module)	Enabled.	On an individual basis following risk assessment.
WLAN security mode	Enabled (WPA2- PSK)	Do not change.
WLAN passphrase (password) → 🖺 9	Serial number	Assign a customized access code during commissioning.
WLAN mode	Access Point	On an individual basis following risk assessment.
Web server→ 🗎 9	Enabled.	On an individual basis following risk assessment.
CDI-RJ45 service interface → 🖺 9	-	On an individual basis following risk assessment.

#### Protecting access via hardware write protection

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be disabled via a write protection switch (DIP switch on the motherboard). When hardware write protection is enabled, only read access to the parameters is possible.

Hardware write protection is disabled when the device is delivered.

#### Protecting access via a password

Different passwords are available to protect write access to the device parameters or access to the device via the WLAN interface.

- User-specific access code
  - Protect write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare). Access authorization is clearly regulated through the use of a user-specific access code.
- WLAN passphrase
  - The network key protects a connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface which can be ordered as an option.
- Infrastructure mode
  - When the device is operated in infrastructure mode, the WLAN passphrase corresponds to the WLAN passphrase configured on the operator side.

#### User-specific access code

Write access to the device parameters via the local display, Web browser or operating tool (e.g. FieldCare, DeviceCare) can be protected by the modifiable, user-specific access code.

WLAN passphrase: Operation as WLAN access point

A connection between an operating unit (e.g. notebook or tablet) and the device via the WLAN interface, which can be ordered as an optional extra, is protected by the network key. The WLAN authentication of the network key complies with the IEEE 802.11 standard.

When the device is delivered, the network key is pre-defined depending on the device. It can be changed via the **WLAN settings** submenu in the **WLAN passphrase** parameter.

#### Infrastructure mode

A connection between the device and WLAN access point is protected by means of an SSID and passphrase on the system side. Please contact the relevant system administrator for access.

General notes on the use of passwords

- The access code and network key supplied with the device should be changed during commissioning.
- Follow the general rules for generating a secure password when defining and managing the access code or network key.
- The user is responsible for the management and careful handling of the access code and network key.

#### Access via Web server

The device can be operated and configured via a Web browser with the integrated Web server. The connection is via the service interface (CDI-RJ45) or the WLAN interface. For device versions with the EtherNet/IP and PROFINET communication protocols, the connection can also be established via the terminal connection for signal transmission with EtherNet/IP or PROFINET (RJ45 connector).

The Web server is enabled when the device is delivered. The Web server can be disabled if necessary (e.g. after commissioning) via the **Web server functionality** parameter.

The device and status information can be hidden on the login page. This prevents unauthorized access to the information.



#### Access via OPC-UA



The device can communicate with OPC UA clients using the "OPC UA Server" application package.

The OPC UA server integrated in the device can be accessed via the WLAN access point using the WLAN interface - which can be ordered as an optional extra - or the service interface (CDI- RJ45) via Ethernet network. Access rights and authorization as per separate configuration.

The following Security Modes are supported as per the OPC UA Specification (IEC 62541):

- None
- Basic128Rsa15 signed
- Basic128Rsa15 signed and encrypted

Access via service interface (CDI-RJ45)

The device can be connected to a network via the service interface (CDI-RJ45). Device-specific functions quarantee the secure operation of the device in a network.

The use of relevant industrial standards and guidelines that have been defined by national and international safety committees, such as IEC/ISA62443 or the IEEE, is recommended. This includes organizational security measures such as the assignment of access authorization as well as technical measures such as network segmentation.



#### Input

#### Measured variable

#### Direct measured variables

- Volume flow (proportional to induced voltage)
- Electrical conductivity

#### Calculated measured variables

- Mass flow
- Corrected volume flow

#### Measuring range

Typically v = 0.01 to 10 m/s (0.03 to 33 ft/s) with the specified accuracy

Flow characteristic values in SI units: DN 15 to 125 (1/2 to 4")


	inal ieter	Recommended flow	Factory settings		
		min./max. full scale value (v ~ 0.3/10 m/s)	Full scale value current output (v ~ 2.5 m/s)	Pulse value (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[mm]	[in]	[dm³/min]	[dm³/min]	[dm³]	[dm³/min]
15	1/2	4 to 100	25	0.2	0.5
25	1	9 to 300	75	0.5	1
32	-	15 to 500	125	1	2
40	1 ½	25 to 700	200	1.5	3
50	2	35 to 1100	300	2.5	5
65	-	60 to 2 000	500	5	8
80	3	90 to 3 000	750	5	12
100	4	145 to 4700	1200	10	20
125	-	220 to 7 500	1850	15	30

Flow characteristic values in SI units: DN 150 to 600 (6 to 24")

Non dian	inal ieter	Recommended flow	Factory settings		
		min./max. full scale value (v ~ 0.3/10 m/s)	Full scale value current output (v ~ 2.5 m/s)	Pulse value (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[mm]	[in]	[m³/h]	[m <sup>3</sup> /h]	[m <sup>3</sup> ]	[m <sup>3</sup> /h]
150	6	20 to 600	150	0.03	2.5
200	8	35 to 1100	300	0.05	5
250	10	55 to 1700	500	0.05	7.5
300	12	80 to 2 400	750	0.1	10
350	14	110 to 3 300	1000	0.1	15
400	16	140 to 4200	1200	0.15	20
450	18	180 to 5 400	1500	0.25	25
500	20	220 to 6600	2 000	0.25	30
600	24	310 to 9600	2 500	0.3	40

Flow characteristic values in US units

	ninal neter	Recommended flow	Factory settings		
min./max. full scale value (v ~ 0.3/10 m/s)		min./max. full scale value (v ~ 0.3/10 m/s)	Full scale value current output (v ~ 2.5 m/s)	Pulse value (~ 2 pulse/s)	Low flow cut off (v ~ 0.04 m/s)
[in]	[mm]	[gal/min]	[gal/min]	[gal]	[gal/min]
1/2	15	1.0 to 27	6	0.1	0.15
1	25	2.5 to 80	18	0.2	0.25
1 ½	40	7 to 190	50	0.5	0.75
2	50	10 to 300	75	0.5	1.25
3	80	24 to 800	200	2	2.5
4	100	40 to 1250	300	2	4
6	150	90 to 2 650	600	5	12
8	200	155 to 4850	1200	10	15
10	250	250 to 7 500	1500	15	30
12	300	350 to 10600	2400	25	45
14	350	500 to 15 000	3600	30	60
16	400	600 to 19000	4800	50	60
18	450	800 to 24 000	6000	50	90
20	500	1000 to 30000	7500	75	120
24	600	1400 to 44000	10500	100	180

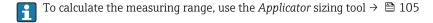

#### Recommended measuring range

Operable flow range

Over 1000:1

#### Input signal

#### Input and output versions

→ 🖺 13

#### External measured values

To increase the accuracy of certain measured variables or to calculate the corrected volume flow, the automation system can continuously write different measured values to the measuring device:

- Medium temperature to increase the accuracy of the electrical conductivity (e.g. iTEMP)
- Reference density for calculating the corrected volume flow

It is recommended to read in external measured values to calculate the corrected volume flow.

#### HART protocol

The measured values are written from the automation system to the measuring device via the HART protocol. The pressure transmitter must support the following protocol-specific functions:

- HART protocol
- Burst mode

#### Current input

#### Digital communication

The measured values can be written from the automation system to the measuring via:

- FOUNDATION Fieldbus
- PROFIBUS DP
- PROFIBUS PA
- Modbus RS485
- EtherNet/IP
- PROFINET

#### Current input 0/4 to 20 mA

Current input	0/4 to 20 mA (active/passive)	
Current span	<ul><li>4 to 20 mA (active)</li><li>0/4 to 20 mA (passive)</li></ul>	
Resolution	1 μA	
Voltage drop	Typically: 0.6 to 2 V for 3.6 to 22 mA (passive)	
Maximum input voltage	≤ 30 V (passive)	
Open-circuit voltage	≤ 28.8 V (active)	
Possible input variables	<ul><li>Pressure</li><li>Temperature</li><li>Density</li></ul>	

#### Status input

Maximum input values	■ DC $-3$ to 30 V ■ If status input is active (ON): $R_i > 3 \text{ k}\Omega$	
Response time	djustable: 5 to 200 ms	
Input signal level	<ul> <li>Low signal: DC -3 to +5 V</li> <li>High signal: DC 12 to 30 V</li> </ul>	
Assignable functions	<ul> <li>Off</li> <li>Reset the individual totalizers separately</li> <li>Reset all totalizers</li> <li>Flow override</li> </ul>	

#### Output

#### Output and input variants

Depending on the option selected for output/input 1, different options are available for the other outputs and inputs. Only one option can be selected for each output/input 1 to 4. The table must be read vertically  $(\downarrow)$ .

Example: If the option BA "4-20 mA HART" was selected for output/input 1, one of the options A, B, D, E, F, H, I or J is available for output 2, and one of the options A, B, D, E, F, H, I or J is available for output 3 and 4.

Order code for "Output; input 1" (020) →		Possible options								
Current output 4 to 20 mA HART	BA									
Current output 4 to 20 mA HART Ex i	<b>1</b>	CA								
FOUNDATION Fieldbus		<b>\</b>	SA							
FOUNDATION Fieldbus Ex i			<b>\</b>	TA						
PROFIBUS DP				4	LA					
PROFIBUS PA					<b>\</b>	GA				
PROFIBUS PA Ex i						<b>\</b>	НА			
Modbus RS485							<b>\</b>	MA		
EtherNet/IP 2-port switch integrated								<b>\</b>	NA	
PROFINET 2-port switch integrated									<b>\</b>	RA
Order code for "Output; input 2" (021) →	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>
Not assigned	A	Α	Α	Α	Α	Α	Α	Α	Α	Α
Current output 0/4 to 20 mA	В		В		В	В		В	В	В
Current output 0/4 to 20 mA (Ex i)		С		С			С			
User configurable input/output 1)	D		D		D	D		D	D	D
Pulse/frequency/switch output	Е		Е		Е	Е		Е	Е	Е
Double pulse output <sup>2)</sup>	F							F		
Pulse/frequency/switch output (Ex i)		G		G			G			
Relay output	Н		Н		Н	Н		Н	Н	Н
Current input 0/4 to 20 mA	I		I		I	I		I	I	I
Status input	J		J		J	J		J	J	J
Order code for "Output; input 3" (022), "Output; input 4" (023) $^{3)}$ $\rightarrow$	4	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>	<b>\</b>
Not assigned	А	Α	Α	Α	Α	Α	Α	Α	Α	Α
Current output 0/4 to 20 mA	В				В			В	В	В
Current output 0/4 to 20 mA (Ex i)		С								
User configurable input/output	D				D			D	D	D
Pulse/frequency/switch output	Е				Е			Е	Е	Е
Double pulse output (slave) <sup>4)</sup>	F							F		
Pulse/frequency/switch output (Ex i)		G								
Relay output	Н				Н			Н	Н	Н
Current input 0/4 to 20 mA	I				I			I	I	I
Status input	J				J			J	J	J

- 2) If double pulse output (F) is selected for output/input 2 (021), only the double pulse output (F) option is available for selection for output/input 3 (022)
- 3) The order code for "Output; input 4" (023) is only available for the Proline 500 digital transmitter.
- 4) The double pulse output (F) option is not available for input/output 4.

#### Output signal

#### HART current output

Current output	4 to 20 mA HART
Current span	Can be set to: 4 to 20 mA (active/passive)
	Ex-i, passive
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	250 to 700 Ω
Resolution	0.38 μΑ
Damping	Configurable: 0.07 to 999 s
Assignable measured variables	<ul> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow</li> <li>Flow velocity</li> <li>Conductivity</li> <li>Corrected conductivity</li> <li>Electronic temperature</li> </ul>

#### PROFIBUS PA

PROFIBUS PA	In accordance with EN 50170 Volume 2, IEC 61158-2 (MBP), galvanically isolated
Data transmission	31.25 kbit/s
Current consumption	10 mA 16 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

#### PROFIBUS DP

Signal encoding	NRZ code
Data transfer	9.6 kBaud12 MBaud

#### EtherNet/IP

Standards	In accordance with IEEE 802.3
-----------	-------------------------------

#### PROFINET

Standards In accordance with IEEE 802.3	
---	--

#### FOUNDATION Fieldbus

FOUNDATION Fieldbus	H1, IEC 61158-2, galvanically isolated
Data transfer	31.25 kbit/s
Current consumption	10 mA
Permitted supply voltage	9 to 32 V
Bus connection	With integrated reverse polarity protection

#### Modbus RS485

Physical interface	RS485 in accordance with EIA/TIA-485 standard
Terminating resistor	Integrated, can be activated via DIP switches

#### Current output 0/4 to 20 mA

Current output	0/4 to 20 mA
Maximum output values	22.5 mA
Current span	Can be set to:  4 to 20 mA (active)  0/4 to 20 mA (passive)  Ex-i, passive
Open-circuit voltage	DC 28.8 V (active)
Maximum input voltage	DC 30 V (passive)
Load	0 to 700 $\Omega$
Resolution	0.38 μΑ
Damping	Adjustable: 0.07 to 999 s
Assignable measured variables	<ul> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow</li> <li>Flow velocity</li> <li>Conductivity</li> <li>Corrected conductivity</li> <li>Temperature</li> <li>Electronic temperature</li> </ul>

#### Pulse/frequency/switch output

Function	Can be set to pulse, frequency or switch output
Version	Open collector
	Can be set to:
	Passive
	Ex-i, passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Pulse output	
Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Pulse width	Adjustable: 0.05 to 2 000 ms
Maximum pulse rate	10 000 Impulse/s
Pulse value	Adjustable
Assignable measured	■ Volume flow
variables	■ Mass flow
	Corrected volume flow
Frequency output	

Maximum input values	DC 30 V, 250 mA (passive)
Maximum output current	22.5 mA (active)
Open-circuit voltage	DC 28.8 V (active)
Output frequency	Adjustable: end value frequency 2 to 10 000 Hz (f <sub>max</sub> = 12 500 Hz)
Damping	Adjustable: 0 to 999 s
Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow</li> <li>Flow velocity</li> <li>Conductivity</li> <li>Corrected conductivity</li> <li>Temperature</li> <li>Electronic temperature</li> </ul>
Switch output	
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Switching behavior	Binary, conductive or non-conductive
Switching delay	Adjustable: 0 to 100 s
Number of switching cycles	Unlimited
Assignable functions	<ul> <li>Off</li> <li>On</li> <li>Diagnostic behavior</li> <li>Limit value:          <ul> <li>Off</li> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow</li> <li>Flow velocity</li> <li>Conductivity</li> <li>Corrected conductivity</li> <li>Totalizer 1-3</li> <li>Temperature</li> <li>Electronic temperature</li> </ul> </li> <li>Flow direction monitoring</li> <li>Status  <ul> <li>Empty pipe detection</li> <li>Low flow</li> </ul> </li> </ul>

#### Double pulse output

Function	Double pulse
Version	Open collector
	Can be set to:  • Active • Passive
Maximum input values	DC 30 V, 250 mA (passive)
Open-circuit voltage	DC 28.8 V (active)
Voltage drop	For 22.5 mA: ≤ DC 2 V
Output frequency	Adjustable: 0 to 1 000 Hz
Damping	Adjustable: 0 to 999 s

Pulse/pause ratio	1:1
Assignable measured variables	<ul> <li>Volume flow</li> <li>Mass flow</li> <li>Corrected volume flow</li> <li>Flow velocity</li> <li>Conductivity</li> <li>Corrected conductivity</li> <li>Temperature</li> <li>Electronic temperature</li> </ul>

#### Relay output

Function	Switch output
Version	Relay output, galvanically isolated
Switching behavior	Can be set to: NO (normally open), factory setting NC (normally closed)
Maximum switching capacity (passive)	■ DC 30 V, 0.1 A ■ AC 30 V, 0.5 A
Assignable functions	■ Off ■ On ■ Diagnostic behavior ■ Limit value:

#### User configurable input/output

 $\textbf{One} \ specific input \ or \ output \ is \ assigned \ to \ a \ user-configurable \ input/output \ (configurable \ I/O) \ during \ device \ commissioning.$ 

The following inputs and outputs are available for assignment:

- Choice of current output: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Pulse/frequency/switch output
- Choice of current input: 4 to 20 mA (active), 0/4 to 20 mA (passive)
- Status input

The technical values correspond to those of the inputs and outputs described in this section.

#### Signal on alarm

Depending on the interface, failure information is displayed as follows:

#### **HART** current output

Device diagnostics	Device condition can be read out via HART Command 48

#### PROFIBUS PA

Status and alarm messages	Diagnostics in accordance with PROFIBUS PA Profile 3.02
Error current FDE (Fault Disconnection Electronic)	0 mA

#### PROFIBUS DP

Status and alarm	Diagnostics in accordance with PROFIBUS PA Profile 3.02
messages	

#### EtherNet/IP

Device diagnostics	Device condition can be read out in Input Assembly
--------------------	--

#### PROFINET

#### FOUNDATION Fieldbus

Status and alarm messages	Diagnostics in accordance with FF-891
Error current FDE (Fault Disconnection Electronic)	0 mA

#### Modbus RS485

Failure mode	Choose from:
	<ul> <li>NaN value instead of current value</li> </ul>
	■ Last valid value

#### Current output 0/4 to 20 mA

#### 4 to 20 mA

Failure mode	Choose from:  4 to 20 mA in accordance with NAMUR recommendation NE 43  4 to 20 mA in accordance with US  Min. value: 3.59 mA  Max. value: 22.5 mA  Freely definable value between: 3.59 to 22.5 mA
	<ul><li>Actual value</li><li>Last valid value</li></ul>

#### 0 to 20 mA

Failure mode	Choose from:
	■ Maximum alarm: 22 mA
	■ Freely definable value between: 0 to 20.5 mA

#### Pulse/frequency/switch output

Pulse output	
Failure mode	Choose from:  Actual value  No pulses
Frequency output	
Failure mode	Choose from:  Actual value  O Hz  Defined value (f max 2 to 12 500 Hz)
Switch output	
Failure mode	Choose from:  Current status  Open  Closed

#### Relay output

Failure mode	Choose from:
	<ul><li>Current status</li><li>Open</li></ul>
	■ Closed

#### Local display

Plain text display	With information on cause and remedial measures
Backlight	Red backlighting indicates a device error.



Status signal as per NAMUR recommendation NE 107

#### Interface/protocol

- Via digital communication:
  - HART protocol
  - FOUNDATION Fieldbus
  - PROFIBUS PA
  - PROFIBUS DP
  - Modbus RS485
  - EtherNet/IP
  - PROFINET
- Via service interface
  - CDI-RJ45 service interface
  - WLAN interface

Plain text display	With information on cause and remedial measures
--------------------	---



Additional information on remote operation  $\rightarrow~ \blacksquare~86$ 

#### Web server

Plain text display	With information on cause and remedial measures

#### Light emitting diodes (LED)

Status information	Status indicated by various light emitting diodes
	The following information is displayed depending on the device version:  Supply voltage active  Data transmission active  Device alarm/error has occurred  EtherNet/IP network available  EtherNet/IP connection established  PROFINET network available  PROFINET connection established  PROFINET blinking feature

#### Ex connection data

#### Safety-related values

Order code for "Output; input 1"	Output type	Safety-related values "Output; input 1"		
		26 (+)	27 (-)	
Option <b>BA</b>	Current output 4 to 20 mA HART	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>GA</b>	PROFIBUS PA	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>LA</b>	PROFIBUS DP	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>MA</b>	Modbus RS485	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>SA</b>	FOUNDATION Fieldbus	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>NA</b>	EtherNet/IP	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		
Option <b>RA</b>	PROFINET	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$		

Order code for	Output type	Safety-related values						
"Output; input 2"; "Output; input 3" "Output; input 4"		Output; input 2		output; input 2 Output; inpu			t; input	
• / •		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)	
Option <b>B</b>	Current output 4 to 20 mA	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$						
Option <b>D</b>	User configurable input/output	14	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$					
Option <b>E</b>	Pulse/frequency/switch output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$						
Option <b>F</b>	Double pulse output	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$						
Option <b>H</b>	Relay output	$U_N = 30 \text{ V}_{DC}$ $I_N = 100 \text{ mA}_{DC}/500 \text{ mA}_{AC}$ $U_M = 250 \text{ V}_{AC}$						
Option I	Current input 4 to 20 mA	$U_{N} = 30 V_{DC}$ $U_{M} = 250 V_{AC}$						
Option <b>J</b>	Status input	$U_N = 30 V_{DC}$ $U_M = 250 V_{AC}$						

1) The order code "Output; input 4" is only available for the Proline 500 – digital transmitter.

#### Intrinsically safe values

Order code for "Output; input 1"	Output type	Intrinsically safe values "Output; input 1"		
		26 (+)	27 (-)	
Option <b>CA</b>	Current output 4 to 20 mA HART Ex i	$ \begin{aligned} &U_{i} = 30 \text{ V} \\ &I_{i} = 100 \text{ mA} \\ &P_{i} = 1.25 \text{ W} \\ &L_{i} = 0 \\ &C_{i} = 0 \end{aligned} $		
Option <b>HA</b>	PROFIBUS PA Ex i	$Ex ia ^{1)} \\ U_i = 30 V \\ l_i = 570 mA \\ P_i = 8.5 W \\ L_i = 10 \mu H \\ C_i = 5 nF$	Ex ic $^{2}$ ) $U_{i} = 32 \text{ V}$ $l_{i} = 570 \text{ mA}$ $P_{i} = 8.5 \text{ W}$ $L_{i} = 10  \mu\text{H}$ $C_{i} = 5 \text{ nF}$	
Option TA	FOUNDATION Fieldbus Ex i	$\begin{aligned} &\textbf{Ex ia}^{\ 1)} \\ &\textbf{U}_i = 30 \text{ V} \\ &\textbf{I}_i = 570 \text{ mA} \\ &\textbf{P}_i = 8.5 \text{ W} \\ &\textbf{L}_i = 10  \mu\text{H} \\ &\textbf{C}_i = 5 \text{ nF} \end{aligned}$	Ex ic $^{2}$ ) $U_{i} = 32 \text{ V}$ $l_{i} = 570 \text{ mA}$ $P_{i} = 8.5 \text{ W}$ $L_{i} = 10  \mu\text{H}$ $C_{i} = 5 \text{ nF}$	

- 1) Only available for the Zone 1; Class I, Division 1 version
- $\hbox{Only available for the Zone 2; Class I, Division 2 version and only for the Proline 500-digital transmitter } \\$

Order code for	Output type Intrinsically safe values or NIFW va			FW value	S		
"Output; input 2"; "Output; input 3"	Output: input 5		input 2	2 Output; input 3		Output; input 4 1)	
"Output; input 4"		24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
Option C	Current output 4 to 20 mA Ex i	$\begin{aligned} &U_i = 30 \text{ V} \\ &l_i = 100 \text{ r} \\ &P_i = 1.25 \\ &L_i = 0 \\ &C_i = 0 \end{aligned}$	nA				
Option <b>G</b>	Pulse/frequency/switch output Ex i	$\begin{aligned} &U_i = 30 \text{ V} \\ &l_i = 100 \text{ r} \\ &P_i = 1.25 \\ &L_i = 0 \\ &C_i = 0 \end{aligned}$	nA				

The order code "Output; input 4" is only available for the Proline 500 – digital transmitter.

#### Low flow cut off

The switch points for low flow cut off are user-selectable.

#### Galvanic isolation

The outputs are galvanically isolated from one another and from earth (PE).

#### Protocol-specific data

#### HART

Manufacturer ID	0x11
Device type ID	0x3C
HART protocol revision	7
Device description files (DTM, DD)	Information and files under: www.endress.com
HART load	Min. 250 Ω
System integration	Information on system integration: Operating Instructions → 🗎 106.  ■ Measured variables via HART protocol  ■ Burst Mode functionality

#### PROFIBUS PA

Manufacturer ID	0x11
Ident number	0x156C
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under:  www.endress.com www.profibus.org
Supported functions	Identification & Maintenance     Simplest device identification on the part of the control system and nameplate     PROFIBUS upload/download     Reading and writing parameters is up to ten times faster with PROFIBUS upload/download     Condensed status     Simplest and self-explanatory diagnostic information by categorizing diagnostic messages that occur
Configuration of the device address	<ul> <li>DIP switches on the I/O electronics module</li> <li>Local display</li> <li>Via operating tools (e.g. FieldCare)</li> </ul>
Compatibility with earlier model	If the device is replaced, the measuring device Promag 500 supports the compatibility of the cyclic data with previous models. It is not necessary to adjust the engineering parameters of the PROFIBUS network with the Promag 500 GSD file.
	Earlier models:  Promag 50 PROFIBUS PA  ID No.: 1525 (hex)  Extended GSD file: EH3x1525.gsd  Standard GSD file: EH3_1525.gsd  Promag 53 PROFIBUS PA  ID No.: 1527 (hex)  Extended GSD file: EH3x1527.gsd  Standard GSD file: EH3x1527.gsd
	Description of the function scope of compatibility: Operating Instructions → 🗎 106.
System integration	Information regarding system integration: Operating Instructions → 🖺 106.  Cyclic data transmission  Block model  Description of the modules

#### PROFIBUS DP

Manufacturer ID	0x11
Ident number	0x1570
Profile version	3.02
Device description files (GSD, DTM, DD)	Information and files under:  ■ www.endress.com  On the product page for the device: Documents/Software → Device drivers  ■ www.profibus.org
Supported functions	<ul> <li>Identification &amp; Maintenance         Simplest device identification on the part of the control system and         nameplate</li> <li>PROFIBUS upload/download         Reading and writing parameters is up to ten times faster with PROFIBUS         upload/download</li> <li>Condensed status         Simplest and self-explanatory diagnostic information by categorizing         diagnostic messages that occur</li> </ul>

Configuration of the device address	<ul> <li>DIP switches on the I/O electronics module</li> <li>Via operating tools (e.g. FieldCare)</li> </ul>
System integration	Information regarding system integration: Operating Instructions $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
	<ul> <li>Cyclic data transmission</li> <li>Block model</li> <li>Description of the modules</li> </ul>

#### EtherNet/IP

Protocol	■ The CIP Networks Library Volume 1: Common Industrial Protocol					
	■ The CIP Networks Library Volume 2: EtherNet/IP Adaptation of CIP					
Communication type	■ 10Base-T ■ 100Base-TX					
Device profile	Generic device (product type: 0x2B)					
Manufacturer ID	0x11					
Device type ID	0x103C					
Baud rates	Automatic 10/100 Mbit with half-duplex and full-duplex detection					
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs					
Supported CIP connections	Max. 3 connections					
Explicit connections	Max. 6 connections					
I/O connections	Max. 6 connections (scanner)					
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module for IP addressing</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>Electronic Data Sheet (EDS) integrated in the measuring device</li> </ul>					
Configuration of the EtherNet interface	<ul> <li>Speed: 10 MBit, 100 MBit, auto (factory setting)</li> <li>Duplex: half-duplex, full-duplex, auto (factory setting)</li> </ul>					
Configuration of the device address	<ul> <li>DIP switches on the electronics module for IP addressing (last octet)</li> <li>DHCP</li> <li>Manufacturer-specific software (FieldCare)</li> <li>Add-on Profile Level 3 for Rockwell Automation control systems</li> <li>Web browser</li> <li>EtherNet/IP tools, e.g. RSLinx (Rockwell Automation)</li> </ul>					
Device Level Ring (DLR)	Yes					
System integration	Information regarding system integration: Operating Instructions $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $					
	<ul> <li>Cyclic data transmission</li> <li>Block model</li> <li>Input and output groups</li> </ul>					

#### PROFINET

Protocol	"Application layer protocol for decentral device periphery and distributed automation", version 2.3
Communication type	100 MBit/s
Conformity class	Conformance Class B
Netload Class	Netload Class II
Baud rates	Automatic 100 Mbit/s with full-duplex detection
Cycle times	From 8 ms
Polarity	Auto-polarity for automatic correction of crossed TxD and RxD pairs

Media Redundancy Protocol (MRP)	Yes
Device profile	Application interface identifier 0xF600 Generic device
Manufacturer ID	0x11
Device type ID	0x843C
Device description files (GSD, DTM, DD)	Information and files under:  ■ www.endress.com  On the product page for the device: Documents/Software → Device drivers  ■ www.profibus.org
Supported connections	<ul> <li>1 x AR (IO Controller AR)</li> <li>1 x AR (IO-Supervisor Device AR connection allowed)</li> <li>1 x Input CR (Communication Relation)</li> <li>1 x Output CR (Communication Relation)</li> <li>1 x Alarm CR (Communication Relation)</li> </ul>
Configuration options for measuring device	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>Manufacturer-specific software (FieldCare, DeviceCare)</li> <li>Web browser</li> <li>Device master file (GSD), can be read out via the integrated Web server of the measuring device</li> </ul>
Configuration of the device name	<ul> <li>DIP switches on the electronics module, for device name assignment (last part)</li> <li>DCP protocol</li> <li>Process Device Manager (PDM)</li> <li>Integrated Web server</li> </ul>
Supported functions	<ul> <li>Identification &amp; Maintenance         Simple device identification via:</li></ul>
System integration	Information regarding system integration: Operating Instructions → 🖺 106.  Cyclic data transmission Overview and description of the modules Status coding Startup configuration Factory setting:

#### FOUNDATION Fieldbus

Manufacturer ID	0x452B48 (hex)
Ident number	0x103C (hex)
Device revision	1
DD revision	Information and files under:
CFF revision	<ul><li>www.endress.com</li><li>www.fieldbus.org</li></ul>
Interoperability Test Kit (ITK)	Version 6.2.0
ITK Test Campaign Number	Information:  www.endress.com www.fieldbus.org
Link Master capability (LAS)	Yes
Choice of "Link Master" and "Basic Device"	Yes Factory setting: Basic Device

Node address	Factory setting: 247 (0xF7)
Supported functions	The following methods are supported:  Restart  ENP Restart  Diagnostic  Set to OOS  Set to AUTO  Read trend data  Read event logbook
Virtual Communication Relation	nships (VCRs)
Number of VCRs	44
Number of link objects in VFD	50
Permanent entries	1
Client VCRs	0
Server VCRs	10
Source VCRs	43
Sink VCRs	0
Subscriber VCRs	43
Publisher VCRs	43
Device Link Capabilities	
Slot time	4
Min. delay between PDU	8
Max. response delay	16
System integration	Information regarding system integration: Operating Instructions → 🗎 106.  Cyclic data transmission Description of the modules Execution times Methods

#### Modbus RS485

Protocol	Modbus Applications Protocol Specification V1.1					
Response times	<ul> <li>Direct data access: typically 25 to 50 ms</li> <li>Auto-scan buffer (data range): typically 3 to 5 ms</li> </ul>					
Device type	Slave					
Slave address range	1 to 247					
Broadcast address range	0					
Function codes	<ul> <li>03: Read holding register</li> <li>04: Read input register</li> <li>06: Write single registers</li> <li>08: Diagnostics</li> <li>16: Write multiple registers</li> <li>23: Read/write multiple registers</li> </ul>					
Broadcast messages	Supported by the following function codes:  • 06: Write single registers  • 16: Write multiple registers  • 23: Read/write multiple registers					

C	- 1200 DAID
Supported baud rate	■ 1200 BAUD
	■ 2400 BAUD
	■ 4800 BAUD
	■ 9600 BAUD
	■ 19200 BAUD
	■ 38400 BAUD
	■ 57600 BAUD
	■ 115200 BAUD
Data transfer mode	■ ASCII
	■ RTU
Data access	Each device parameter can be accessed via Modbus RS485.
	For Modbus register information
Compatibility with earlier model	If the device is replaced, the measuring device Promag 500 supports the compatibility of the Modbus registers for the process variables and the diagnostic information with the previous model Promag 53. It is not necessary to change the engineering parameters in the automation system.
	Description of the function scope of compatibility: Operating Instructions $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
System integration	Information on system integration: Operating Instructions $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
	■ Modbus RS485 information
	■ Function codes
	Register information
	■ Response time
	Modbus data map

## Power supply

#### Terminal assignment

Transmitter: supply voltage, input/outputs

#### HART

Supply	Supply voltage Input/output 1		Input/output 2		Input/output 3		Input/output 4		
1 (+)	2 (-)	26 (+)	27 (-)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $							

#### FOUNDATION Fieldbus

Supply voltage		Input/	output I	Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (A)	27 (B)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\Rightarrow  binom{1}{2}$ 13.							

#### PROFIBUS PA

Supply	ipply voltage Input/output 1		Input/output 2		Input/output 3		Input/output 4		
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\Rightarrow  binom{1}{2}$ 13.							

#### PROFIBUS DP

Supply	voltage	ltage Input/output 1		Input/output 2		Input/output 3		Input/output 4	
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)
		The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $							

#### Modbus RS485

Supply	voltage	Input/output 1		Input/	output 2	Input/	output 3	Input/output 4		
1 (+)	2 (-)	26 (B)	27 (A)	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)	
		The t	The terminal assignment depends on the specific device version ordered $\Rightarrow  binom{1}{2}$ 13.							

#### PROFINET

Supply	voltage	Input/output 1	Input/output 2		Input/output 3		Input/output 4		
1 (+)	2 (-)	PROFINET	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)	
		(RJ45 connector)	The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $						

#### EtherNet/IP

Supply	voltage	Input/output 1	Input/output 2		Input/output 3		Input/output 4		
1 (+)	2 (-)	EtherNet/IP	24 (+)	25 (-)	22 (+)	23 (-)	20 (+)	21 (-)	
		(RJ45 connector)	The terminal assignment depends on the specific device version ordered $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $						

#### Transmitter and sensor connection housing: connecting cable

The sensor and transmitter, which are mounted in separate locations, are interconnected by a connecting cable. The cable is connected via the sensor connection housing and the transmitter housing.

Terminal assignment and connection of the connecting cable:

- Proline 500 digital → 🖺 31
- Proline 500 → 🖺 31

#### Device plugs available



Device plugs may not be used in hazardous areas!

#### Device plugs for fieldbus systems:

Order code for "Input; output 1"

- Option **SA** "FOUNDATION Fieldbus" → 🖺 27
- Option **GA** "PROFIBUS PA" → 🖺 28
- Option **RA** "PROFINET" → 🗎 28
- Option **NA** "EtherNet/IP"  $\rightarrow$   $\stackrel{\circ}{\blacksquare}$  28

#### Device plug for connecting to the service interface:

Order code for "Accessory mounted"

option NB, adapter RJ45 M12 (service interface)  $\rightarrow$   $\stackrel{ riangle}{ riangle}$  29

#### Order code for "Input; output 1", option SA "FOUNDATION Fieldbus"

Order code for	Cable entry/connection → 🖺 31			
"Electrical connection"	2	3		
M, 3, 4, 5	7/8" connector	-		

#### Order code for "Input; output 1", option GA "PROFIBUS PA"

Order code for	Cable entry/connection → 🗎 31				
"Electrical connection"	2	3			
L, N, P, U	Connector M12 × 1	-			

#### Order code for "Input; output 1", option RA "PROFINET"

Order code for	Cable entry/connection → 🗎 31			
"Electrical connection"	2	3		
L, N, P, U	Connector M12 × 1	-		
R <sup>1)2)</sup> , S <sup>1)2)</sup> , T <sup>1)2)</sup> , V <sup>1)2)</sup>	Connector M12 × 1	Connector M12 × 1		

- Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001.
- 2) Suitable for integrating the device in a ring topology.

#### Order code for "Input; output 1", option NA "EtherNet/IP"

Order code for	Cable entry/connection → 🖺 31		
"Electrical connection"	2	3	
L, N, P, U	Connector M12 × 1	-	
R <sup>1)2)</sup> , S <sup>1)2)</sup> , T <sup>1)2)</sup> , V <sup>1)2)</sup>	Connector M12 × 1	Connector M12 × 1	


- Cannot be combined with an external WLAN antenna (order code for "Enclosed accessories", option P8) of an RJ45 M12 adapter for the service interface (order code for "Accessories mounted", option NB) or of the remote display and operating module DKX001
- 2) Suitable for integrating the device in a ring topology.

#### Order code for "Accessory mounted", option NB "Adapter RJ45 M12 (service interface)"

Order code	Cable entry/coupling → 🖺 31	
"Accessory mounted"	Cable entry 2	Cable entry 3
NB	Plug M12 × 1	-

#### Pin assignment, device plug

#### FOUNDATION Fieldbus

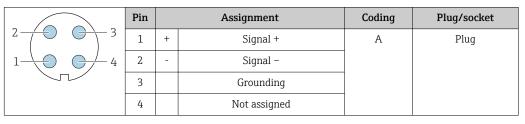


#### PROFIBUS PA

		Pin		Assignment	Coding	Plug/socket
2 /	3	1	+	PROFIBUS PA +	A	Plug
1	4	2		Grounding		

3	-	PROFIBUS PA -	
4		Not assigned	

#### PROFINET

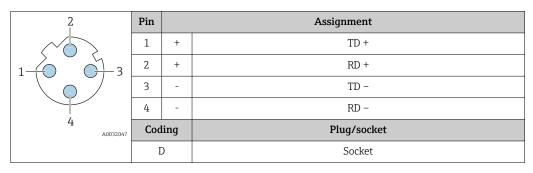

#### Recommended plug:

- Binder, series 763, part no. 99 3729 810 04
- Phoenix, part no. 1543223 SACC-M12MSD-4Q
- When using the device in a hazardous location, use a suitably certified plug.

#### EtherNet/IP

2	Pin		Assignment
	1	+	Tx
	2	+	Rx
	3	-	Tx
	4	-	Rx
4 A0032047	Coding		Plug/socket
	Ι	)	Socket

## Recommended plug:

- Binder, series 763, part no. 99 3729 810 04
- Phoenix, part no. 1543223 SACC-M12MSD-4Q
- When using the device in a hazardous location, use a suitably certified plug.

#### Service interface

Order code for "Accessories mounted", option NB: Adapter RJ45 M12 (service interface)

2	Pin		Assignment
	1	+	Tx
	2	+	Rx
	3	-	Tx
4	4	1	Rx
	Cod	ling	Plug/socket
	I	)	Socket

## Recommended plug:

- Binder, series 763, part no. 99 3729 810 04
- Phoenix, part no. 1543223 SACC-M12MSD-4Q
- When using the device in a hazardous location, use a suitably certified plug.

#### Supply voltage

Order code for "Power supply"	terminal voltage		Frequency range
Option <b>D</b>	DC24 V	±20%	-
Option <b>E</b>	AC100 to 240 V	-15+10%	50/60 Hz, ±4 Hz

Order code for "Power supply"	terminal voltage		Frequency range
Option I	DC24 V	±20%	_
	AC100 to 240 V	-15+10%	50/60 Hz, ±4 Hz

#### Power consumption

#### Transmitter

Max. 10 W (active power)

#### **Current consumption**

#### Transmitter


- Max. 400 mA (24 V)
- Max. 200 mA (110 V, 50/60 Hz; 230 V, 50/60 Hz)

#### Power supply failure

Depending on the device version, the configuration is retained in the device memoryor in the pluggable data memory (HistoROM DAT).  $\frac{1}{2} \left( \frac{1}{2} \right) = \frac{1}{2} \left( \frac{1}{2} \right) \left( \frac$ 

#### **Electrical connection**


#### Connection of connecting cable: Proline 500 - digital

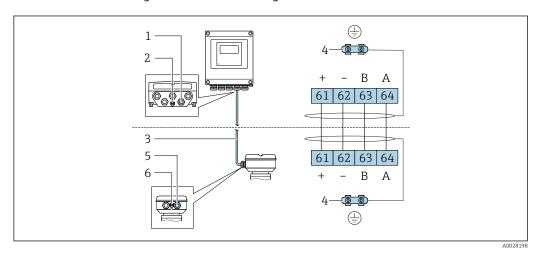

- Cable entry for cable on transmitter housing
- 2 Protective ground (PE)
- 3 Connecting cable ISEM communication
- 4 Grounding via ground connection; on device plug versions grounding is through the plug itself
- Cable entry for cable or connection of device plug on sensor connection housing
- Protective ground (PE)

#### Connection of the connecting cable: Proline 500

The connecting cable is connected via terminals.

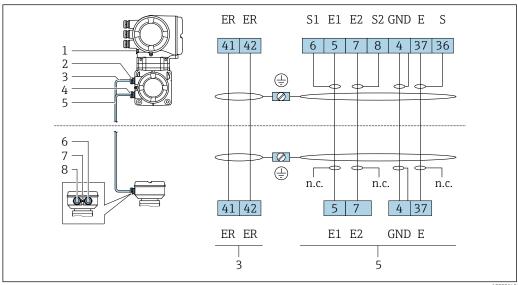


- Protective ground (PE)
- 2 Cable entry for coil current cable on transmitter connection housing
- 3 Coil current cable
- Cable entry for signal cable on transmitter connection housing
- 5 Signal cable
- 6 Cable entry for signal cable on sensor connection housing
- Cable entry for coil current cable on sensor connection housing
- Protective ground (PE)

#### Connecting the transmitter



- Terminal assignment → 🗎 26
- Device plug pin assignment  $\rightarrow$  🖺 28

#### Connecting the Proline 500 - digital transmitter

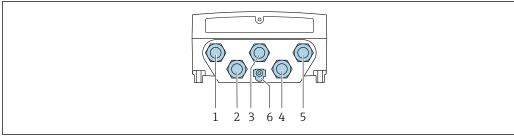


Δ0028200

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output
- 4 Terminal connection for connecting cable between sensor and transmitter
- 5 Terminal connection for signal transmission, input/output or terminal for network connection (DHCP client) via service interface (CDI-RJ45); optional: terminal connection for external WLAN antenna
- 6 Protective ground (PE)
- An adapter for RJ45 and the M12 plug is optionally available:
  Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 connector without opening the device.

#### Connecting the Proline 500 transmitter

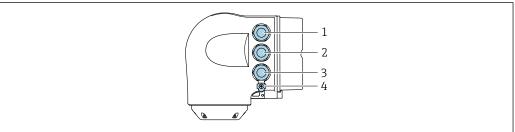

A0026781

- 1 Terminal connection for supply voltage
- 2 Terminal connection for signal transmission, input/output
- 3 Terminal connection for signal transmission, input/output or terminal for network connection (DHCP client) via service interface (CDI-RJ45); optional: terminal connection for external WLAN antenna
- 4 Protective ground (PE)
- An adapter for RJ45 and the M12 plug is optionally available:
  Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 connector without opening the device.


#### Connecting in a ring topology

Device versions with EtherNet/IP and PROFINET communication protocols can be integrated into a ring topology. The device is integrated via the terminal connection for signal transmission (output 1) and the connection to the service interface (CDI-RJ45).

Integrating the transmitter into a ring topology:


- EtherNet/IP → 🖺 89

#### Transmitter: Proline 500 - digital

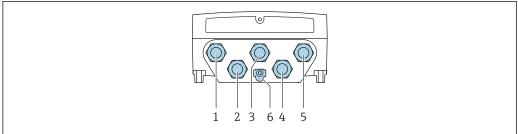

- Terminal connection for supply voltage
- Terminal connection for signal transmission, input/output 2
- *Terminal connection for signal transmission: PROFINET or EtherNet/IP (RJ45 connector)*
- Terminal connection for connecting cable between sensor and transmitter
- 5 Terminal connection to service interface (CDI-RJ45)
- Protective ground (PE)

#### Transmitter: Proline 500

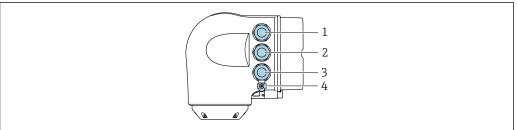


- Terminal connection for supply voltage
- Terminal connection for signal transmission: PROFINET or EtherNet/IP (RJ45 connector) 2
- 3 Terminal connection to service interface (CDI-RJ45)
- Protective ground (PE)

If the device has additional inputs/outputs, these are routed in parallel via the cable entry for connection to the service interface (CDI-RJ45).


#### Connection examples

#### Current output 4 to 20 mA HART

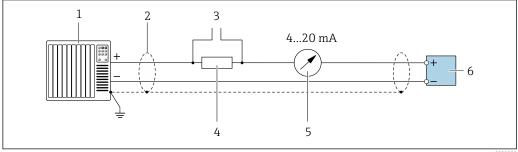

A0029055

- **₽** 2 Connection example for 4 to 20 mA HART current output (active)
- Automation system with current input (e.g. PLC)
- 2 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications → 🖺 43
- 3
- 4
- Transmitter

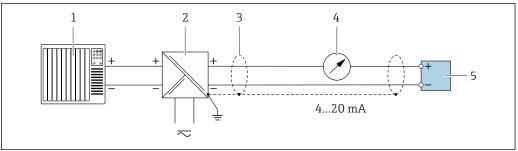


A002876

- 3 Connection example for 4 to 20 mA HART current output (passive)
- 1 Automation system with current input (e.g. PLC)
- 2 Power supply

- 5 Transmitter


#### HART input

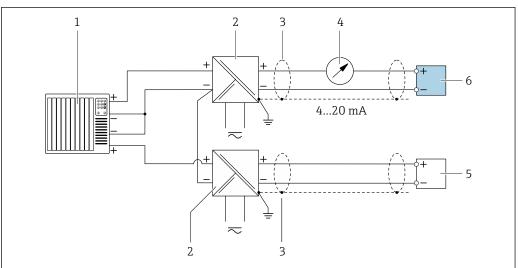

A002876

- 4 Connection example for HART input with a common negative (passive)
- 1 Automation system with HART output (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 Analog display unit: observe maximum load
- 5 Pressure transmitter (e.g. Cerabar M, Cerabar S): see requirements
- 6 Transmitter


#### PROFIBUS PA

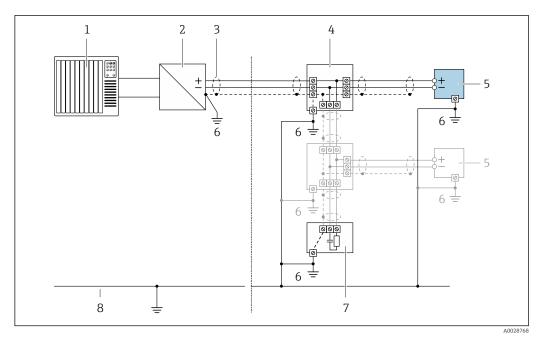

■ 5 Connection example for PROFIBUS PA


- 1 Control system (e.g. PLC)
- 2 PROFIBUS PA segment coupler
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

#### PROFIBUS DP

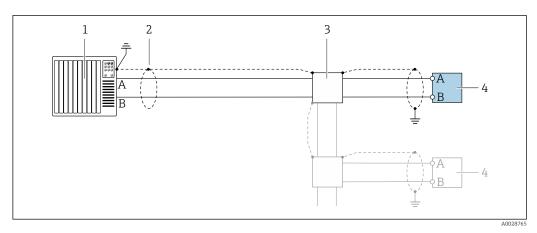

- $\blacksquare$  6 Connection example for PROFIBUS DP, non-hazardous area and Zone 2/Div. 2
- 1 Control system (e.g. PLC)
- 2 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter
- If baud rates > 1.5 MBaud an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.


#### EtherNet/IP

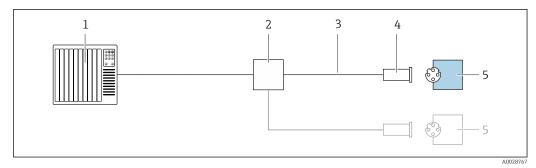

**₽** 7 Connection example for EtherNet/IP


- Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- Device plug 4
- Transmitter

#### EtherNet/IP: DLR (Device Level Ring)

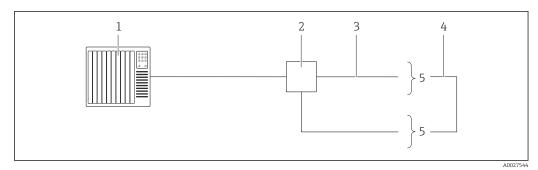


- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- 3
- Connecting cable between the two transmitters
- Transmitter

#### PROFINET

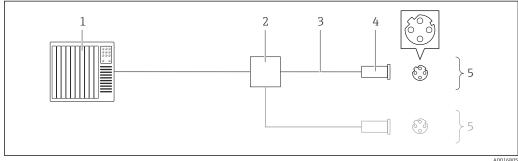


- ₽8  ${\it Connection\ example\ for\ PROFINET}$
- Control system (e.g. PLC)
- 2 Ethernet switch
- 3 Observe cable specifications
- 4 Device plug
- Transmitter

### PROFINET: MRP (Media Redundancy Protocol)

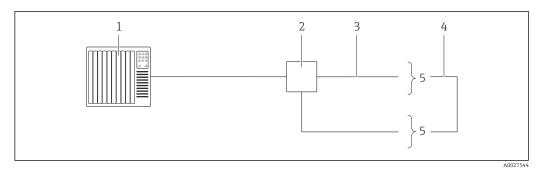

- 1 Control system (e.g. PLC)
- 2 Ethernet switch
- *3 Observe cable specifications*  $\rightarrow$   $\stackrel{\triangle}{=}$  43
- 4 Connecting cable between the two transmitters
- 5 Transmitter


## FOUNDATION Fieldbus

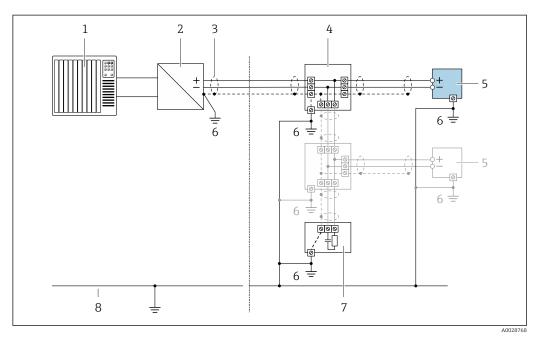

 $\blacksquare$  9 Connection example for FOUNDATION Fieldbus


- 1 Control system (e.g. PLC)
- 2 Power Conditioner (FOUNDATION Fieldbus)
- 3 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 4 T-box
- 5 Measuring device
- 6 Local grounding
- 7 Bus terminator
- 8 Potential matching line

### Modbus RS485

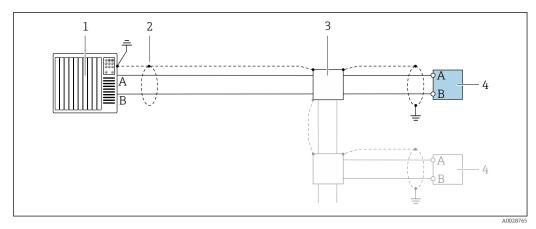


- $\blacksquare$  10 Connection example for Modbus RS485, non-hazardous area and Zone 2/Div. 2
- 1 Control system (e.g. PLC)
- 2 Cable shield: the cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 Distribution box
- 4 Transmitter

### Current output 4-20 mA

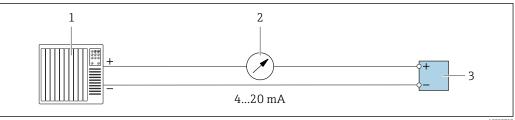

A00287


- 11 Connection example for 4-20 mA current output (active)
- 1 Automation system with current input (e.g. PLC)
- 2 Analog display unit: observe maximum load
- 3 Transmitter

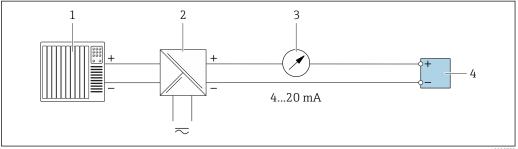

A0028759


- 12 Connection example for 4-20 mA current output (passive)
- 1 Automation system with current input (e.g. PLC)
- 2 Active barrier for power supply (e.g. RN221N)
- 3 Analog display unit: observe maximum load
- 4 Transmitter

## Pulse/frequency output

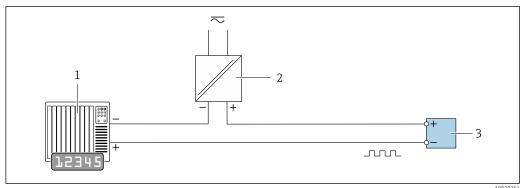

- 13 Connection example for pulse/frequency output (passive)
- 1 Automation system with pulse/frequency input (e.g. PLC)
- 2 Power supply
- 3 Transmitter: Observe input values  $\rightarrow \blacksquare 15$


## Switch output

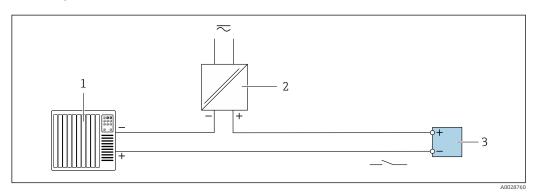

■ 14 Connection example for switch output (passive)

- 1 Automation system with switch input (e.g. PLC)
- 2 Power supply

## Double pulse output

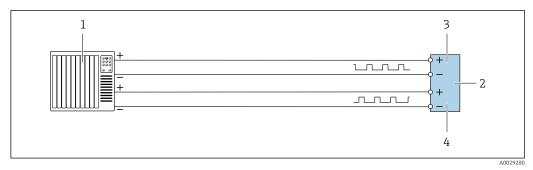


■ 15 Connection example for double pulse output (active)

- 1 Automation system with double pulse input (e.g. PLC)
- 2 Transmitter: Observe input values → 🖺 16
- 3 Double pulse output
- 4 Double pulse output (slave), phase-shifted

Endress+Hauser 39


A002070

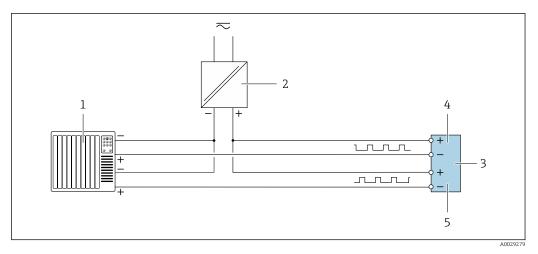

■ 16 Connection example for double pulse output (passive)

- 1 Automation system with double pulse input (e.g. PLC)
- 2 Power supply
- 4 Double pulse output
- 5 Double pulse output (slave), phase-shifted


## Relay output

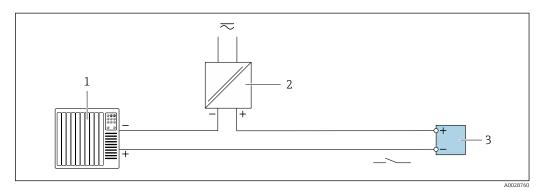

■ 17 Connection example for relay output (passive)

- 1 Automation system with relay input (e.g. PLC)
- 2 Power supply

## Current input

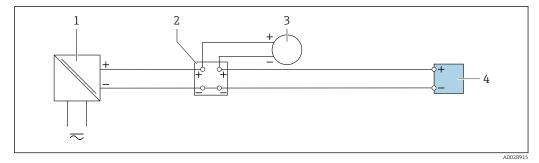


 $\blacksquare$  18 Connection example for 4 to 20 mA current input

- 1 Power supply
- 2 Terminal box
- 3 External measuring device (for reading in pressure or temperature, for instance)

4 Transmitter

### Status input

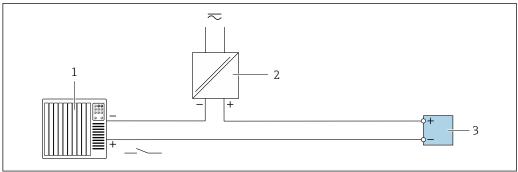

A002876

- 19 Connection example for status input
- 1 Automation system with status output (e.g. PLC)
- 2 Power supply
- 3 Transmitter

### Potential equalization


### Requirements

Please consider the following to ensure correct measurement:

- Same electrical potential for the fluid and sensor
- Company-internal grounding concepts
- Pipe material and grounding

### Connection example, standard scenario

Metal, grounded pipe

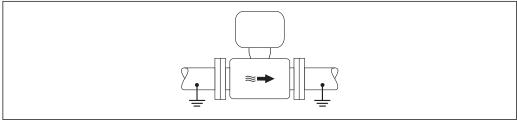

A0016315

■ 20 Potential equalization via measuring tube


## Connection example in special situations

Unlined and ungrounded metal pipe

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

**Ground cable** Copper wire, at least 6 mm<sup>2</sup> (0.0093 in<sup>2</sup>)

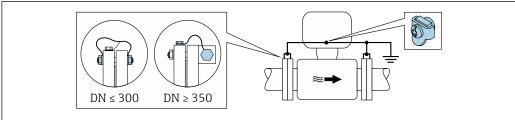

A0029338

■ 21 Potential equalization via ground terminal and pipe flanges

Note the following when installing:


- Connect both sensor flanges to the pipe flange via a ground cable and ground them.
- Connect the connection housing of the transmitter or sensor to ground potential by means of the ground terminal provided for the purpose. To mount the ground cable:
  - If DN  $\leq$  300 (12"): Mount the ground cable directly on the conductive flange coating of the sensor with the flange screws.
  - If DN  $\geq$  350 (14"): Mount the ground cable directly on the metal transport bracket.

Plastic pipe or pipe with insulating liner

This connection method also applies in situations where:

- The customary potential equalization is not used
- Equalizing currents are present

**Ground cable** Copper wire, at least 6 mm<sup>2</sup> (0.0093 in<sup>2</sup>)

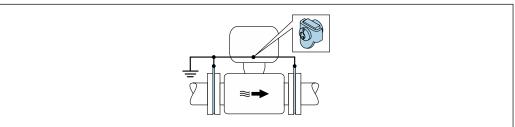

A002933

■ 22 Potential equalization via ground terminal and ground disks

Note the following when installing:

The ground disks must be connected to the ground terminal via the ground cable and be connected to ground potential.


The ground cable and ground disks can be ordered from Endress+Hauser .

Pipe with a cathodic protection unit

This connection method is only used if the following two conditions are met:

- Metal pipe without liner or pipe with electrically conductive liner
- Cathodic protection is integrated in the personal protection equipment

Ground cable Copper wire, at least 6 mm² (0.0093 in²)

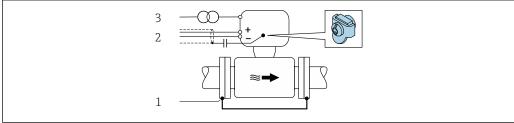

A00303

- 1 Connection of the two flanges of the pipe via a ground cable
- 2 Signal line shielding via a capacitor
- 3 Measuring device connected to power supply such that it is floating in relation to the protective ground (isolation transformer)

Note the following when installing:

The sensor is installed in the pipe in a way that provides electrical insulation.

terminals	Spring-loaded terminals: Suitable for strands and strands with ferrules. Conductor cross-section 0.2 to 2.5 $mm^2$ (24 to 12 AWG).
Cable entries	■ Cable gland: M20 × 1.5 with cable Ø 6 to 12 mm (0.24 to 0.47 in)
	Thread for cable entry:
	- NPT ½"
	- G ½"
	- M20
	<ul> <li>Device plug for digital communication: M12</li> </ul>
	Only available for certain device versions $\rightarrow \stackrel{\square}{=} 27$

#### Cable specification

#### Permitted temperature range

- The installation quidelines that apply in the country of installation must be observed.
- The cables must be suitable for the minimum and maximum temperatures to be expected.

#### Power supply cable

Standard installation cable is sufficient.

#### Protective ground cable

Cable  $\geq 2.08 \text{ mm}^2 \text{ (14 AWG)}$ 

The grounding impedance must be less than 1  $\Omega$ .

#### Signal cable

Current output 4 to 20 mA HART

A shielded cable is recommended. Observe grounding concept of the plant.

#### PROFIBUS PA

Twisted, shielded two-wire cable. Cable type A is recommended.



For further information on planning and installing PROFIBUS networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

## PROFIBUS DP

The IEC 61158 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A
Characteristic impedance	135 to 165 $\Omega$ at a measuring frequency of 3 to 20 MHz
Cable capacitance	< 30 pF/m
Wire cross-section	> 0.34 mm <sup>2</sup> (22 AWG)
Cable type	Twisted pairs
Loop resistance	≤110 Ω/km
Signal damping	Max. 9 dB over the entire length of the cable cross-section
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.



For further information on planning and installing PROFIBUS networks see:

- Operating Instructions "PROFIBUS DP/PA: Guidelines for planning and commissioning" (BA00034S)
- PNO Directive 2.092 "PROFIBUS PA User and Installation Guideline"
- IEC 61158-2 (MBP)

#### EtherNet/IP

The standard ANSI/TIA/EIA-568-B.2 Annex specifies CAT 5 as the minimum category for a cable used for EtherNet/IP. CAT 5e and CAT 6 are recommended.



For more information on planning and installing EtherNet/IP networks, please refer to the "Media Planning and Installation Manual. EtherNet/IP" of ODVA Organization

#### **PROFINET**

Standard IEC 61156-6 specifies CAT 5 as the minimum category for a cable used for PROFINET. CAT 5e and CAT 6 are recommended.



For more information on planning and installing PROFINET networks, see: "PROFINET Cabling and Interconnection Technology", Guideline for PROFINET

#### FOUNDATION Fieldbus

Twisted, shielded two-wire cable.



For further information on planning and installing FOUNDATION Fieldbus networks see:

- Operating Instructions for "FOUNDATION Fieldbus Overview" (BA00013S)
- FOUNDATION Fieldbus Guideline
- IEC 61158-2 (MBP)

#### Modbus RS485

The EIA/TIA-485 standard specifies two types of cable (A and B) for the bus line which can be used for every transmission rate. Cable type A is recommended.

Cable type	A
Characteristic impedance	135 to 165 $\Omega$ at a measuring frequency of 3 to 20 MHz
Cable capacitance	< 30 pF/m
Wire cross-section	> 0.34 mm <sup>2</sup> (22 AWG)
Cable type	Twisted pairs
Loop resistance	≤110 Ω/km
Signal damping	Max. 9 dB over the entire length of the cable cross-section
Shield	Copper braided shielding or braided shielding with foil shield. When grounding the cable shield, observe the grounding concept of the plant.

Current output 0/4 to 20 mA

Standard installation cable is sufficient.

Pulse/frequency/switch output

Standard installation cable is sufficient.

Double pulse output

Standard installation cable is sufficient.

Relay output

Standard installation cable is sufficient.

Current input 0/4 to 20 mA


Standard installation cable is sufficient.

Status input

Standard installation cable is sufficient.

## Choice of connecting cable between the transmitter and sensor

Depends on the type of transmitter and the installation zones

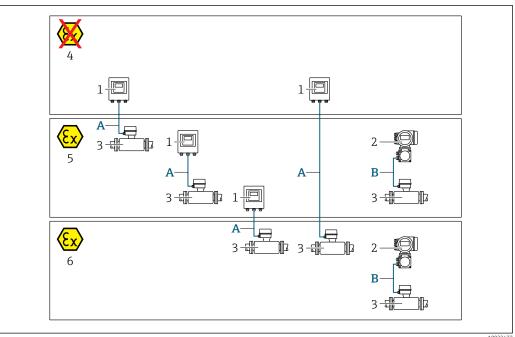

- Proline 500 digital transmitter
- Proline 500 transmitter
- 3 Promag sensor
- Non-hazardous area
- Hazardous area: Zone 2; Class I, Division 2
- 6 Hazardous area: Zone 1; Class I, Division 1
- Transmitter installed in the non-hazardous area or hazardous area: Zone 2; Class I, Division 2 / sensor installed in the hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1
- Transmitter and sensor installed in the hazardous area: Zone 2; Class I, Division 2 oder Zone 1; Class I, Division 1

A: Connecting cable between sensor and transmitter: Proline 500 - digital

### Standard cable

A standard cable with the following specifications can be used as the connecting cable.

Design	4 cores (2 pairs); uninsulated stranded CU wires; pair-stranded with common shield
Shielding	Tin-plated copper-braid, optical cover $\geq$ 85 %
Cable length	Maximum 300 m (1000 ft), see the following table.

	Cable lengths for use in	
Cross-section	Non-hazardous area, Hazardous area: Zone 2; Class I, Division 2	Hazardous area: Zone 1; Class I, Division 1
0.34 mm <sup>2</sup> (AWG 22)	80 m (270 ft)	50 m (165 ft)
0.50 mm <sup>2</sup> (AWG 20)	120 m (400 ft)	60 m (200 ft)
0.75 mm <sup>2</sup> (AWG 18)	180 m (600 ft)	90 m (300 ft)
1.00 mm <sup>2</sup> (AWG 17)	240 m (800 ft)	120 m (400 ft)
1.50 mm <sup>2</sup> (AWG 15)	300 m (1000 ft)	180 m (600 ft)
2.50 mm <sup>2</sup> (AWG 13)	300 m (1000 ft)	300 m (1000 ft)

## Optionally available connecting cable

Design	$2 \times 2 \times 0.34~\text{mm}^2$ (AWG 22) PVC cable $^{1)}$ with common shield (2 pairs, uninsulated stranded CU wires; pair-stranded)
Flame resistance	According to DIN EN 60332-1-2
Oil-resistance	According to DIN EN 60811-2-1
Shielding	Tin-plated copper-braid, optical cover ≥ 85 %
Operating temperature	When mounted in a fixed position: $-50$ to $+105$ °C ( $-58$ to $+221$ °F); when cable can move freely: $-25$ to $+105$ °C ( $-13$ to $+221$ °F)
Available cable length	Fixed: 20 m (65 ft); variable: up to maximum 50 m (165 ft)

 $\ \, \text{UV radiation can impair the cable outer sheath. Protect the cable from direct sunshine where possible.}$ 


## B: Connecting cable between sensor and transmitter: Proline 500

## Signal cable

Design	$3\times0.38~mm^2$ (20 AWG) with common, braided copper shield (Ø $\sim$ 9.5 mm (0.37 in)) and individual shielded cores
Conductor resistance	≤50 Ω/km (0.015 Ω/ft)
Capacitance: core/shield	≤420 pF/m (128 pF/ft)
Cable length (max.)	Depends on the medium conductivity, max. 200 m (656 ft)
Cable lengths (available for order)	5 m (15 ft), 10 m (32 ft), 20 m (65 ft) or variable length up to max. 200 m (656 ft)
Operating temperature	-20 to +80 °C (-68 to +176 °F)


## Coil current cable

Design	$3\times0.75~mm^2$ (18 AWG) with common, braided copper shield (0 $\sim$ 9 mm (0.35 in)) and individual shielded cores
Conductor resistance	≤37 Ω/km (0.011 Ω/ft)
Capacitance: core/core, shield grounded	≤120 pF/m (37 pF/ft)
Cable length (max.)	Depends on the medium conductivity, max. 200 m (656 ft)
Cable lengths (available for order)	5 m (15 ft), 10 m (32 ft), 20 m (65 ft) or variable length up to max. 200 m (656 ft)
Operating temperature	−20 to +80 °C (−68 to +176 °F)
Test voltage for cable insulation	≤ AC 1433 V rms 50/60 Hz or ≥ DC 2026 V

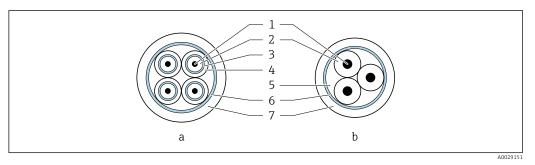

■ 23 Cable cross-section

- a Electrode cable
- b Coil current cable
- 1 Core
- 2 Core insulation
- 3 Core shield
- 4 Core jacket
- 5 Core reinforcement
- 6 Cable shield
- 7 Outer jacket

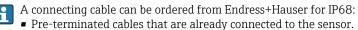

 Pre-terminated cables, where the cables are connected by the customer onsite (incl. tools for sealing the connection compartment)

Reinforced connecting cables

Reinforced connecting cables with an additional, reinforcing metal braid should be used for:

- When laying the cable directly in the ground
- Where there is a risk of damage from rodents
- Reinforced connecting cables with an additional, reinforcing metal braid can be ordered from Endress+Hauser .

Operation in zones of severe electrical interference

Grounding is by means of the ground terminal provided for the purpose inside the connection housing. The stripped and twisted lengths of cable shield to the ground terminal must be as short as possible.

## Performance characteristics

# Reference operating conditions

- Error limits following DIN EN 29104, in future ISO 20456
- Water, typically: +15 to +45 °C (+59 to +113 °F); 0.5 to 7 bar (73 to 101 psi)
- Data as indicated in the calibration protocol
- Accuracy based on accredited calibration rigs according to ISO 17025

## Maximum measured error


## Error limits under reference operating conditions

o.r. = of reading

#### Volume flow

- ±0.5 % o.r. ± 1 mm/s (0.04 in/s)
- Optional: ±0.2 % o.r. ± 2 mm/s (0.08 in/s)

Fluctuations in the supply voltage do not have any effect within the specified range.

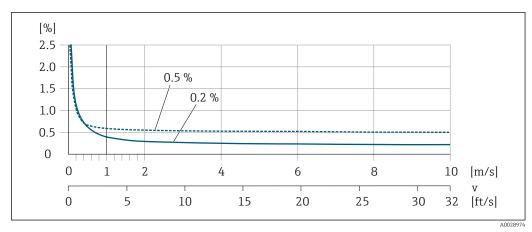

■ 24 Maximum measured error in % o.r.

## **Electrical conductivity**

Max. measured error not specified.

## Accuracy of outputs

The outputs have the following base accuracy specifications.

Current output

Accuracy	±5 μA
----------	-------

## Pulse/frequency output

o.r. = of reading

## Repeatability

o.r. = of reading

### Volume flow

Max.  $\pm 0.1$  % o.r.  $\pm 0.5$  mm/s (0.02 in/s)

### **Electrical conductivity**

Max. ±5 % o.r.

# Influence of ambient temperature

## **Current output**

Temperature coefficient	Max. 1 μA/°C
_	•


## Pulse/frequency output

Temperature coefficient	No additional effect. Included in accuracy.
-------------------------	---

## Installation

No special measures such as supports etc. are necessary. External forces are absorbed by the construction of the device.


## Mounting location

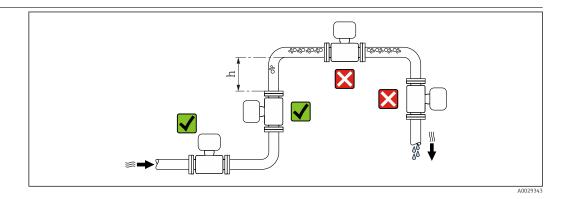

Preferably install the sensor in an ascending pipe, and ensure a sufficient distance to the next pipe elbow: h  $\geq 2 \times DN$ 

### Installation in down pipes

Install a siphon with a vent valve downstream of the sensor in down pipes whose length  $h \ge 5$  m (16.4 ft). This precaution is to avoid low pressure and the consequent risk of damage to the measuring tube. This measure also prevents the system losing prime.

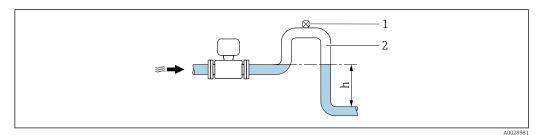


■ 25 Installation in a down pipe


- 1 Vent valve
- 2 Pipe siphon
- h Length of down pipe

## Installation in partially filled pipes

A partially filled pipe with a gradient necessitates a drain-type configuration.

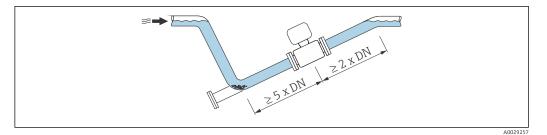

For heavy sensors DN ≥ 350 (14")

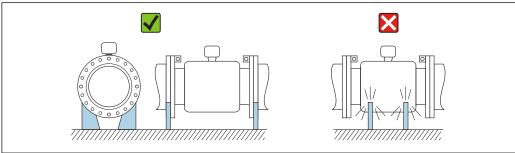

A0016276

#### Orientation


The direction of the arrow on the sensor nameplate helps you to install the sensor according to the flow direction (direction of medium flow through the piping).

	Orientatio	n	Recommendation
A	Vertical orientation	A0015591	
В	Horizontal orientation, transmitter at top		<b>√ √</b> 1)
С	Horizontal orientation, transmitter at bottom	A0015590	<b>⊘ ⊘</b> <sup>2)</sup> 3)
D	Horizontal orientation, transmitter at side	A0015592	×

- Applications with low process temperatures may decrease the ambient temperature. To maintain the minimum ambient temperature for the transmitter, this orientation is recommended.
- Applications with high process temperatures may increase the ambient temperature. To maintain the maximum ambient temperature for the transmitter, this orientation is recommended.
- 3) To prevent the electronics module from overheating in the case of a sharp rise in temperature (e.g. CIP or SIP processes), install the device with the transmitter component pointing downwards.

#### Horizontal

- Ideally, the measuring electrode plane should be horizontal. This prevents brief insulation of the two measuring electrodes by entrained air bubbles.
- Empty pipe detection only works if the transmitter housing is pointing upwards as otherwise there
  is no guarantee that the empty pipe detection function will actually respond to a partially filled or
  empty measuring tube.

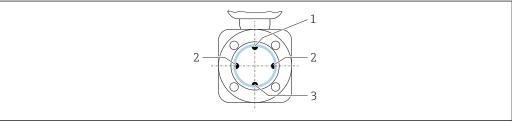


A0029344

- 1 EPD electrode for empty pipe detection
- 2 Measuring electrodes for signal detection
- $3\qquad \textit{Reference electrode for potential equalization}$

Measuring devices with tantalum or platinum electrodes can be ordered without an EPD electrode. In this case, empty pipe detection is performed via the measuring electrodes.

#### Inlet and outlet runs

If possible, install the sensor upstream from fittings such as valves, T-pieces or elbows. Observe the following inlet and outlet runs to comply with accuracy specifications:

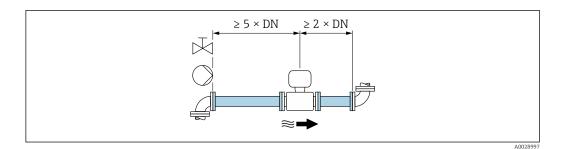


Adapters

Suitable adapters to DIN EN 545 (double-flange reducers) can be used to install the sensor in larger-diameter pipes. The resultant increase in the rate of flow improves measuring accuracy with very slow-moving fluids.

The nomogram shown here can be used to calculate the pressure loss caused by reducers and expanders:

- Calculate the ratio of the diameters d/D.
- From the nomogram read off the pressure loss as a function of flow velocity (downstream from the reduction) and the d/D ratio.
- The nomogram only applies to liquids with a viscosity similar to that of water.

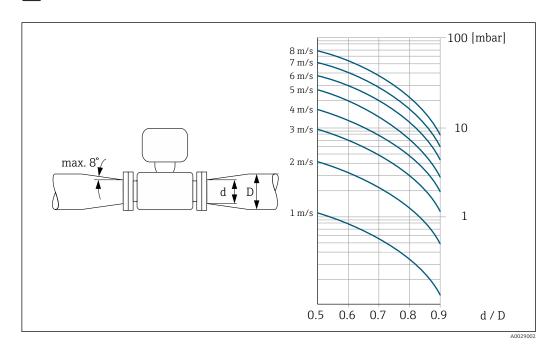

Length of connecting cable

### Proline 500 - digital transmitter

Lengths of connecting cable


## Proline 500 transmitter

Max. 200 m (650 ft)

To ensure correct measuring results,

observe the maximum permitted length of the connecting cable  $L_{\text{max}}.$  This length is determined by the conductivity of the fluid.

If measuring liquids in general:  $5 \mu S/cm$ 

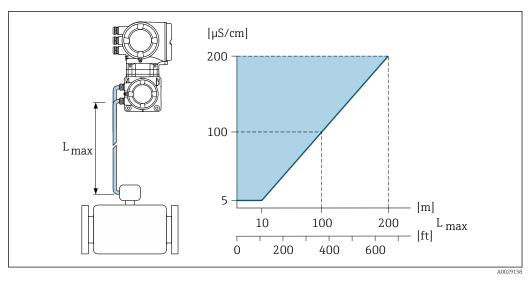


 $\blacksquare$  26 Permitted length of connecting cable

Colored area = permitted range  $L_{max}$ = length of connecting cable in [m] ([ft]) [ $\mu$ S/cm] = fluid conductivity

# Mounting the transmitter housing


## Proline 500 - digital transmitter

### Post mounting

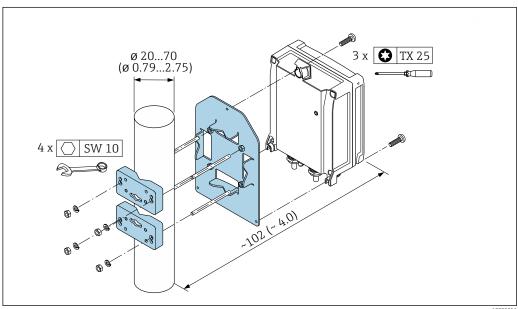

■ 27 Engineering unit mm (in)

## Wall mounting

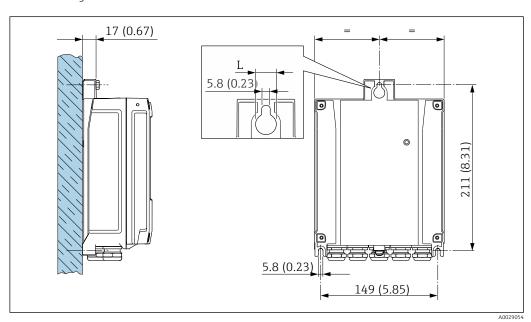

**■** 28 Engineering unit mm (in)

L Depends on order code for "Transmitter housing"

Order code for "Transmitter housing"

- Option **A**, aluminum coated: L = 14 mm (0.55 in)
- Option **D**, polycarbonate: L = 13 mm (0.51 in)

Endress+Hauser 53

A002905

### Proline 500 transmitter


Post mounting

## **A** WARNING

# Order code for "Transmitter housing", option L "Cast, stainless": cast transmitters are very heavy.


They are unstable if they are not mounted on a secure, fixed post.

▶ Only mount the transmitter on a secure, fixed post on a stable surface.

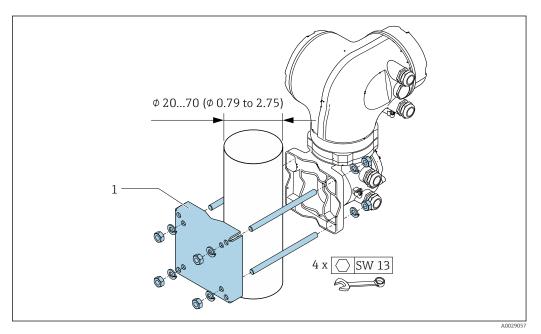

■ 29 Engineering unit mm (in)

## Wall mounting

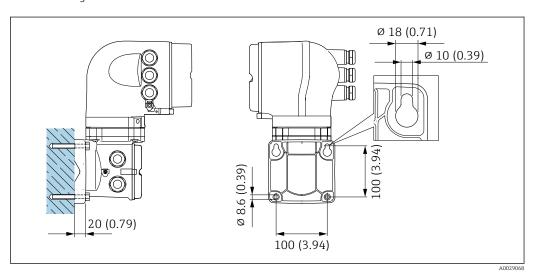

**■** 30 Engineering unit mm (in)

Mechanical load

## **Environment**

Ambient temperature range	Transmitter	<ul> <li>Standard: -40 to +60 °C (-40 to +140 °F)</li> <li>Optional: -50 to +60 °C (-58 to +140 °F) (order code for "Test, certificate", option JN "Ambient temperature of transmitter -50 °C (-58 °F)")</li> </ul>					
	Local display	-20 to $+60$ °C ( $-4$ to $+140$ °F), the readability of the display may be impaired at temperatures outside the temperature range.					
	Sensor	<ul> <li>Process connection material, carbon steel:         <ul> <li>10 to +60 °C (+14 to +140 °F)</li> </ul> </li> <li>Process connection material, stainless steel:         <ul> <li>40 to +60 °C (-40 to +140 °F)</li> </ul> </li> </ul>					
		Mount the transmitter separately from the sensor if both the ambient and fluid temperatures are high.					
	Liner	Do not exceed or fall below the permitted temperature range of the liner $\boldsymbol{.}$					
Storage temperature	If operating outdoors:  Install the measuring device in a shady location.  Avoid direct sunlight, particularly in warm climatic regions.  Avoid direct exposure to weather conditions.  The storage temperature corresponds to the operating temperature range of the transmitter and the						
	<ul> <li>sensor → ■ 55.</li> <li>Protect the measuring device against direct sunlight during storage in order to avoid unacceptably high surface temperatures.</li> <li>Select a storage location where moisture cannot collect in the measuring device as fungus or bacteria infestation can damage the liner.</li> <li>If protection caps or protective covers are mounted these should never be removed before installing the measuring device.</li> </ul>						
Degree of protection	Transmitter As standard: IP66/67, type When housing is open: IP2 Display module: IP20, type Sensor As standard: IP66/67, type External WLAN antenna IP67	20, type 1 enclosure e 1 enclosure					
Vibration resistance	<ul> <li>Vibration, sinusoidal accor</li> <li>2 to 8.4 Hz, 7.5 mm pea</li> <li>8.4 to 2 000 Hz, 2 g pea</li> <li>Vibration broad-band rand</li> <li>10 to 200 Hz, 0.01 g²/H</li> <li>200 to 2 000 Hz, 0.003</li> <li>Total: 2.70 g rms</li> </ul>	ık k dom, according to IEC 60068-2-64 Iz					
Shock resistance	Shock, half-sine according to 6 ms 50 g	) IEC 60068-2-27					
Shock resistance	Shock due to rough handling	J following IEC 60068-2-31					

Endress+Hauser 55

Protect the transmitter housing against mechanical effects, such as shock or impact.
 Never use the transmitter housing as a ladder or climbing aid.


# Electromagnetic compatibility (EMC)

- As per IEC/EN 61326 and NAMUR Recommendation 21 (NE 21)
- Device version with PROFIBUS DP: Complies with emission limits for industry as per EN 50170
   Volume 2, IEC 61784
- The following applies for PROFIBUS DP: If baud rates > 1.5 MBaud, an EMC cable entry must be used and the cable shield must continue as far as the terminal wherever possible.
- Details are provided in the Declaration of Conformity.

## **Process**

### Medium temperature range

- -20 to +150 °C (-4 to +302 °F) for PFA, DN 25 to 200 (1 to 8")
- -20 to +180 °C (-4 to +356 °F) for PFA high-temperature, DN 25 to 200 (1 to 8")
- -40 to +130 °C (-40 to +266 °F) for PTFE, DN 15 to 600 (½ to 24")

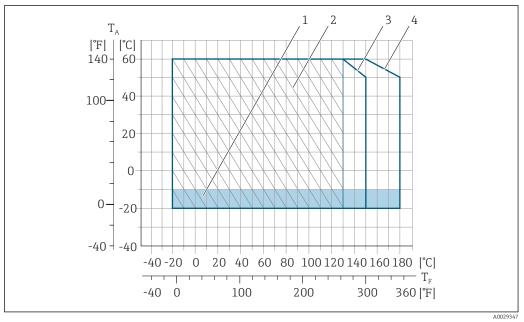


■ 31 PFA

 $T_A$  Ambient temperature range

- T<sub>F</sub> Fluid temperature
- 1 Colored area: the ambient temperature range -10 to -20 °C (+14 to -4 °F) applies to stainless flanges only
- 2 Hatched area: harsh environment IP69 only for fluid temperature range −20 to +130 °C (−4 to +266 °F)
- 3 -20 to +150 °C (-4 to +302 °F) for PFA, DN 25 to 200 (1 to 8")
- 4  $-20 \text{ to } +180 \,^{\circ}\text{C} \, (-4 \text{ to } +356 \,^{\circ}\text{F}) \, \text{for PFA high-temperature, DN 25 to 200 (1 to 8")}$

56

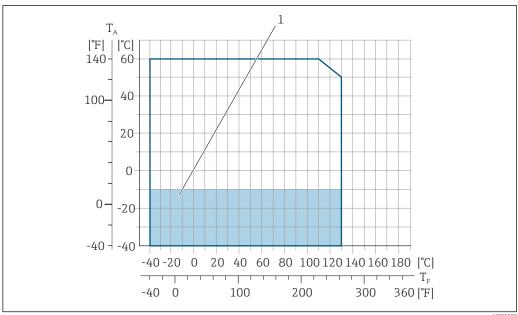

■ 32 PTFE

- Ambient temperature range
- Fluid temperature
- Colored area: the ambient temperature range of -10 to -40 °C (+14 to -40 °F) applies to stainless flanges

#### Conductivity

 $\geq$  5  $\mu$ S/cm for liquids in general. Stronger filter damping is required for very low conductivity values.




Proline 500


## Pressure-temperature ratings

The following pressure/temperature diagrams apply to all pressure-bearing parts of the device and not just the process connection. The diagrams show the maximum permissible medium pressure depending on the specific medium temperature.

#### Process connection: flange according to EN 1092-1 (DIN 2501)

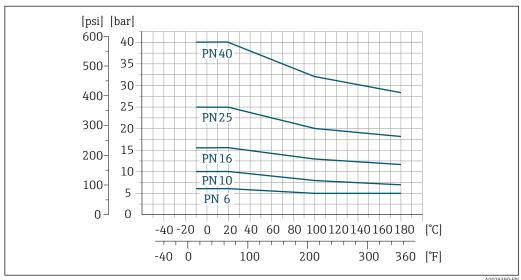


■ 33 Process connection material: carbon steel, FE410WB/S235JRG2; Alloy C22, 2.4602 (UNS N06022)

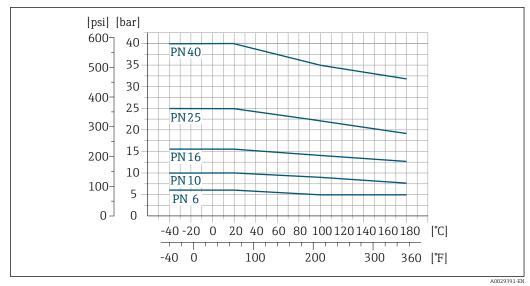


■ 34 Process connection material: stainless steel, 1.4571 (F316L)

## Process connection: flange according to ASME B16.5

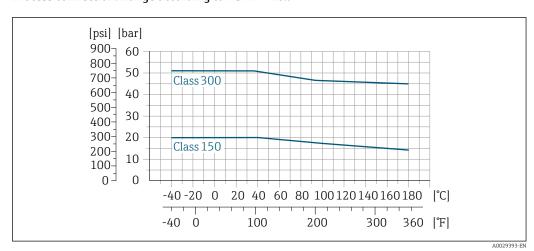

 $\blacksquare$  35 Process connection material: carbon steel, A105

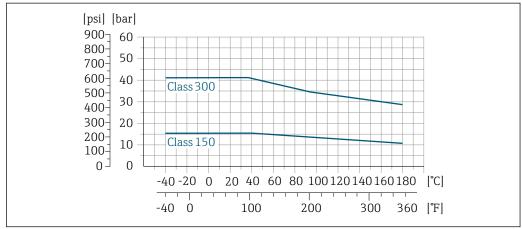


■ 36 Process connection material: stainless steel, F316L

58 Endress+Hauser


A0029394-E

## Process connection: flange according to JIS B2220

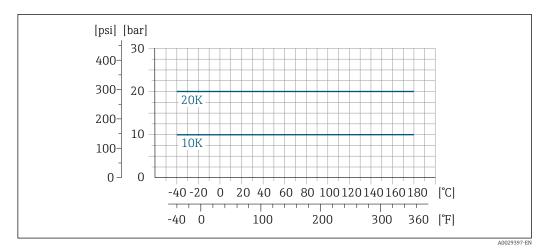

🗷 37 Process connection material: stainless steel, 1.0425 (F316L); carbon steel, S235JRG2/HII

## Process connection: flange according to AS 2129 (Table E) or AS 4087 (PN 16)

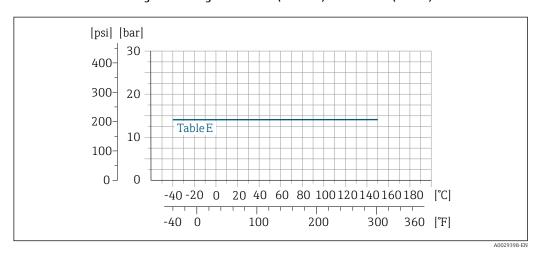

■ 38 Process connection material: carbon steel, A105/S235JRG2/S275JR

Pressure tightness

"-" = no specifications possible

Liner: PFA

Nominal	diameter	Limit values for absolute pressure in [mbar] ([psi]) for medium temperatures:							
[mm]	[in]	+25 °C (+77 °F)	+80 °C (+176 °F)	+100 to +180 °C (+212 to +356 °F)					
25	1	0 (0)	0 (0)	0 (0)					
32	-	0 (0)	0 (0)	0 (0)					
40	1 ½	0 (0)	0 (0)	0 (0)					
50	2	0 (0)	0 (0)	0 (0)					
65	-	0 (0)	0 (0)	0 (0)					
80	3	0 (0)	0 (0)	0 (0)					
100	4	0 (0)	0 (0)	0 (0)					
125	-	0 (0)	0 (0)	0 (0)					
150	6	0 (0)	0 (0)	0 (0)					
200	8	0 (0)	0 (0)	0 (0)					

Liner: PTFE

Nominal	diameter	Limit values for ab	solute pressure in [n	nbar] ([psi]) for med	ium temperatures:		
[mm]	[in]	+25 °C (+77 °F)	+80 °C (+176 °F)	+100 °C (+212 °F)	+130 °C (+266 °F)		
15	1/2	0 (0)	0 (0)	0 (0)	100 (1.45)		
25	1	0 (0)	0 (0)	0 (0)	100 (1.45)		
32	-	0 (0)	0 (0)	0 (0)	100 (1.45)		
40	1 ½	0 (0)	0 (0)	0 (0)	100 (1.45)		
50	2	0 (0)	0 (0)	0 (0)	100 (1.45)		
65	-	0 (0)	-	40 (0.58)	130 (1.89)		
80	3	0 (0)	-	40 (0.58)	130 (1.89)		
100	4	0 (0)	-	135 (1.96)	170 (2.47)		
125	-	135 (1.96)	-	240 (3.48)	385 (5.58)		
150	6	135 (1.96)	-	240 (3.48)	385 (5.58)		
200	8	200 (2.90)	-	290 (4.21)	410 (5.95)		
250	10	330 (4.79)	-	400 (5.80)	530 (7.69)		
300	12	400 (5.80)	-	500 (7.25)	630 (9.14)		
350	14	470 (6.82)	-	600 (8.70)	730 (10.6)		
400	16	540 (7.83)	-	670 (9.72)	800 (11.6)		
450	18						
500	20	No negative pressure permitted!					
600	24						


## Flow limit

The diameter of the pipe and the flow rate determine the nominal diameter of the sensor. The optimum velocity of flow is between 2 to 3 m/s (6.56 to 9.84 ft/s). Also match the velocity of flow (v) to the physical properties of the fluid:


- v < 2 m/s (6.56 ft/s): for abrasive fluids (e.g. potter's clay, lime milk, ore slurry)
- v > 2 m/s (6.56 ft/s): for fluids producing buildup (e.g. wastewater sludge)
- A necessary increase in the flow velocity can be achieved by reducing the sensor nominal diameter.
- For an overview of the full scale values for the measuring range, see the "Measuring range" section  $\rightarrow \stackrel{ riangle}{=} 10$

#### Pressure loss


- No pressure loss occurs if the sensor is installed in a pipe with the same nominal diameter.

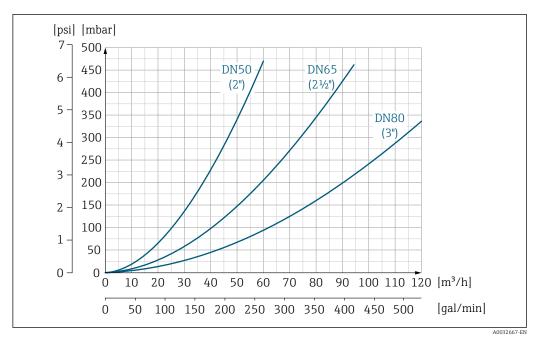

■ 39 Pressure loss DN 50 to 80 (2 to 3") in the case of order code for "Design", option C "Insertion length short ISO/DVGW to DN300, without inlet/outlet runs, constricted meas.tube"

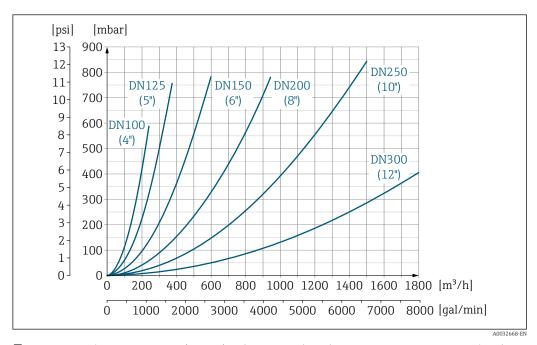

■ 40 Pressure loss DN 100 to 300 (4 to 12") in the case of order code for "Design", option C "Insertion length short ISO/DVGW to DN300, without inlet/outlet runs, constricted meas.tube"

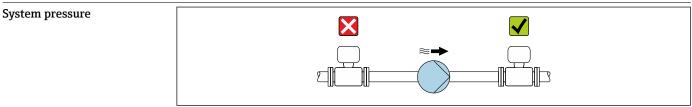

Endress+Hauser 61

A0028777

Never install the sensor on the pump suction side in order to avoid the risk of low pressure, and thus damage to the liner.

Furthermore, install pulse dampers if reciprocating, diaphragm or peristaltic pumps are used.

- Information on the liner's resistance to partial vacuum → 🖺 59

  - Information on the vibration resistance of the measuring system → 🗎 55

#### Thermal insulation


If process fluids are very hot, it is necessary to insulate pipes in order to reduce energy loss and to prevent individuals from accidentally coming into contact with hot pipes. Please observe the applicable standards and guidelines for insulating pipes.

- A housing support/an extended neck is used for heat dissipation:
  - Devices with the order code for "Lining", option **B** "PFA high-temperature" always come with a housing support.
  - In the case of all other devices, a housing support can be ordered via the order code for "Sensor option", option CG "Sensor extended neck".


## **A** WARNING

## Electronics overheating on account of thermal insulation!

▶ The housing support is used for heat dissipation and must be completely free (i.e. uncovered). At the very maximum, the sensor insulation may extend as far as the upper edge of the two sensor half-shells.

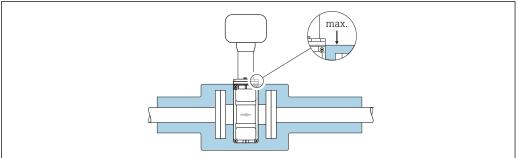

#### Vibrations

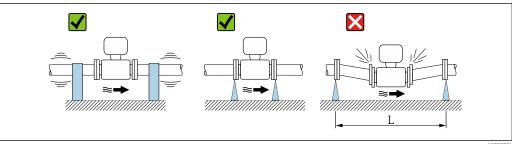

Measures to avoid device vibrations (L > 10 m (33 ft))

In the event of very strong vibrations, the pipe and sensor must be supported and fixed.


• Information on the shock resistance of the measuring system  $\rightarrow \triangleq 55$ Information on the vibration resistance of the measuring system  $\rightarrow \triangleq 55$ 

## Mechanical construction

#### Dimensions in SI units

Housing of Proline 500 - digital transmitter

Non-hazardous area or hazardous area: Zone 2; Class I, Division 2

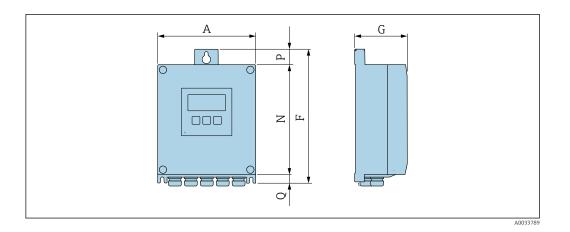

Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Sensor"


A	F	G	N	P	Q
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
167	232	80	187	24	

 $\label{lem:code} \textit{Order code for "Transmitter housing", option D "Polycarbonate" and order code for "Integrated ISEM electronics", option A "Sensor"$ 

A	F	G	N	P	Q
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
177	234	90	197	17	

## Housing of Proline 500 transmitter

Hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division  $\bf 1$ 

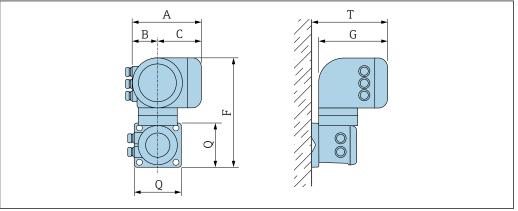

A0033788


 $\label{lem:code_for_problem} \textit{Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Transmitter"$ 

A	B	C	F	G	Q	T
[mm]						
188	85	103	318	217	130	239

 $\label{lem:code_for_problem} \textit{Order code for "Transmitter housing", option L "Cast, stainless" and order code for "Integrated ISEM electronics", option B "Transmitter"$ 

A	B	C	F	G	Q	T
[mm]						
188	85	103	295	217	130	

## Sensor connection housing

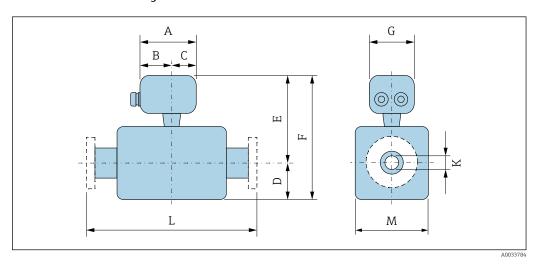

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN	Α	В	С	D	E 1)	F 1)	G	К	L	M
[mm]										
15	148	94	54	84	197	281	136	2)	3)	120
25	148	94	54	84	197	281	136	2)	3)	120
32	148	94	54	84	197	281	136	2)	3)	120
40	148	94	54	84	197	281	136	2)	3)	120
50	148	94	54	84	197	281	136	2)	3)	120
65	148	94	54	109	222	331	136	2)	3)	180
80	148	94	54	109	222	331	136	2)	3)	180
100	148	94	54	109	222	331	136	2)	3)	180
125	148	94	54	150	262	412	136	2)	3)	260
150	148	94	54	150	262	412	136	2)	3)	260
200	148	94	54	180	287	467	136	2)	3)	324
250	148	94	54	205	312	517	136	2)	3)	400
300	148	94	54	230	337	567	136	2)	3)	460
350	148	94	54	282	399	681	136	2)	3)	564
400	148	94	54	308	425	733	136	2)	3)	616
450	148	94	54	333	450	783	136	2)	3)	666
500	148	94	54	359	476	835	136	2)	3)	717
600	148	94	54	411	528	939	136	2)	3)	821

- 1) With order code for "Sensor option", option CG "Sensor extended neck for insulation" or order code for "Liner", option B "PFA high temperature": values + 110 mm
- 2) Depends on the liner
- 3) Total length is independent of the process connections. Length according to DVGW (German Technical and Scientific Association for Gas and Water).→ 🖺 66

 ${\it Order code for "Sensor connection housing", option L "Cast, stainless"}$ 


DN	Α	В	С	D	E	F	G	K	L	M
[mm]										
15	145	86	59	84	235	319	136	1)	2)	120
25	145	86	59	84	235	319	136	1)	2)	120
32	145	86	59	84	235	319	136	1)	2)	120
40	145	86	59	84	235	319	136	1)	2)	120
50	145	86	59	84	235	319	136	1)	2)	120
65	145	86	59	109	260	369	136	1)	2)	180
80	145	86	59	109	260	369	136	1)	2)	180
100	145	86	59	109	260	369	136	1)	2)	180
125	145	86	59	150	300	450	136	1)	2)	260
150	145	86	59	150	300	450	136	1)	2)	260
200	145	86	59	180	325	505	136	1)	2)	324
250	145	86	59	205	350	555	136	1)	2)	400
300	145	86	59	230	375	605	136	1)	2)	460
350	145	86	59	282	437	719	136	1)	2)	564
400	145	86	59	308	463	771	136	1)	2)	616
450	145	86	59	333	488	821	136	1)	2)	666
500	145	86	59	359	514	873	136	1)	2)	717
600	145	86	59	411	566	977	136	1)	2)	821

<sup>1)</sup> 

<sup>2)</sup> 

## Flange connections

## Flange

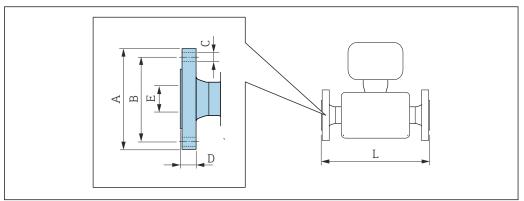

A001562

Flange in accordance with EN 1092-1 (DIN 2501 / DIN 2512N): PN 10 P245GH (1.0352): order code for "Process connection", option D2K 1.4404 (F316/F316L): order code for "Process connection", option D2S										
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L <sup>1)</sup> [mm]				
200	340	295	8 × Ø22	26	220.9	350				
250	395	350	12 × Ø22	28	275.5	450				
300	445	400	12 × Ø22	28	326.5	500				
350	505	460	16 × Ø22	26	346	550				
400	565	515	16 × Ø26	26	396	600				
450	615	565	20 × Ø26	28	447	650				
500	670	620	20 × Ø26	28	498	650				
600	780	725	20 × Ø30	30	600	780				
Surface roughi	ness (flange): EN	N 1092-1 Form	B1 (DIN 2526 Form	C), Ra 6.3 to 12	5 μm					

1) Length according to DVGW (German Technical and Scientific Association for Gas and Water).

P245GH (1.03	Flange in accordance with EN 1092-1 (DIN 2501 / DIN 2512N): PN 16 P245GH (1.0352): order code for "Process connection", option D3K 1.4404 (F316/F316L): order code for "Process connection", option D3S										
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L <sup>1)</sup> [mm]					
65	185	145	8 × Ø18	20	77.1	200					
80	200	160	8 × Ø18	20	89.9	200					
100	220	180	8 × Ø18	22	115.3	250					
125	250	210	8 × Ø18	24	141.3	250					
150	285	240	8 × Ø22	24	170.2	300					
200	340	295	12 × Ø22	26	220.9	350					
250	405	355	12 × Ø26	32	275.7	450					
300	460	410	12 × Ø26	32	326.5	500					
350	520	470	16 × Ø26	30	346	550					
400	580	525	16 × Ø30	32	396	600					
500	715	650	20 × Ø33	36	498	650					

Flange in accordance with EN 1092-1 (DIN 2501 / DIN 2512N): PN 16 P245GH (1.0352): order code for "Process connection", option D3K 1.4404 (F316/F316L): order code for "Process connection", option D3S								
DN [mm]								
600 840 770 20 × Ø36 40 600 780								
Surface roughness (flange): EN 1092-1 Form B1 (DIN 2526 Form C), Ra 6.3 to 12.5 μm								

1) Length according to DVGW (German Technical and Scientific Association for Gas and Water).

Flange in accordance with EN 1092-1 (DIN 2501 / DIN 2512N): PN 25 P245GH (1.0352): order code for "Process connection", option D4K 1.4404 (F316/F316L): order code for "Process connection", option D4S							
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L <sup>1)</sup> [mm]	
200	360	310	12 × Ø26	32	220.9	350	
250	425	370	12 × Ø30	36	275.7	450	
300	485	430	16 × Ø30	40	326.5	500	
350	555	490	16 × Ø33	38	346	550	
400	620	550	16 × Ø36	40	396	600	
500	730	660	20 × Ø36	48	498	650	
600	845	770	20 × Ø39	48	600	780	
Surface rough	Surface roughness (flange): EN 1092-1 Form B1 (DIN 2526 Form C), Ra 6.3 to 12.5 µm						

1) Length according to DVGW (German Technical and Scientific Association for Gas and Water).

Flange in accordance with EN 1092-1 (DIN 2501 / DIN 2512N): PN 40 P245GH (1.0352): order code for "Process connection", option D5K 1.4404 (F316/F316L): order code for "Process connection", option D5S							
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L <sup>1)</sup> [mm]	
15	95	65	4 × Ø14	14	22.2	200	
25	115	85	4 × Ø14	16	34.2	200	
32	140	100	4 × Ø18	18	43	200	
40	150	110	4 × Ø18	18	49.1	200	
50	165	125	4 × Ø18	20	61.3	200	
65	185	145	8 × Ø18	24	77.1	200	
80	200	160	8 × Ø18	26	89.9	200	
100	235	190	8 × Ø22	26	115.3	250	
125	270	220	8 × Ø26	28	141.3	250	
150	300	250	8 × Ø26	30	170.2	300	
Surface roughn	Surface roughness (flange): EN 1092-1 Form B1 (DIN 2526 Form C), Ra 6.3 to 12.5 µm						

1) Length according to DVGW (German Technical and Scientific Association for Gas and Water).

Flange according to ASME B16.5, Class 150 A 105: order code for "Process connection", option A1K 1.4404 (F316/F316L): order code for "Process connection", option A1S								
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L <sup>1)</sup> [mm]		
15	88.9	60.5	4 × Ø16	9.6	22.3	200		
25	108	79.2	4 × Ø16	12.6	34.2	200		
40	127	98.6	4 × Ø16	15.9	49.1	200		
50	152.4	120.7	4 × Ø19.1	17.5	61.3	200		
80	190.5	152.4	4 × Ø19.1	22.3	89.9	200		
100	228.6	190.5	8 × Ø19.1	22.3	115.3	250		
150	279.4	241.3	8 × Ø22.4	23.8	170.2	300		
200	342.9	298.5	8 × Ø22.4	26.8	220.9	350		
250	406.4	362	12 × Ø25.4	29.6	275.7	450		
300	482.6	431.8	12 × Ø25.4	30.2	326.5	500		
350	535	476.3	12 × Ø28.6	35.4	346	550		
400	595	539.8	16 × Ø28.6	37	396	600		
450	635	577.9	16 × Ø31.8	40.1	447	650		
500	700	635	20 × Ø31.8	43.3	498	650		
600	815	749.3	20 × Ø34.9	48.1	600	780		
Surface rough	Surface roughness (flange): Ra 6.3 to 12.5 µm							

1) Length according to DVGW (German Technical and Scientific Association for Gas and Water).

Flange according to ASME B16.5, Class 300 A 105: order code for "Process connection", option A2K 1.4404 (F316/F316L): order code for "Process connection", option A2S							
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L <sup>1)</sup> [mm]	
15	95.3	66.5	4 × Ø16	12.6	22.3	200	
25	123.9	88.9	4 × Ø19.1	15.9	34.2	200	
40	155.4	114.3	4 × Ø22.4	19	49.1	200	
50	165.1	127	8 × Ø19.1	20.8	61.3	200	
80	209.6	168.1	8 × Ø22.4	26.8	89.9	200	
100	254	200.2	8 × Ø22.4	30.2	115.3	250	
150	317.5	269.7	12 × Ø22.4	35	170.2	300	
Surface rough	Surface roughness (flange): Ra 6.3 to 12.5 µm						

1) Length according to DVGW (German Technical and Scientific Association for Gas and Water).

Flange according to JIS B2220, 10K A 105/A350LF2: order code for "Process connection", option N3K 1.4404 (F316L): order code for "Process connection", option N3S							
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L <sup>1)</sup> [mm]	
50	155	120	4 × Ø19	16	61.1	200	
65	175	140	4 × Ø19	18	77.1	200	
80	185	150	8 × Ø19	18	90	200	

Flange according to JIS B2220, 10K A 105/A350LF2: order code for "Process connection", option N3K 1.4404 (F316L): order code for "Process connection", option N3S									
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L <sup>1)</sup> [mm]			
100	210	175	8 × Ø19	18	115.4	250			
125	250	210	8 × Ø23	20	141.2	250			
150	280	240	8 × Ø23	22	169	300			
200	330	290	12 × Ø23	22	220	350			
250	400	355	12 × Ø25	24	274	450			
300	300 445 400 16 × Ø25 24 325 500								
Surface roughi	Surface roughness (flange): Ra 6.3 to 12.5 µm								


 $1) \qquad \text{Length according to DVGW (German Technical and Scientific Association for Gas and Water)}.$ 

Flange according to JIS B2220, 20K A 105/A350LF2: order code for "Process connection", option N4K 1.4404 (F316L): order code for "Process connection", option N4S											
DN [mm]	A [mm]	B [mm]	C [mm]	D [mm]	E [mm]	L <sup>1)</sup> [mm]					
15	95	70	4 × Ø15	14	22.2	200					
25	125	90	4 × Ø19	16	34.5	200					
32	135	100	4 × Ø19	18	43.2	200					
40	140	105	4 × Ø19	18	49.1	200					
50	155	120	8 × Ø19	18	61.1	200					
65	175	140	8 × Ø19	20	77.1	200					
80	200	160	8 × Ø23	22	90	200					
100	225	185	8 × Ø23	24	115.4	250					
125	270	225	8 × Ø25	26	141.2	250					
150	305	260	12 × Ø25	28	169	300					
200	350	305	12 × Ø25	30	220	350					
250	430	380	12 × Ø27	34	274	450					
300	480	430	16 × Ø27	36	325	500					
Surface rough	ness (flange): R	a 6.3 to 12.5 μι	n		urface roughness (flange): Ra 6.3 to 12.5 µm						


 $1) \qquad \text{Length according to DVGW (German Technical and Scientific Association for Gas and Water)}.$ 

### Accessories

Protective cover

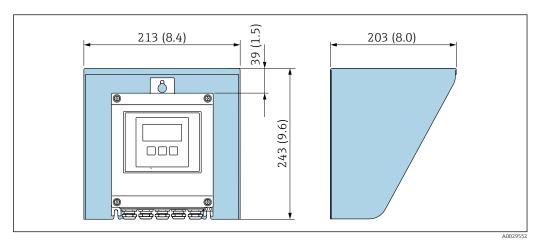

■ 42 Weather protection cover for Proline 500 – digital

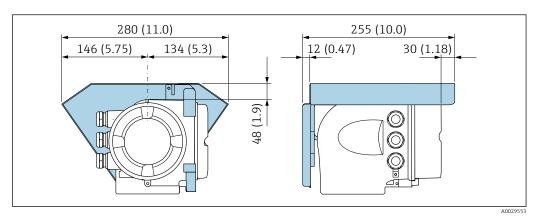


 $\blacksquare$  43 Weather protection cover for Proline 500

External WLAN antenna

The external WLAN antenna is not suitable for use in hygienic applications.

Proline 500 – digital


External WLAN antenna mounted on device

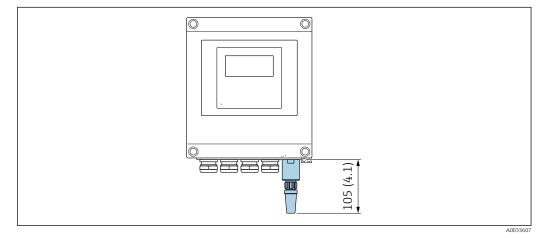

■ 44 Engineering unit mm (in)

#### External WLAN antenna mounted with cable


The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

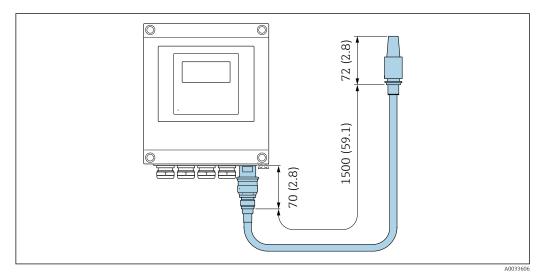

🖪 45 🛮 Engineering unit mm (in)

#### Proline 500


External WLAN antenna mounted on device

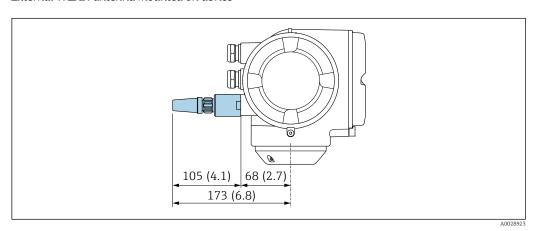

■ 46 Engineering unit mm (in)


## External WLAN antenna mounted with cable

The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

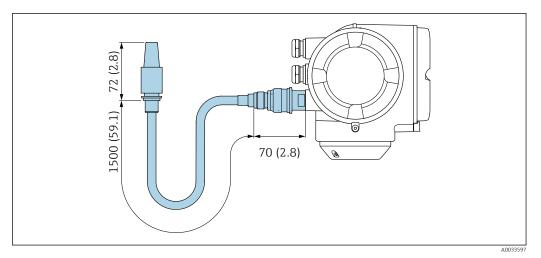

**₽** 47 Engineering unit mm (in)

## Ground disk for flange connection

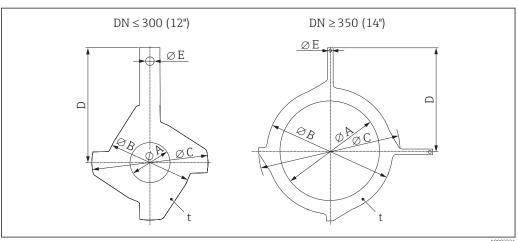

DN 1) Α В С D Ε t EN (DIN), JIS, AS 2) PFA, PTFE [mm] [mm] [mm] [mm] [mm] [mm] [mm] 61.5 6.5 77.5 87.5 6.5 87.5 94.5 6.5 6.5 115.5 6.5 6.5 131.5 154.5 6.5 186.5 6.5 206.5 6.5 6.5 6.5 6.5 300<sup>3)</sup> 6.5 300<sup>4)</sup> 6.5 

Endress+Hauser

A0003221


DN 1)	A	В	С	D	E	t
EN (DIN), JIS, AS 2)	PFA, PTFE					
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]
350 <sup>3)</sup>	343	433	479	365	9.0	2
400 3)	393	480	542	395	9.0	2
450 <sup>3)</sup>	439	538	583	417	9.0	2
500 <sup>3)</sup>	493	592	650	460	9.0	2
600 <sup>3)</sup>	593	693	766	522	9.0	2

- 1) Ground disks DN 15 to 250 ( $\frac{1}{2}$  to 10") can be used for all available flange standards/pressure ratings.
- 2) For flanges to AS, only DN 25 and DN 50 are available.
- 3) PN 10/16
- 4) PN 25, JIS 10K/20K

#### Dimensions in US units

#### Housing of Proline 500 - digital transmitter

Non-hazardous area or hazardous area: Zone 2; Class I, Division 2

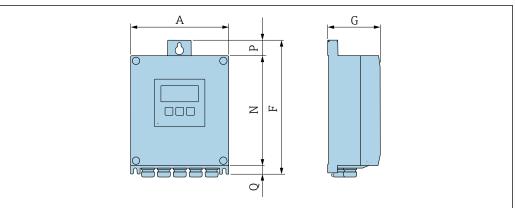

A003378

 $\label{lem:code_for_problem} \textit{Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option A "Sensor"$ 


A	F	G	N	P	Q
[in]	[in]	[in]	[in]	[in]	[in]
6.57	9.13	3.15	7.36	0.94	

 $\label{lem:code} \textit{Order code for "Transmitter housing", option D "Polycarbonate" and order code for "Integrated ISEM electronics", option A "Sensor"$ 

A	F	G	N	P	Q
[in]	[in]	[in]	[in]	[in]	[in]
6.97	9.21	3.54	7.76	0.67	0.87

## Housing of Proline 500 transmitter

Hazardous area: Zone 2; Class I, Division 2 or Zone 1; Class I, Division 1

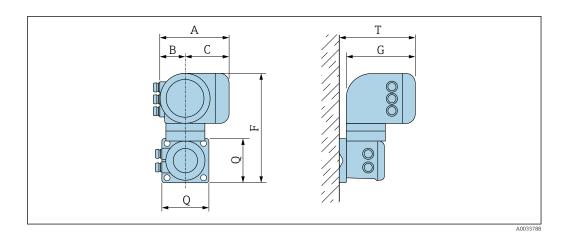


 $\label{lem:code_for_problem} \textit{Order code for "Transmitter housing", option A "Aluminum, coated" and order code for "Integrated ISEM electronics", option B "Transmitter"$ 

A	B	C	F	G	Q	T
[in]						
7.40	3.35	4.06	12.5	8.54	5.12	

 $\label{lem:code} \textit{Order code for "Transmitter housing", option L "Cast, stainless" and order code for "Integrated ISEM electronics", option B "Transmitter"$ 

A	B	C	F	G	Q	T
[in]						
7.40	3.35	4.06	11.6	8.54	5.12	

## Sensor connection housing

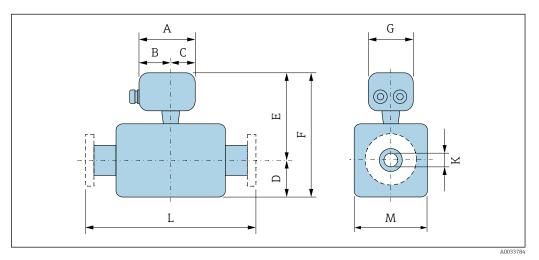

Order code for "Sensor connection housing", option A "Aluminum, coated"

DN	Α	В	С	D	E 1)	F 1)	G	K	L	M
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
1/2	5.83	3.70	2.13	3.31	7.76	11.06	5.35	2)	3)	4.72
1	5.83	3.70	2.13	3.31	7.76	11.06	5.35	2)	3)	4.72
1 1/4	5.83	3.70	2.13	3.31	7.76	11.06	5.35	2)	3)	4.72
1 ½	5.83	3.70	2.13	3.31	7.76	11.06	5.35	2)	3)	4.72
2	5.83	3.70	2.13	3.31	7.76	11.06	5.35	2)	3)	4.72

DN	Α	В	С	D	E 1)	F 1)	G	К	L	M
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
2 1/2	5.83	3.70	2.13	4.29	8.74	13.03	5.35	2)	3)	7.09
3	5.83	3.70	2.13	4.29	8.74	13.03	5.35	2)	3)	7.09
4	5.83	3.70	2.13	4.29	8.74	13.03	5.35	2)	3)	7.09
5	5.83	3.70	2.13	5.91	10.31	16.22	5.35	2)	3)	10.2
6	5.83	3.70	2.13	5.91	10.31	16.22	5.35	2)	3)	10.2
8	5.83	3.70	2.13	7.09	11.3	18.39	5.35	2)	3)	12.8
10	5.83	3.70	2.13	8.07	12.28	20.35	5.35	2)	3)	15.8
12	5.83	3.70	2.13	9.06	13.27	22.32	5.35	2)	3)	18.1
14	5.83	3.70	2.13	11.1	15.71	26.81	5.35	2)	3)	22.2
16	5.83	3.70	2.13	12.13	16.73	28.86	5.35	2)	3)	24.3
18	5.83	3.70	2.13	13.11	17.72	30.83	5.35	2)	3)	26.2
20	5.83	3.70	2.13	14.13	18.74	32.87	5.35	2)	3)	28.2
24	5.83	3.70	2.13	16.18	20.79	36.97	5.35	2)	3)	32.3

- 1) With order code for "Sensor option", option CG "Sensor extended neck for insulation" or order code for "Liner", option B "PFA high temperature": values  $\pm$  4.33 in
- 2) Depends on the liner
- 3) Total length is independent of the process connections. Length according to DVGW (German Technical and Scientific Association for Gas and Water). → 76


Order code for "Sensor connection housing", option L "Cast, stainless"

DN	Α	В	С	D	E	F	G	К	L	М
[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]	[in]
1/2	5.71	3.39	2.32	3.31	9.25	12.56	5.35	1)	2)	4.72
1	5.71	3.39	2.32	3.31	9.25	12.56	5.35	1)	2)	4.72
1 1/4	5.71	3.39	2.32	3.31	9.25	12.56	5.35	1)	2)	4.72
1 1/2	5.71	3.39	2.32	3.31	9.25	12.56	5.35	1)	2)	4.72
2	5.71	3.39	2.32	3.31	9.25	12.56	5.35	1)	2)	4.72
2 1/2	5.71	3.39	2.32	4.29	10.24	14.53	5.35	1)	2)	7.09
3	5.71	3.39	2.32	4.29	10.24	14.53	5.35	1)	2)	7.09
4	5.71	3.39	2.32	4.29	10.24	14.53	5.35	1)	2)	7.09
5	5.71	3.39	2.32	5.91	11.81	17.72	5.35	1)	2)	10.2
6	5.71	3.39	2.32	5.91	11.81	17.72	5.35	1)	2)	10.2
8	5.71	3.39	2.32	7.09	12.8	19.88	5.35	1)	2)	12.8
10	5.71	3.39	2.32	8.07	13.78	21.85	5.35	1)	2)	15.8
12	5.71	3.39	2.32	9.06	14.76	23.82	5.35	1)	2)	18.1
14	5.71	3.39	2.32	11.1	17.2	28.31	5.35	1)	2)	22.2
16	5.71	3.39	2.32	12.13	18.23	30.35	5.35	1)	2)	24.3
18	5.71	3.39	2.32	13.11	19.21	32.32	5.35	1)	2)	26.2
20	5.71	3.39	2.32	14.13	20.24	34.37	5.35	1)	2)	28.2
24	5.71	3.39	2.32	16.18	22.28	38.46	5.35	1)	2)	32.3

- 1) Depends on the liner
- 2) Total length is independent of the process connections. Length according to DVGW (German Technical and Scientific Association for Gas and Water).→ 1 76

## Flange connections

## Flange

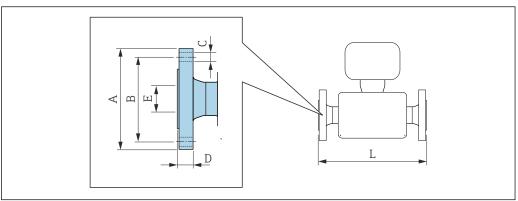

A(	00:	156	52

A 105: orde	Flange according to ASME B16.5, Class 150 A 105: order code for "Process connection", option A1K 1.4404 (F316/F316L): order code for "Process connection", option A1S										
DN [in]	A [in]	B [in]	C [in]	D [in]	E [in]	L <sup>1)</sup> [in]					
1/2	3.5	2.38	4 × Ø0.63	0.38	0.88	7.87					
1	4.25	3.12	4 × Ø0.63	0.5	1.35	7.87					
1 ½	5	3.88	4 × Ø0.63	0.63	1.93	7.87					
2	6	4.75	4 × Ø0.75	0.69	2.41	7.87					
3	7.5	6	4 × Ø0.75	0.88	3.54	7.87					
4	9	7.5	8 × Ø0.75	0.88	4.54	9.84					
6	11	9.5	8 × Ø0.88	0.94	6.7	11.8					
8	13.5	11.75	8 × Ø0.88	1.06	8.7	13.8					
10	16	14.25	12 × Ø1	1.17	10.85	17.7					
12	19	17	12 × Ø1	1.19	12.85	19.7					
14	21.06	18.75	12 × Ø1.13	1.39	13.62	21.7					
16	23.43	21.25	16 × Ø1.13	1.46	15.59	23.6					
18	25	22.75	16 × Ø1.25	1.58	17.6	25.6					
20	27.56	25	20 × Ø1.25	1.7	19.61	25.6					
24	32.09	29.5	20 × Ø1.37	1.89	23.62	30.7					
Surface rou	ghness (flange):	Ra 6.3 to 12.5 μ	m								

 $1) \qquad \text{Length according to DVGW (German Technical and Scientific Association for Gas and Water)}.$ 

A 105: order	Flange according to ASME B16.5, Class 300 A 105: order code for "Process connection", option A2K 1.4404 (F316/F316L): order code for "Process connection", option A2S										
DN         A         B         C         D         E         L¹¹           [in]         [in]         [in]         [in]         [in]											
1/2	3.75	2.62	4 × Ø0.63	0.5	0.88	7.87					
1	4.88	3.5	4 × Ø0.75	0.63	1.35	7.87					
1 ½ 6.12 4.5 4 × Ø0.88 0.75 1.93 7.87											
2	6.5	5	8 × Ø0.75	0.82	2.41	7.87					


76

Flange according to ASME B16.5, Class 300 A 105: order code for "Process connection", option A2K 1.4404 (F316/F316L): order code for "Process connection", option A2S											
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$											
3	8.25	6.62	8 × Ø0.88	1.06	3.54	7.87					
4	10	7.88	8 × Ø0.88	1.19	4.54	9.84					
6 12.5 10.62 12 × Ø0.88 1.38 6.7 11.8											
Surface roug	hness (flange)	: Ra 6.3 to 12.5 µ	ım								


1) Length according to DVGW (German Technical and Scientific Association for Gas and Water).

#### Accessories

Protective cover

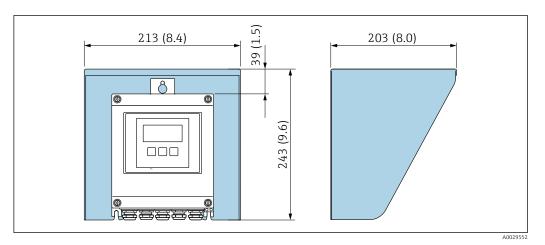

 $\blacksquare$  48 Weather protection cover for Proline 500 – digital

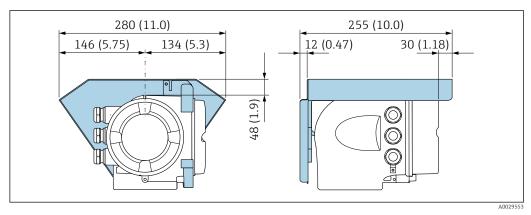


49 Weather protection cover for Proline 500

## External WLAN antenna

The external WLAN antenna is not suitable for use in hygienic applications.

## Proline 500 – digital


#### External WLAN antenna mounted on device

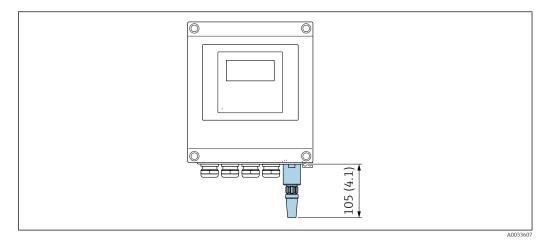

■ 50 Engineering unit mm (in)

#### External WLAN antenna mounted with cable


The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

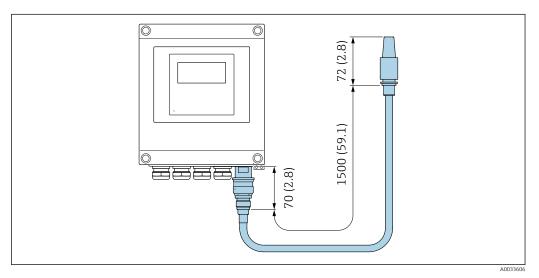

■ 51 Engineering unit mm (in)

Proline 500


#### External WLAN antenna mounted on device

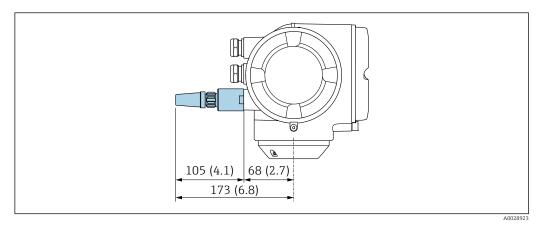

**■** 52 Engineering unit mm (in)


#### External WLAN antenna mounted with cable

The external WLAN antenna can be mounted separately from the transmitter if the transmission/reception conditions at the transmitter mounting location are poor.

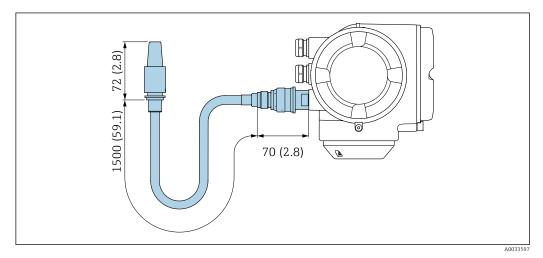

**■** 53 Engineering unit mm (in)

## Ground disk for flange connection

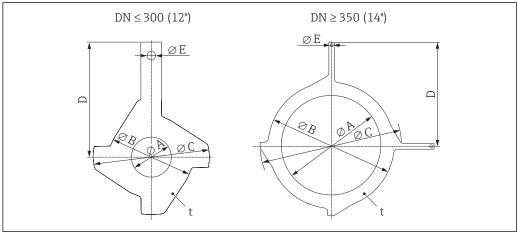

A0003221

DN <sup>1)</sup>	A	В	С	D	Е	t
ASME	PFA, PTFE					
[in]	[in]	[in]	[in]	[in]	[in]	[in]
1/2	0.63	1.69	2.42	2.87	0.26	0.08
1	1.02	2.44	3.05	3.44	0.26	0.08
1 1/2	1.61	3.23	3.98	4.06	0.26	0.08
2	2.05	3.98	4.55	4.25	0.26	0.08
3	3.15	5.16	6.08	5.31	0.26	0.08
4	4.09	6.14	7.34	6.02	0.26	0.08
6	6.22	8.54	10.08	7.24	0.26	0.08
8	8.11	10.51	11.34	8.07	0.26	0.08
10	10.24	12.91	14.13	9.45	0.26	0.08
12	12.28	14.76	16.26	10.75	0.26	0.08
14	13.50	17.05	18.86	14.37	0.35	0.08
16	15.47	18.90	21.34	15.55	0.35	0.08
18	17.28	21.18	22.95	16.42	0.35	0.08
20	19.41	23.31	25.59	18.11	0.35	0.08
24	23.35	27.28	30.16	20.55	0.35	0.08

1) Ground disks can be used for all available pressure ratings.

## Weight

All values (weight exclusive of packaging material) refer to devices for standard pressure ratings.

#### Transmitter

- Proline 500 digital polycarbonate: 1.4 kg (3.1 lbs)
- Proline 500 digital aluminum: 2.4 kg (5.3 lbs)
- Proline 500 aluminum: 6.5 kg (14.3 lbs)
- Proline 500 cast, stainless: 15.6 kg (34.4 lbs)

#### Sensor

- Sensor with aluminum connection housing version: see the information in the following table
- Cast connection housing version, stainless: +3.7 kg (+8.2 lbs)

## Weight in SI units

Nominal d	minal diameter EN (DIN), AS 1)		ASME		JIS		
[mm]	[in]	Pressure rating	[kg]	Pressure rating	[kg]	Pressure rating	[kg]
15	1/2	PN 40	4.5	Class 150	4.5	10K	4.5
25	1	PN 40	5.3	Class 150	5.3	10K	5.3
32	-	PN 40	6	Class 150	-	10K	5.3
40	1 ½	PN 40	7.4	Class 150	7.4	10K	6.3
50	2	PN 40	8.6	Class 150	8.6	10K	7.3
65	-	PN 16	10	Class 150	-	10K	9.1
80	3	PN 16	12	Class 150	12	10K	10.5
100	4	PN 16	14	Class 150	14	10K	12.7
125	-	PN 16	19.5	Class 150	-	10K	19
150	6	PN 16	23.5	Class 150	23.5	10K	22.5
200	8	PN 10	43	Class 150	43	10K	39.9
250	10	PN 10	63	Class 150	73	10K	67.4
300	12	PN 10	68	Class 150	108	10K	70.3

80

Nominal d	liameter	EN (DIN), AS	.)	ASME		JIS	
[mm]	[in]	Pressure rating	[kg]	Pressure rating	[kg]	Pressure rating	[kg]
350	14	PN 10	103	Class 150	173	10K	79
400	16	PN 10	118	Class 150	203	10K	100
450	18	PN 10	159	Class 150	253	10K	128
500	20	PN 10	154	Class 150	283	10K	142
600	24	PN 10	206	Class 150	403	10K	188

<sup>1)</sup> For flanges to AS, only DN 25 and 50 are available.

## Weight in US units

Nominal diameter		ASI	ME
[mm]	[in]	Pressure rating	[lbs]
15	1/2	Class 150	9.92
25	1	Class 150	11.7
40	1 ½	Class 150	16.3
50	2	Class 150	19.0
80	3	Class 150	26.5
100	4	Class 150	30.9
150	6	Class 150	51.8
200	8	Class 150	94.8
250	10	Class 150	161.0
300	12	Class 150	238.1
350	14	Class 150	381.5
400	16	Class 150	447.6
450	18	Class 150	557.9
500	20	Class 150	624.0
600	24	Class 150	888.6

## Measuring tube specification

	inal ieter		Pressure rating					Process connection internal diame		
		EN (DIN)	ASME	AS 2129	AS 4087	JIS	PI	FA.	PT	FE
[mm]	[in]	[bar]	[psi]	[bar]	[bar]	[bar]	[mm]	[in]	[mm]	[in]
15	1/2	PN 40	Class 150	-	-	20K	-	-	15	0.59
25	1	PN 40	Class 150	Table E	-	20K	23	0.91	26	1.02
32	-	PN 40	-	-	-	20K	32	1.26	35	1.38
40	1 ½	PN 40	Class 150	-	-	20K	36	1.42	41	1.61
50	2	PN 40	Class 150	Table E	PN 16	10K	48	1.89	52	2.05
65	-	PN 16	-	-	-	10K	63	2.48	67	2.64
80	3	PN 16	Class 150	-	-	10K	75	2.95	80	3.15
100	4	PN 16	Class 150	-	_	10K	101	3.98	104	4.09
125	-	PN 16	-	-	-	10K	126	4.96	129	5.08
150	6	PN 16	Class 150	-	-	10K	154	6.06	156	6.14
200	8	PN 10	Class 150	-	_	10K	201	7.91	202	7.95

Non dian	inal ieter		Pressure rating					connection	internal (	liameter
		EN (DIN)	ASME	AS 2129	AS 4087	JIS	PI	FA.	PT	FE
[mm]	[in]	[bar]	[psi]	[bar]	[bar]	[bar]	[mm]	[in]	[mm]	[in]
250	10	PN 10	Class 150	-	-	10K	-	-	256	10.1
300	12	PN 10	Class 150	-	-	10K	-	-	306	12.0
350	14	PN 10	Class 150	_	-	10K	_	_	337	13.3
400	16	PN 10	Class 150	-	_	10K	_	-	387	15.2
450	18	PN 10	Class 150	-	-	10K	-	-	432	17.0
500	20	PN 10	Class 150	-	-	10K	-	-	487	19.2
600	24	PN 10	Class 150	-	-	10K	-	-	593	23.3

## Materials

#### Transmitter housing

Housing of Proline 500 – digital transmitter

Order code for "Transmitter housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **D** "Polycarbonate": polycarbonate

Housing of Proline 500 transmitter

Order code for "Transmitter housing":

- Option A "Aluminum coated": aluminum, AlSi10Mg, coated
- Option **L** "Cast, stainless": cast, stainless steel, 1.4409 (CF3M) similar to 316L

#### Window material

Order code for "Transmitter housing":


- Option A "Aluminum, coated": glass
- Option **D** "Polycarbonate": plastic
- Option L "Cast, stainless": glass

## Sensor connection housing

Order code for "Sensor connection housing":

- Option **A** "Aluminum coated": aluminum, AlSi10Mg, coated
- Option L "Cast, stainless": 1.4409 (CF3M) similar to 316L

## Cable entries/cable glands

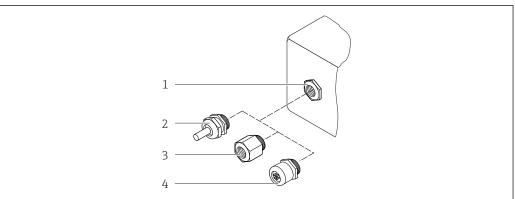

A002835

**■** 54 *Possible cable entries/cable glands* 

- 1 Female thread  $M20 \times 1.5$
- 2 Cable gland  $M20 \times 1.5$
- 3 Adapter for cable entry with internal thread G  $\frac{1}{2}$ " or NPT  $\frac{1}{2}$ "
- 4 Device plugs

Cable entries and adapters	Material
Cable gland M20 × 1.5	Plastic
■ Adapter for cable entry with internal thread G ½" ■ Adapter for cable entry with internal thread NPT ½"	Nickel-plated brass
Only available for certain device versions:  Order code for "Transmitter housing":  Option A "Aluminum, coated"  Option D "Polycarbonate"  Order code for "Sensor connection housing":  Proline 500 – digital: Option A "Aluminum coated" Option L "Cast, stainless"  Proline 500: Option A "Aluminum coated" Option L "Cast, stainless"	
<ul> <li>Adapter for cable entry with internal thread G ½"</li> <li>Adapter for cable entry with internal thread NPT ½"</li> </ul>	Stainless steel, 1.4404 (316L)
Only available for certain device versions:  Order code for "Transmitter housing": Option L "Cast, stainless"  Order code for "Sensor connection housing": Option L "Cast, stainless"	
Adapter for device plug	Stainless steel, 1.4404 (316L)
Device plug for digital communication: Only available for certain device versions → 🗎 27.	
Device plugs	Plug M12 × 1 Socket: Stainless steel, 1.4404 (316L) Contact housing: Polyamide Contacts: Gold-plated brass

#### Device plug

Electrical connection	Material
Plug M12x1	<ul> <li>Socket: Stainless steel, 1.4404 (316L)</li> <li>Contact housing: Polyamide</li> <li>Contacts: Gold-plated brass</li> </ul>


#### Connecting cable

Connecting cable for sensor - Proline 500 - digital transmitter

PVC cable with copper shield

Connecting cable for sensor - Proline 500 transmitter

- Standard cable: PVC cable with copper shield
- Reinforced cable: PVC cable with copper shield and additional steel wire braided jacket

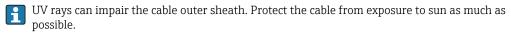

## Sensor housing

- DN 15 to 300 (½ to 12"): coated aluminum AlSi10Mg
- DN 350 to 600 (14 to 24"): carbon steel with protective varnish

#### Measuring tubes

Stainless steel, 1.4301/304/1.4306/304L

For flanges made of carbon with Al/Zn protective coating (DN 15 to 300 ( $\frac{1}{2}$  to 12")) or protective varnish (DN 350 to 600 (14 to 24"))

#### Liner

- PFA
- PTFE

#### **Process connections**

EN 1092-1 (DIN 2501)

Stainless steel, 1.4571 (F316L); carbon steel, E250C 1)/S235JRG2/P245GH

ASME B16.5

Stainless steel, F316L; carbon steel, A105 1)

**IIS B2220** 

Stainless steel, 1.0425 (F316L) 1); carbon steel, A105/A350 LF2

#### AS 2129 Table E

- DN 25 (1"): carbon steel, A105/S235JRG2
- DN 40 (1 ½"): carbon steel, A105/S275JR

AS 4087 PN 16

Carbon steel, A105/S275JR

#### Electrodes

Stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum; titanium

#### Seals

As per DIN EN 1514-1, form IBC

#### Accessories

Protective cover

Stainless steel, 1.4404 (316L)

#### External WLAN antenna

- Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass
- Adapter: Stainless steel and nickel-plated brass
- Cable: Polyethylene
- Plug: Nickel-plated brass
- Angle bracket: Stainless steel

## Ground disks

Stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); tantalum; titanium

#### Fitted electrodes

Measuring electrodes, reference electrodes and electrodes for empty pipe detection:

- Standard: stainless steel, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); tantalum, titanium
- Optional: only platinum measuring electrodes

#### **Process connections**

- ASME B16.5
- JIS B2220
- AS 2129 Table E
- AS 4087 PN 16



#### Surface roughness

Stainless steel electrodes, 1.4435 (F316L); Alloy C22, 2.4602 (UNS N06022); platinum; tantalum; titanium;

 $\leq 0.3$  to 0.5 µm (11.8 to 19.7 µin)

(All data relate to parts in contact with fluid)

Liner with PFA:

 $\leq 0.4 \ \mu m \ (15.7 \ \mu in)$ 

(All data relate to parts in contact with fluid)

<sup>1)</sup> DN 15 to 300 (½ to 12") with Al/Zn protective coating; DN 350 to 600 (14 to 24") with protective varnish

## Operability

#### Operating concept

#### Operator-oriented menu structure for user-specific tasks

- Commissioning
- Operation
- Diagnostics
- Expert level

#### Fast and safe commissioning

- Guided menus ("Make-it-run" wizards) for applications
- Menu guidance with brief descriptions of the individual parameter functions
- Device access via Web server or SmartBlue app → 🗎 105
- WLAN access to the device via mobile handheld terminal, tablet or smart phone

#### Reliable operation

- Operation in local language → 🖺 85
- Uniform operating philosophy applied to device and operating tools
- If replacing electronic modules, transfer the device configuration via the integrated memory (HistoROM backup) which contains the process and measuring device data and the event logbook. No need to reconfigure.

#### Efficient diagnostics increase measurement availability

- Troubleshooting measures can be called up via the device and in the operating tools
- Diverse simulation options, logbook for events that occur and optional line recorder functions

#### Languages

Can be operated in the following languages:

- Via local operation
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese,
   Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish
- Via Web browser
   English, German, French, Spanish, Italian, Dutch, Portuguese, Polish, Russian, Turkish, Chinese,
   Japanese, Korean, Bahasa (Indonesian), Vietnamese, Czech, Swedish
- Via "FieldCare", "DeviceCare" operating tool: English, German, French, Spanish, Italian, Chinese, Japanese


## Local operation

## Via display module

Two display modules are available:

- Order code for "Display; operation", option F "4-line, illuminated, graphic display; touch control"
- Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control + W/I A N"
- i

Information about WLAN interface → 🗎 92

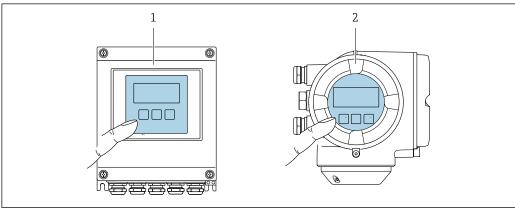

A00282

■ 55 Operation with touch control

- 1 Proline 500 digital
- 2 Proline 500

#### Display elements

- 4-line, illuminated, graphic display
- White background lighting; switches to red in event of device errors
- Format for displaying measured variables and status variables can be individually configured
- Permitted ambient temperature for the display: -20 to +60 °C (-4 to +140 °F)

  The readability of the display may be impaired at temperatures outside the temperature range.


#### Operating elements

- External operation via touch control (3 optical keys) without opening the housing: ±, □, ©
- Operating elements also accessible in the various zones of the hazardous area

## Remote operation

#### Via HART protocol


This communication interface is available in device versions with a HART output.

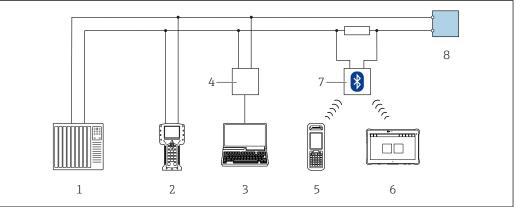

A002874

■ 56 Options for remote operation via HART protocol (active)

- 1 Control system (e.g. PLC)
- 2 Field Communicator 475
- 3 Computer with Web browser (e.g. Internet Explorer) for access to the integrated device Web server or computer with an operating tool (e.g. FieldCare, DeviceCare, AMS Device Manager, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 4 Commubox FXA195 (USB)
- 5 Field Xpert SFX350 or SFX370
- 6 Field Xpert SMT70
- 7 VIATOR Bluetooth modem with connecting cable
- 8 Transmitter

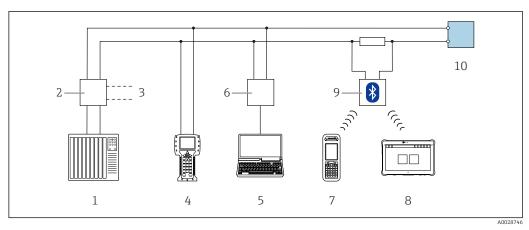


**№** 57 Options for remote operation via HART protocol (passive)

- Control system (e.g. PLC)
- Transmitter power supply unit, e.g. RN221N (with communication resistor)
- 3 Connection for Commubox FXA195 and Field Communicator 475
- Field Communicator 475
- Computer with Web browser (e.g. Internet Explorer) for access to the integrated device Web server or  $computer\ with\ an\ operating\ tool\ (e.g.\ Field Care,\ Device Care,\ AMS\ Device\ Manager,\ SIMATIC\ PDM)\ with\ COM$ DTM "CDI Communication TCP/IP"
- Commubox FXA195 (USB)
- Field Xpert SFX350 or SFX370
- Field Xpert SMT70
- VIATOR Bluetooth modem with connecting cable
- Transmitter

#### Via FOUNDATION Fieldbus network

This communication interface is available in device versions with FOUNDATION Fieldbus.

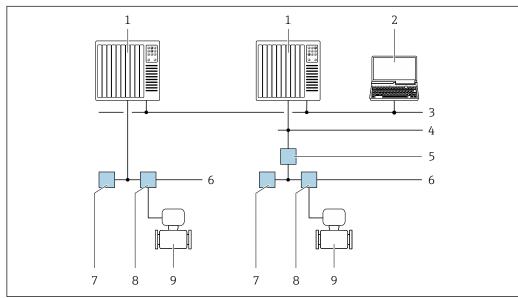


**№** 58 Options for remote operation via FOUNDATION Fieldbus network

- 1 Automation system
- 2 Computer with FOUNDATION Fieldbus network card
- 3 Industry network
- High Speed Ethernet FF-HSE network
- Segment coupler FF-HSE/FF-H1
- 6 FOUNDATION Fieldbus FF-H1 network
- Power supply FF-H1 network
- 8 T-box
- Measuring device

#### Via PROFIBUS DP network

This communication interface is available in device versions with PROFIBUS DP.

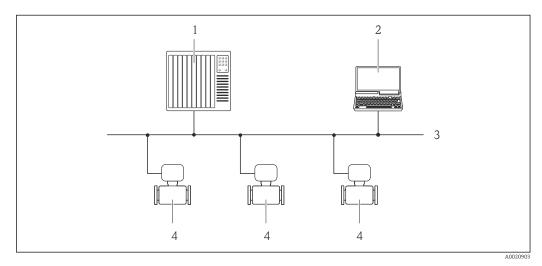


■ 59 Options for remote operation via PROFIBUS DP network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Measuring device

#### Via PROFIBUS PA network

This communication interface is available in device versions with PROFIBUS PA.

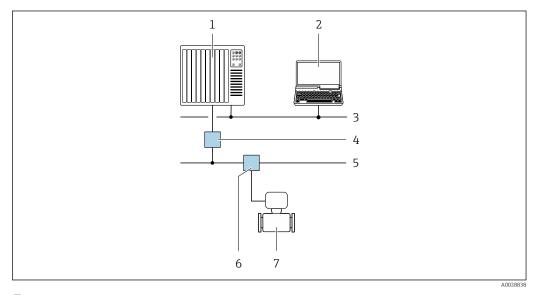


 $\blacksquare$  60 Options for remote operation via PROFIBUS PA network

- 1 Automation system
- 2 Computer with PROFIBUS network card
- 3 PROFIBUS DP network
- 4 Segment coupler PROFIBUS DP/PA
- 5 PROFIBUS PA network
- 6 T-box
- 7 Measuring device

## Via Modbus RS485 protocol

This communication interface is available in device versions with a Modbus-RS485 output.

88

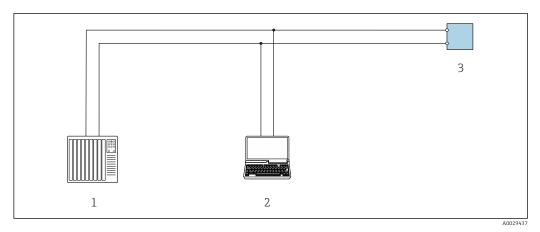


**₽** 61 Options for remote operation via Modbus-RS485 protocol (active)

- Control system (e.g. PLC)
- Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- Transmitter

#### Via EtherNet/IP network

This communication interface is available in device versions with EtherNet/IP.

#### Star topology

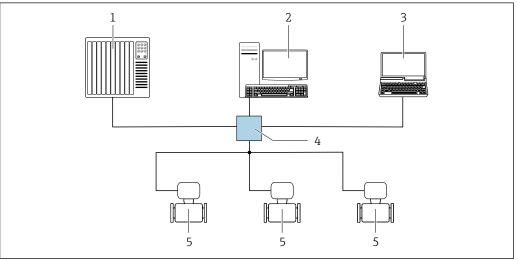


**№** 62 Options for remote operation via EtherNet/IP network: star topology

- Automation system, e.g. "RSLogix" (Rockwell Automation) 1
- Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- Ethernet switch
- Measuring device

#### Ring topology

The device is integrated via the terminal connection for signal transmission (output 1) and the service interface (CDI-RJ45).

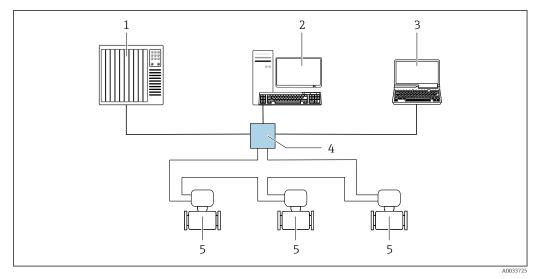


Options for remote operation via EtherNet/IP network: ring topology

- 1 Automation system, e.g. "RSLogix" (Rockwell Automation)
- 2 Workstation for measuring device operation: with Custom Add-On Profile for "RSLogix 5000" (Rockwell Automation) or with Electronic Data Sheet (EDS)
- 3 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare) with COM DTM "CDI Communication TCP/IP"
- 4 Ethernet switch
- 5 Measuring device

## Via PROFINET network

This communication interface is available in device versions with PROFINET.

### Star topology

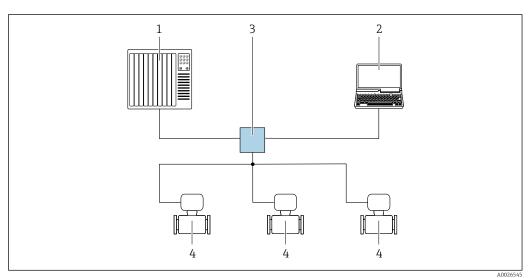


 $\blacksquare$  64 Options for remote operation via PROFINET network: star topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

## Ring topology

This communication interface is available in device versions with PROFINET.

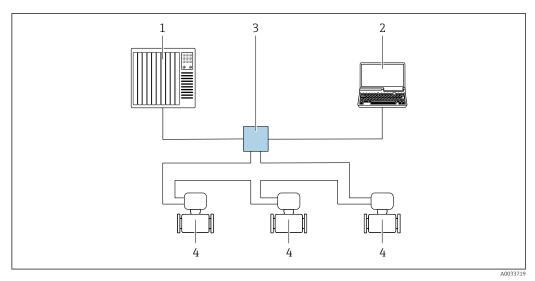

■ 65 Options for remote operation via PROFINET network: ring topology

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Computer with Web browser (e.g. Internet Explorer) for accessing the integrated device Web server or computer with operating tool (e.g. FieldCare, DeviceCare, SIMATIC PDM) with COM DTM "CDI Communication TCP/IP"
- 3 Switch, e.g. Scalance X204 (Siemens)
- 4 Measuring device

#### Service interface


#### Via service interface (CDI-RJ45)

A point-to-point connection can be established to configure the device onsite. With the housing open, the connection is established directly via the service interface (CDI-RJ45) of the device.

An adapter for RJ45 and the M12 connector is optionally available:
Order code for "Accessories", option **NB**: "Adapter RJ45 M12 (service interface)"

The adapter connects the service interface (CDI-RJ45) to an M12 connector mounted in the cable entry. Therefore the connection to the service interface can be established via an M12 connector without opening the device.


Proline 500 – digital transmitter

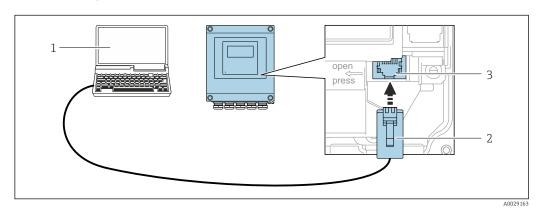

■ 66 Connection via service interface (CDI-RJ45)

- 1 Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- 2 Standard Ethernet connecting cable with RJ45 connector
- 3 Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

#### Proline 500 transmitter

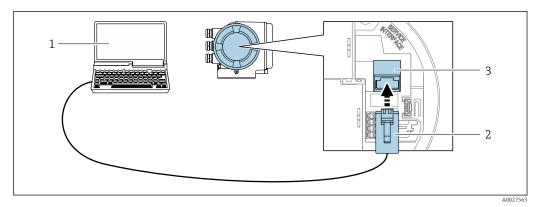


Connection via service interface (CDI-RJ45)

- Computer with Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with "FieldCare", "DeviceCare" operating tool with COM DTM "CDI Communication TCP/IP" or Modbus DTM
- Standard Ethernet connecting cable with RJ45 connector
- Service interface (CDI-RJ45) of the measuring device with access to the integrated Web server

#### Via WLAN interface

The optional WLAN interface is available on the following device version: Order code for "Display; operation", option G "4-line, illuminated, graphic display; touch control +

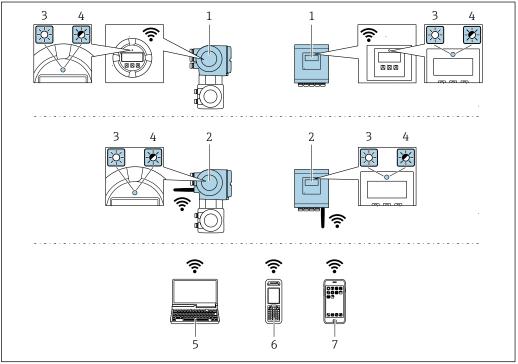


- Transmitter with integrated WLAN antenna 1
- Transmitter with external WLAN antenna 2
- 3 LED lit constantly: WLAN reception is enabled on measuring device
- LED flashing: WLAN connection established between operating unit and measuring device
- Computer with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or with operating tool (e.g. FieldCare, DeviceCare)
- Mobile handheld terminal with WLAN interface and Web browser (e.g. Microsoft Internet Explorer, Microsoft Edge) for accessing the integrated device Web server or operating tool (e.g. FieldCare, DeviceCare)
- Smart phone or tablet (e.g. Field Xpert SMT70)

Function	WLAN: IEEE 802.11 b/g (2.4 GHz)  ■ Access point with DHCP server (default setting)  ■ Network
Encryption	WPA2-PSK AES-128 (in accordance with IEEE 802.11i)
Configurable WLAN channels	1 to 11
Degree of protection	IP67
Available antennas	<ul> <li>Internal antenna</li> <li>External antenna (optional)         In the event of poor transmission/reception conditions at the place of installation.         Available as an accessory → □ 103.     </li> <li>Only one antenna active in each case!</li> </ul>
Max. range	50 m (164 ft)
Materials: External WLAN antenna	<ul> <li>Antenna: ASA plastic (acrylic ester-styrene-acrylonitrile) and nickel-plated brass</li> <li>Adapter: Stainless steel and nickel-plated brass</li> <li>Cable: Polyethylene</li> <li>Connector: Nickel-plated brass</li> <li>Angle bracket: Stainless steel</li> </ul>

#### Network integration

With the optional OPC-UA-Server application package, the device can be integrated into an Ethernet network via the service interface (CDI-RJ45 and WLAN) and communicate with OPC-UA clients. If the device is used in this way, IT security must be considered.

For permanent access to device data and for device configuration via the Web server, the device is incorporated directly in a network via the service interface (CDI-RJ45). In this way, the device can be accessed any time from the control station. The measured values are processed separately via the inputs and outputs through the automation system.

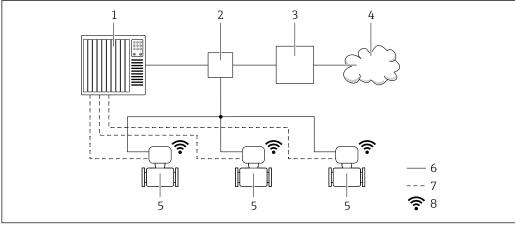

A0033618

- 1 Automation system, e.g. Simatic S7 (Siemens)
- 2 Ethernet switch
- 3 Edge Gateway
- 4 Cloud
- 5 Measuring device
- 6 Ethernet network
- 7 Measured values via inputs and outputs
- 8 Optional WLAN interface
- The optional WLAN interface is available on the following device version:
  Order code for "Display; operation", option **G** "4-line, illuminated, graphic display; touch control +
- Special Documentation for the OPC-UA-Server application package  $\rightarrow \, \stackrel{ riangle}{ riangle} \, 107.$

#### Supported operating tools

Different operating tools can be used for local or remote access to the measuring device. Depending on the operating tool used, access is possible with different operating units and via a variety of interfaces.

Supported operating tools	Operating unit	Interface	Additional information
Web browser	Notebook, PC or tablet with Web browser	<ul> <li>CDI-RJ45 service interface</li> <li>WLAN interface</li> <li>Ethernet-based fieldbus (EtherNet/IP, PROFINET)</li> </ul>	Special Documentation for device
DeviceCare SFE100	Notebook, PC or tablet with Microsoft Windows system	<ul><li>CDI-RJ45 service interface</li><li>WLAN interface</li><li>Fieldbus protocol</li></ul>	→ 🖺 105
FieldCare SFE500	Notebook, PC or tablet with Microsoft Windows system	<ul> <li>CDI-RJ45 service interface</li> <li>WLAN interface</li> <li>Fieldbus protocol</li> </ul>	→ 🖺 105
Device Xpert	Field Xpert SFX 100/350/370	HART and FOUNDATION Fieldbus fieldbus protocol	Operating Instructions BA01202S Device description files: Use update function of handheld terminal

- Other operating tools based on FDT technology with a device driver such as DTM/iDTM or DD/EDD can be used for device operation. These operating tools are available from the individual manufacturers. Integration into the following operating tools, among others, is supported:
  - FactoryTalk AssetCentre (FTAC) by Rockwell Automation → www.rockwellautomation.com
  - Process Device Manager (PDM) by Siemens → www.siemens.com
  - Asset Management Solutions (AMS) by Emerson → www.emersonprocess.com
  - FieldCommunicator 375/475 by Emerson → www.emersonprocess.com
  - Field Device Manager (FDM) by Honeywell → www.honeywellprocess.com
  - FieldMate by Yokogawa → www.yokogawa.com
  - PACTWare → www.pactware.com

The associated device description files are available at: www.endress.com → Downloads

#### Web server

Thanks to the integrated Web server, the device can be operated and configured via a Web browser and via a service interface (CDI-RJ45) or via a WLAN interface. The structure of the operating menu is the same as for the local display. In addition to the measured values, status information on the device is also displayed and allows the user to monitor the status of the device. Furthermore the device data can be managed and the network parameters can be configured.

A device that has a WLAN interface (can be ordered as an option) is required for the WLAN connection: order code for "Display; operation", option G "4-line, illuminated; touch control + WLAN". The device acts as an Access Point and enables communication by computer or a mobile handheld terminal.

## Supported functions

Data exchange between the operating unit (such as a notebook for example) and the measuring

- Upload the configuration from the measuring device (XML format, configuration backup)
- Save the configuration to the measuring device (XML format, restore configuration)
- Export event list (.csv file)
- Export parameter settings (.csv file or PDF file, document the measuring point configuration)
- Export the Heartbeat verification log (PDF file, only available with the "Heartbeat Verification" application package)

- Flash firmware version for device firmware upgrade, for instance
- Download driver for system integration



#### HistoROM data management

The measuring device features HistoROM data management. HistoROM data management comprises both the storage and import/export of key device and process data, making operation and servicing far more reliable, secure and efficient.



When the device is delivered, the factory settings of the configuration data are stored as a backup in the device memory. This memory can be overwritten with an updated data record, for example after commissioning.

#### Additional information on the data storage concept

There are different types of data storage units in which device data are stored and used by the device:

	Device memory	T-DAT	S-DAT
Available data	<ul> <li>Event logbook such as diagnostic events for example</li> <li>Parameter data record backup</li> <li>Device firmware package</li> <li>Driver for system integration for exporting via Web server, e.g:         <ul> <li>GSD for PROFIBUS DP</li> <li>GSD for PROFIBUS PA</li> <li>GSDML for PROFINET</li> <li>EDS for EtherNet/IP</li> <li>DD for FOUNDATION Fieldbus</li> </ul> </li> </ul>	Measured value logging ("Extended HistoROM" order option)  Current parameter data record (used by firmware at run time)  Peakhold indicator (min/max values)  Totalizer values	<ul> <li>Sensor data: nominal diameter etc.</li> <li>Serial number</li> <li>Calibration data</li> <li>Device configuration (e.g. SW options, fixed I/O or multi I/O)</li> </ul>
Storage location	Fixed on the user interface board in the connection compartment	Attachable to the user interface board in the connection compartment	In the sensor plug in the transmitter neck part

## Data backup

#### **Automatic**

- The most important device data (sensor and transmitter) are automatically saved in the DAT modules
- If the transmitter or measuring device is replaced: once the T-DAT containing the previous device data has been exchanged, the new measuring device is ready for operation again immediately without any errors
- If the sensor is replaced: once the sensor has been replaced, new sensor data are transferred from the S-DAT in the measuring device and the measuring device is ready for operation again immediately without any errors
- If exchanging the electronics module (e.g. I/O electronics module): Once the electronics module has been replaced, the software of the module is compared against the current device firmware. The module software is upgraded or downgraded where necessary. The electronics module is available for use immediately afterwards and no compatibility problems occur.

#### Manua

Additional parameter data record (complete parameter settings) in the integrated device memory HistoROM backup for:

- Data backup function
   Backup and subsequent restoration of a device configuration in the device memory HistoROM backup
- Data comparison function
   Comparison of the current device configuration with the device configuration saved in the device memory HistoROM backup

#### Data transfer

#### Manual

- Transfer of a device configuration to another device using the export function of the specific operating tool, e.g. with FieldCare, DeviceCare or Web server: to duplicate the configuration or to store in an archive (e.g. for backup purposes)
- Transmission of the drivers for system integration via Web server, e.g.:
  - GSD for PROFIBUS DP
  - GSD for PROFIBUS PA
  - GSDML for PROFINET
  - EDS for EtherNet/IP
  - DD for FOUNDATION Fieldbus

#### Event list

#### **Automatic**

- Chronological display of up to 20 event messages in the events list
- If the Extended HistoROM application package (order option) is enabled: up to 100 event messages are displayed in the events list along with a time stamp, plain text description and remedial measures
- The events list can be exported and displayed via a variety of interfaces and operating tools e.g. DeviceCare, FieldCare or Web server

## Data logging

#### Manual

If the **Extended HistoROM** application package (order option) is enabled:

- Record up to 1000 measured values via 1 to 4 channels
- User configurable recording interval
- Record up to 250 measured values via each of the 4 memory channels
- Export the measured value log via a variety of interfaces and operating tools e.g. FieldCare, DeviceCare or web server

# Certificates and approvals



Currently available certificates and approvals can be called up via the product configurator.

#### CE mark

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

#### C-Tick symbol

The measuring system meets the EMC requirements of the "Australian Communications and Media Authority (ACMA)".

#### Ex approval

The measuring device is certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.



The separate Ex documentation (XA) containing all the relevant explosion protection data is available from your Endress+Hauser sales center.

## Proline 500 - digital

ATEX, IECEX

Currently, the following versions for use in hazardous areas are available:

#### Ex ia, Ex db

	Transmitter	Sensor		
Category	Type of protection	Category	Type of protection	
II(1)G	[Ex ia] IIC	II2G	Ex db ia IIC T6T1 Gb	
II3(1)G	Ex ec [ia Ga] IIC T5T4 Gc	II2G	Ex db ia IIC T6T1 Gb	

## Ex tb

Transmitter		Sensor	
Category	Type of protection	Category	Type of protection
II(1)D	[Ex ia] IIIC	II2D	Ex ia tb IIIC T** °C Db

## Non-Ex, Ex ec

Transmitter		Sensor	
Category	Type of protection	Category	Type of protection
Non-Ex	Non-Ex	II3G	Ex ec ic IIC T5T1 Gc
II3G	Ex ec IIC T5T4 Gc	II3G	Ex ec ic IIC T5T1 Gc

## cCSAus

Currently, the following versions for use in hazardous areas are available:

## IS (Ex nA, Ex i)

Transmitter	Sensor
Class I Division 2 Groups A - D	Class I, II, III Division 1 Groups A-G

## NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Groups A - D	

## Ex nA, Ex i

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA [ia Ga] IIC T5T4 Gb	Class I, Zone 1 AEx/ Ex d ia IIC T6T1 Gb

### Ex nA

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/Ex nA ic IIC T5T1 Gc

#### Ex tb

Transmitter	Sensor
[AEx / Ex ia ] IIIC	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

## Proline 500

## ATEX, IECEx

Currently, the following versions for use in hazardous areas are available:

#### Ex db eb

Category	Type of protection	
	Transmitter	Sensor
II2G	Ex db eb ia IIC T6T4 Gb	Ex eb ia IIC T6T1 Gb

## Ex db

Category	Type of protection	
	Transmitter	Sensor
II2G	Ex db ia IIC T6T4 Gb	Ex eb ia IIC T6T1 Gb

## Ex tb

Category	Type of protection	
	Transmitter	Sensor
II2G	Ex tb IIIC T85°C Db	Ex ia tb IIIC T** °C Db

## Ех ес

Category	Type of protection	
	Transmitter	Sensor
II3G	Ex ec IIC T5T4 Gc	Ex ec ic IIC T5T1 Gc

## cCSAus

Currently, the following versions for use in hazardous areas are available:

## IS (Ex i), XP (Ex d)

Transmitter	Sensor
Class I, III, III Division 1 (	roups A-G

## NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Groups A - D	

## Ex de

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex de ia IIC T6T4 Gb	Class I, Zone 1 AEx/Ex e ia IIC T6T1 Gb

## Ex d

Transmitter	Sensor	
Class I, Zone 1 AEx/ Ex d ia IIC T6T4 Gb	Class I, Zone 1 AEx/Ex e ia IIC T6T1 Gb	

## Ex nA

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/Ex nA ic IIC T5T1 Gc

#### Ex tb

Transmitter	Sensor
Zone 21 AEx/ Ex tb IIIC T85 °C Db	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

#### cCSAus

Currently, the following versions for use in hazardous areas are available:

## IS (Ex i), XP (Ex d)

Transmitter		Sensor
Class I, III, III Division 1 Groups A-G		

#### NI (Ex nA)

Transmitter	Sensor
Class I Division 2 Groups A - D	

#### Ex de

Transmitter	Sensor	
Class I, Zone 1 AEx/ Ex de ia IIC T6T4 Gb	Class I, Zone 1 AEx/Ex e ia IIC T6T1 Gb	

#### Ex d

Transmitter	Sensor
Class I, Zone 1 AEx/ Ex d ia IIC T6T4 Gb	Class I, Zone 1 AEx/Ex e ia IIC T6T1 Gb

#### Ex nA

Transmitter	Sensor
Class I, Zone 2 AEx/ Ex nA IIC T5T4 Gc	Class I, Zone 2 AEx/Ex nA ic IIC T5T1 Gc

## Ex tb

Transmitter	Sensor
Zone 21 AEx/ Ex tb IIIC T85 °C Db	Zone 21 AEx/ Ex ia tb IIIC T** °C Db

## Pharmaceutical compatibility

- FDA
- USP Class VI
- TSE/BSE Certificate of Suitability

## **Functional safety**

The measuring device can be used for flow monitoring systems (min., max., range) up to SIL 2 (single-channel architecture; order code for "Additional approval", option LA) and SIL 3 (multichannel architecture with homogeneous redundancy) and is independently evaluated and certified by the TÜV in accordance with IEC 61508.

The following types of monitoring in safety equipment are possible: Volume flow

Functional Safety Manual with information on the SIL device  $\rightarrow$  106

#### HART certification

#### HART interface

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified according to HART 7
- The device can also be operated with certified devices of other manufacturers (interoperability)

# FOUNDATION Fieldbus certification

#### **FOUNDATION Fieldbus interface**

The measuring device is certified and registered by the FieldComm Group. The measuring system meets all the requirements of the following specifications:

- Certified in accordance with FOUNDATION Fieldbus H1
- Interoperability Test Kit (ITK), revision version 6.2.0 (certificate available on request)
- Physical Layer Conformance Test
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### **Certification PROFIBUS**

#### PROFIBUS interface

The measuring device is certified and registered by the PNO (PROFIBUS User Organization Organization). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with PROFIBUS PA Profile 3.02
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### EtherNet/IP certification

The measuring device is certified and registered by the ODVA (Open Device Vendor Association). The measuring system meets all the requirements of the following specifications:

- Certified in accordance with the ODVA Conformance Test
- EtherNet/IP Performance Test
- EtherNet/IP PlugFest compliance
- The device can also be operated with certified devices of other manufacturers (interoperability)

#### **Certification PROFINET**

#### **PROFINET** interface

The measuring device is certified and registered by the PNO (PROFIBUS User Organization Organization). The measuring system meets all the requirements of the following specifications:

- Certified according to:
  - Test specification for PROFINET devices
  - PROFINET Security Level 2 Netload Class
- The device can also be operated with certified devices of other manufacturers (interoperability)

### Radio approval

The measuring device has radio approval.



For detailed information on the radio approval, see the Special Documentation

# Pressure Equipment Directive

The devices can be ordered with or without a PED approval. If a device with a PED approval is required, this must be explicitly stated in the order. For devices with nominal diameters less than or equal to DN 25 (1"), this is neither possible nor necessary.

- With the identification PED/G1/x (x = category) on the sensor nameplate, Endress+Hauser confirms conformity with the "Essential Safety Requirements" specified in Appendix I of the Pressure Equipment Directive 2014/68/EU.
- Devices bearing this marking (PED) are suitable for the following types of medium:
   Media in Group 1 and 2 with a vapor pressure greater than, or smaller and equal to 0.5 bar (7.3 psi)
- Devices not bearing this marking (PED) are designed and manufactured according to good engineering practice. They meet the requirements of Article 4 paragraph 3 of the Pressure Equipment Directive 2014/68/EU. The range of application is indicated in tables 6 to 9 in Annex II of the Pressure Equipment Directive 2014/68/EU.

# Measuring instrument approval

The measuring device is qualified to OIML R117 and has an OIML Certificate of Conformity (optional).

#### Additional certification

#### **PWIS-free**

PWIS = paint-wetting impairment substances

Order code for "Service":

- Option HC: PWIS-free (version A)
- Option **HD**: PWIS-free (version B)
- Option **HE**: PWIS-free (version C)



For more information on PWIS-free certification, see "Test specification" document TS01028D

#### Other standards and quidelines

- - Degrees of protection provided by enclosures (IP code)
- EN 61010-1

Safety requirements for electrical equipment for measurement, control and laboratory use general requirements

■ IEC/EN 61326

Emission in accordance with Class A requirements. Electromagnetic compatibility (EMC requirements).

■ NAMUR NE 21

Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment

■ NAMUR NE 32

Data retention in the event of a power failure in field and control instruments with microprocessors

■ NAMUR NE 43

Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.

NAMUR NE 53

Software of field devices and signal-processing devices with digital electronics

■ NAMUR NE 105

Specifications for integrating fieldbus devices in engineering tools for field devices

■ NAMUR NE 107

Self-monitoring and diagnosis of field devices

NAMUR NE 131

Requirements for field devices for standard applications

# Ordering information

Detailed ordering information is available from the following sources:

- In the Product Configurator on the Endress+Hauser website: www.endress.com -> Click "Corporate" -> Select your country -> Click "Products" -> Select the product using the filters and search field -> Open product page -> The "Configure" button to the right of the product image opens the Product Configurator.
- From your Endress+Hauser Sales Center: www.addresses.endress.com



## Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

# Application packages

Many different application packages are available to enhance the functionality of the device. Such packages might be needed to address safety aspects or specific application requirements.

The application packages can be ordered with the device or subsequently from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

Diagnostics functions	Package	Description
	Extended HistoROM	Comprises extended functions concerning the event log and the activation of the measured value memory.
		Event log: Memory volume is extended from 20 message entries (standard version) to up to 100 entries.
		<ul> <li>Data logging (line recorder):</li> <li>Memory capacity for up to 1000 measured values is activated.</li> <li>250 measured values can be output via each of the 4 memory channels. The recording interval can be defined and configured by the user.</li> <li>Measured value logs can be accessed via the local display or operating tool e.g. FieldCare, DeviceCare or Web server.</li> </ul>

## **Heartbeat Technology**

Package	Description					
Heartbeat Verification +Monitoring	Heartbeat Verification Meets the requirement for traceable verification to DIN ISO 9001:2008 Chapter 7.6 a) "Control of monitoring and measuring equipment".  Functional testing in the installed state without interrupting the process.  Traceable verification results on request, including a report.  Simple testing process via local operation or other operating interfaces.  Clear measuring point assessment (pass/fail) with high test coverage within the framework of manufacturer specifications.  Extension of calibration intervals according to operator's risk assessment.					
	Heartbeat Monitoring Continuously supplies data, which are characteristic of the measuring principle, to an external condition monitoring system for the purpose of preventive maintenance or process analysis. These data enable the operator to:  Draw conclusions - using these data and other information - about the impact process influences (such as corrosion, abrasion, buildup etc.) have on the measuring performance over time.  Schedule servicing in time.  Monitor the process or product quality, e.g. gas pockets.					

## Cleaning

Package	Description
Electrode cleaning circuit (ECC)	The electrode cleaning circuit (ECC) function has been developed to have a solution for applications where magnetite (Fe $_3$ O $_4$ ) deposits frequently occur (e.g. hot water). Since magnetite is highly conductive this build up leads to measuring errors and ultimately to the loss of signal. The application package is designed to AVOID build up of highly conductive matter and thin layers (typical of magnetite).

#### **OPC-UA** server

Package	Description
OPC-UA-Server	The application package provides the user with an integrated OPC-UA server for comprehensive instrument services for IoT and SCADA applications.
	Special Documentation for the "OPC-UA-Server" application package $\rightarrow$ $ $

## Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

## Device-specific accessories

## For the transmitter

Accessories	Description						
Transmitter Proline 500 – digital Proline 500	Transmitter for replacement or storage. Use the order code to define the following specifications:  Approvals  Output  Input  Display/operation  Housing  Software  Proline 500 – digital transmitter: Order code: 5X5BXX-XXXXXXXXXA  Proline 500 transmitter: Order code: 5X5BXX-XXXXXXXXXX						
	Proline 500 transmitter for replacement: It is essential to specify the serial number of the current transmitter when ordering. Based on the serial number, the device-specific data (e.g., calibration factors) of the replacement device can be used for the new transmitter.  Proline 500 – digital transmitter: Installation Instructions EA01151 Proline 500 transmitter: Installation Instructions EA01152						
External WLAN antenna	External WLAN antenna with 1.5 m (59.1 in) connecting cable and two angle brackets. Order code for "Enclosed accessories", option P8 "Wireless antenna wide area".  ■ The external WLAN antenna is not suitable for use in hygienic applications.  ■ Further information on the WLAN interface → ■ 92.  Order number: 71351317  Installation Instructions EA01238D						
Pipe mounting set	Pipe mounting set for transmitter.  Proline 500 – digital transmitter Order number: 71346427  Proline 500 transmitter Order number: 71346428						
Protective cover Transmitter Proline 500 – digital Proline 500	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.  Proline 500 – digital transmitter Order number: 71343504 Proline 500 transmitter Order number: 71343505 Installation Instructions EA01160						
Display guard Proline 500 – digital	Is used to protect the measuring device from the effects of the weather: e.g. rainwater, excess heating from direct sunlight.  Order number: 71228792  For details, see Installation Instructions EA01161						
Ground cable	Set, consisting of two ground cables for potential equalization.						

Connecting cable Proline 500 – digital Sensor – Transmitter	The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection) or as an accessory (order number DK5012).			
	The following cable lengths are available: order code for "Cable, sensor connection"  Option B: 20 m (65 ft)  Option E: User configurable up to max. 50 m  Option F: User configurable up to max. 165 ft			
	Maximum possible cable length for a Proline 500 – digital connecting cable: 300 m (1000 ft)			
Connecting cable Proline 500 Sensor – Transmitter	The connecting cable can be ordered directly with the measuring device (order code for "Cable, sensor connection) or as an accessory (order number DK5012).			
	The following cable lengths are available: order code for "Cable, sensor connection"  Option 1: 5 m (16 ft)  Option 2: 10 m (32 ft)  Option 3: 20 m (65 ft)  Option 4: User configurable cable length (m)  Option 5: User configurable cable length (ft)			
	Reinforced connecting cable with an additional, reinforcing metal braid:  Option 6: User configurable cable length (m)  Option 7: User configurable cable length (ft)			
	Possible cable length for a Proline 500 connecting cable: depends on the medium conductivity, max. 200 m (660 ft)			

## For the sensor

Accessories	Description
Ground disks	Are used to ground the medium in lined measuring tubes to ensure proper measurement.
	For details, see Installation Instructions EA00070D

# Communication-specific accessories

Accessories	Description					
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB interface.  Technical Information TI00404F					
HART Loop Converter HMX50	Is used to evaluate and convert dynamic HART process variables to analog current signals or limit values.  Technical Information TI00429F Operating Instructions BA00371F					
Fieldgate FXA320	Gateway for the remote monitoring of connected 4-20 mA measuring devices web browser.  Technical Information TI00025S Operating Instructions BA00053S					
Fieldgate FXA520	Gateway for the remote diagnostics and remote configuration of connected HART measuring devices via a Web browser.  Technical Information TI00025S Operating Instructions BA00051S					
Field Xpert SFX350	Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATIO Fieldbus devices and can be used in non-hazardous areas.  Operating Instructions BA01202S					

Field Xpert SFX370	Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATIC Fieldbus devices and can be used in the non-hazardous area and in the hazardou area.  Operating Instructions BA01202S			
Field Xpert SMT70	The Field Xpert SMT70 tablet PC for device configuration enables mobile plant asset management in hazardous and non-hazardous areas. It is suitable for commissioning and maintenance staff to manage field instruments with a digital communication interface and to record progress.  This tablet PC is designed as an all-in-one solution with a preinstalled driver library and is an easy-to-use, touch-sensitive tool which can be used to manage field instruments throughout their entire life cycle.			
	<ul> <li>Technical Information TI01342S</li> <li>Operating Instructions BA01709S</li> <li>Product page: www.endress.com/smt70</li> </ul>			

## Service-specific accessories

Accessories	Description
Applicator	Software for selecting and sizing Endress+Hauser measuring devices:  Choice of measuring devices for industrial requirements  Calculation of all the necessary data for identifying the optimum flowmeter: e.g. nominal diameter, pressure loss, flow velocity and accuracy.  Graphic illustration of the calculation results  Determination of the partial order code, administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.
	Applicator is available:  • Via the Internet: <a href="https://portal.endress.com/webapp/applicator">https://portal.endress.com/webapp/applicator</a> • As a downloadable DVD for local PC installation.
W@M	W@M Life Cycle Management Improved productivity with information at your fingertips. Data relevant to a plant and its components is generated from the first stages of planning and during the asset's complete life cycle.  W@M Life Cycle Management is an open and flexible information platform with online and on-site tools. Instant access for your staff to current, in-depth data shortens your plant's engineering time, speeds up procurement processes and increases plant uptime.  Combined with the right services, W@M Life Cycle Management boosts productivity in every phase. For more information, visit www.endress.com/lifecyclemanagement
FieldCare	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  Operating Instructions BA00027S and BA00059S
DeviceCare	Tool to connect and configure Endress+Hauser field devices.  Innovation brochure IN01047S

## System components

Accessories	Description					
Memograph M graphic data manager	The Memograph M graphic data manager provides information on all the relevant measured variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on a SD card or USB stick.					
	<ul><li>Technical Information TI00133R</li><li>Operating Instructions BA00247R</li></ul>					

# Supplementary documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- W@M Device Viewer (www.endress.com/deviceviewer): Enter the serial number from nameplate
- Endress+Hauser Operations App: Enter the serial number from the nameplate or scan the 2D matrix code (QR code) on the nameplate

#### Standard documentation

## **Brief Operating Instructions**

*Brief Operating Instructions for the sensor* 

Measuring device	Documentation code
Proline Promag P	KA01290D

#### *Brief Operating Instructions for transmitter*

	Documentation code						
Measuring device	HART	FOUNDATION Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Proline 500 – digital	KA01313D	KA01292D	KA01231D	KA01388D	KA01317D	KA01343D	KA01349D
Proline 500	KA01312D	KA01293D		KA01387D	KA01316D	KA01342D	KA01348D

#### **Operating Instructions**

Measuring device	Documentation code						
	HART	FOUNDATION Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Promag P 500	BA01399D	BA01480D	BA01405D	BA01867D	BA01402D	BA01721D	BA01724D

#### **Description of Device Parameters**

Measuring device	Documentation code						
	HART	FOUNDATION Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	EtherNet/IP	PROFINET
Promag 500	GP01054D	GP01099D	GP01056D	GP01136D	GP01055D	GP01118D	GP01119D

## Device-dependent additional documentation

#### Safety instructions

Safety instructions for electrical equipment for hazardous areas.

Contents	Documentation code
ATEX/IECEx Ex i	XA01522D
ATEX/IECEx Ex ec	XA01523D
cCSAus IS	XA01524D
cCSAus Ex e ia/Ex d ia	XA01525D
cCSAus Ex nA	XA01526D
INMETRO Ex i	XA01527D
INMETRO Ex ec	XA01528D
NEPSI Ex i	XA01529D
NEPSI Ex nA	XA01530D

#### **Special Documentation**

Contents	Documentation code
Information on the Pressure Equipment Directive	SD01614D
Functional Safety Manual	SD01741D
Radio approvals for WLAN interface for A309/A310 display module	SD01793D
OPC-UA Server 1)	SD02044D

1) This Special Documentation is only available for device versions with a HART output.

Contents	Documentation code						
	HART	FOUNDATION Fieldbus	PROFIBUS PA	PROFIBUS DP	Modbus RS485	PROFINET	EtherNet/IP
Heartbeat Technology	SD01641D	SD01745D	SD01747D	SD02207D	SD01746D	SD01987D	SD01981D
Web server	SD01658D	SD01661D	SD01660D	SD02236D	SD01659D	SD01979D	SD01978D

#### **Installation Instructions**

Contents	Comment
Installation instructions for spare part sets and accessories	Documentation code: specified for each individual accessory .

# Registered trademarks

#### **HART®**

Registered trademark of the FieldComm Group, Austin, Texas, USA

#### **PROFIBUS®**

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

## FOUNDATION™ Fieldbus

Registration-pending trademark of the FieldComm Group, Austin, Texas, USA

#### Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

## EtherNet/IP™

Trademark of ODVA, Inc.

#### **PROFINET®**

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany



